



AMERICA'S BEST VALUE IN SWING SETS.™

Parrot Island Playcenter Loft Manual

Version 3.17



Tools Needed for Assembly

Tape Measure	24" Level	Angle Square
Phillips Screw Driver	3/8" Cordless Drill or Electric Drill	3/8" Drive Ratchet or Electric Impact Gun
Claw Hammer or Rubber Mallet	Pliers or Vise Grips	7/16" Deep Well Socket
9/16" Deep Well Socket	3/4" Deep Well Socket	1/8", 1/4", and 9/16" Drill Bits
Phillips Head Screw Bits	An Adult with two Adult Helpers	

Please familiarize yourself with the install manual, parts/components and general construction process of your new swing set before getting started. Approximate assembly time: 6 to 8 hours. 6 foot unobstructed safety perimeter around swing set recommended.

Choosing A Location For Your Playset

When choosing a location for your swing set, always keep your child or children's safety in mind. Here are some recommendations to help you locate and install a safe play area.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor; 3 occupants who have a combined weight of 525 pounds on the swing area; for a total Unit capacity of 5 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- The swing set should be located on level ground. The stationary components such as ladders and slides are required to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree, overhanging branches, electrical wires, clotheslines, etc. Any swinging equipment is also required to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. The swing set should be located a safe distance from any water hazards, such as a lake, river, bayou, swimming pool, etc.
- Do not install this residential swing set in a commercial setting. This swing set is not manufactured for commercial usage and will void all warranties. Tree Frogs Wooden Swing Set Factory is not responsible for any damages or injuries resulting from this swing set being used in a commercial setting.
- Never install this swing set indoors; or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.
- The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your swing set. The CPSC's Consumer Information Sheet for Playground Surfacing Materials is on the next page. A resilient surface, should be installed after the swing set has been completely assembled according to these instructions. The swing set must rest on solid ground. Please note that this swing set has a maximum fall height of 7'.

Maintaining Your Swing Set

Here are some maintenance tips required to insure safe play on your swing set for years of fun.

- At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for sign of deterioration and replace if necessary.
- On a yearly basis, we recommend that you coat your swing set with a sealant or preservative. You may also want to spot sand any areas prior to sealing.

** Special note: Although we recommend that you reseal your swing set annually, you may have to touch up the high traffic areas and/or areas that have a high exposure to direct sunlight.**

- Be sure that the sealant you select is non-toxic and child safe. Your local Tree Frogs Wooden Swing Set Factory dealer may offer a complete power wash and reseal and maintenance program.
- Do not use line trimmers or "weed eaters" around your swing set. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.
- Remove plastic swing seats and take in doors or do not use when temperature drops below 0°F.

Weight Limits for Tree Frogs Swing Sets

Fort Platform: 800 Lbs. Total Weight

Swing Belts: 175 Lbs.

Trapeze: 125 Lbs.

Full Bucket Swing: 50 Lbs.

Toddler Bucket Swing: 50 Lbs.

Tire Swing: 125 Lbs. Total Weight

Rope Ladder: 75 Lbs.

Rock Wall: 150 Lbs.

All Slides: 125 Lbs.

Tree Frogs recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the swing set and/or injury to the users.

Please keep this install manual for future reference.

To insure SAFE PLAY adults must teach children:

- Not to walk close to, in front of, behind, or between moving items.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the swing set in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to stand in the swing seats.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the swing set any item that is not specifically designed for use with the equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and chains. These may become strangulation hazards.
- To hold on to swings and climbers with both hands.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the swing set.

To also insure SAFE PLAY adults must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitted shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose fitting clothing, neckties, and any clothing with a drawstring. Serious injury could result should any part of the children's clothing become entangled in the swing set.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.

IMPORTANT - PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or "cracks" in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty.

Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please contact the Tree Frogs Swing Set Dealer that you purchased your swing set from.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

Pre-Assembly Hints

- Depending on your experience, assembly of our play sets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass. This will save time and familiarize you with all the different pieces in the hardware bag.

****Important note:** Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.**

- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- All 1/4" and 3/8" lag bolts must have pre-drilled holes 1-1/2" to 2" deep. Use a 1/8" drill bit for the 1/4" lag bolts and 1/4" drill bit for 3/8" lag bolts. Use pre-drilled holes in facias as a reference for placing lag bolt pilot holes.
- If a board lifts or rises causing a gap between boards when running in lag bolts or screws, back out the screw or lag bolt and press or apply pressure (but not enough to crack or break board) while re-running in the lag bolt or screw in the same hole.
- Do not over tighten bolts, lag bolts or screws. You can damage boards, break hardware, and/or strip out the hardware.
- When using hammer do not beat on the hardware, but gently tap it in. Never beat on the wood as it will leave marks.

Leveling Your Swing Set During Assembly

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.

**** Important:** if you require a channel depth of more than 6", then we recommend you have your play set area professionally graded before completing assembly. **

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. However, it should be recognized that some injuries from falls will occur no matter what playground surfacing material is used.

Playground equipment should never be placed on hard surfaces such as concrete or asphalt. Grass may appear to be acceptable, but can turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around play equipment.

TABLE 1 -CRITICAL HEIGHTS (in feet) OF TESTED MATERIAL

MATERIAL	UNCOMPRESSED DEPTH			COMPRESSED DEPTH
	6 Inch	9 Inch	12 Inch	9 inch
Wood Chips	7	10	11	10
Double Shredded Bark Mulch	6	10	11	7
Engineered Wood Fibers	6	7	>12	6
Fine Sand	5	5	9	5
Coarse Sand	5	5	6	4
Fine Gravel	6	7	10	6
Medium Gravel	5	5	6	5
Shredded Tires**	10-12	N/A	N/A	N/A

** This is data from tests conducted by independent testing laboratories on a 6 inch depth of uncompressed shredded tire samples produced by four manufacturers. The test reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

Table 1 should be read as follows: If, for example, uncompressed wood chips are used at a minimum of 6 inches, the Critical Height is 7 feet. If 9 inches of uncompressed wood chips are used, the Critical Height is 10 feet. It should be noted that, for some materials, the Critical Height decreases when the material is compressed. It is recommended that a shock absorbing material should extend a minimum of 6 feet in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability in your area, and its cost.

This information has been extracted from the CPSC publications “Playground Surfacing-Technical Information Guide” and “Handbook for Public Playground Safety.” Copies of these reports can be obtained by sending a postcard to:

Office of Public Affairs
U.S. Consumer Product Safety Commission
Washington, D.C. 20207
Toll-free Hotline: 1-800-638-2772 or at <http://www.cpsc.gov>

Universal Loft- Base Lumber

Item No.	Part No.	Part Description	QTY.
ULB-1		60 1/4" 3- HOLE FACIA	2
ULB-2		27 1/2" RAIL SPINDLE	20
ULB-3		25" UNIVERSAL RAIL TOP	4
ULB-4		25" UNIVERSAL FILLER	4
ULB-5		25" DECK RUNNER	4
ULB-6		25" RAIL BOTTOM	4
ULB-7		32" DECK BOARD	2
ULB-8		53" TOP JOIST	2
ULB-9		60 1/8" TARP CENTER	1
ULB-10		62 7/8" TARP SIDE FACIA	2
ULB-11		32" LARGE DECK BOARD	8
ULB-12		32" 6- HOLE FACIA	2
ULB-13		60 1/8" 6- HOLE FACIA	2
ULB-14		32 5/16" TARP UPRIGHT	2

Standard Loft Lumber

SL-1		28" SPIRAL SLIDE FILLER	2
SL-2		25" ENTRAPMENT BOARD	1
SL-3		41" CENTER UPRIGHT	2
SL-4		46" CORNER POST	4
SL-5		25" ENTRAPMENT BLOCK	2

Universal Loft- Wood Roof Lumber

ULWR-1		6 5/16" SHORT FAN BOARD	4
ULWR-2		8 7/16" CENTER FAN BOARD	2
ULWR-3		28 3/4" BOTTOM FAN BOARD	2
ULWR-4		37" CENTER SUPPORT	2
ULWR-5		11 1/16" PEAK SUPPORT	2
ULWR-6		11 7/16" FAN CAP	2
ULWR-7		39 3/8" WOOD ROOF SUPPORTS	4
ULWR-8		62 7/8" WOOD ROOF BOARD	18

Parrot Island Loft Center Post

PCP-1		PARROT ISLAND LOFT CENTER POST	1
-------	--	--------------------------------	---

Universal Monkey Bar Lumber

Item No.	Part No.	Part Description	QTY.
UMB-1		31 3/4" ENTRAPMENT BOARD	1
UMB-2		28" LADDER STEP	4
UMB-3		16" LEFT MONKEY BAR GUSSET	1
UMB-4		16" RIGHT MONKEY BAR GUSSET	1
UMB-5		96" RIGHT OVERHEAD	1
UMB-6		96" LEFT OVERHEAD	1
UMB-7		103" RIGHT SUPPORT LEG	1
UMB-8		103" LEFT SUPPORT LEG	1

Universal Loft- Base Hardware

ULH-1	40-1-00022	2 1/2" COATED DECK SCREW	120
ULH-2	40-1-00054	1/4" X 2" HEX LAG SCREW	2
ULH-3	40-1-00055	1/4" X 3" HEX LAG SCREW	8
ULH-4	40-1-00056	1/4" X 4 1/2" HEX LAG SCREW	24
ULH-5	40-1-00059	3/8" X 3 1/2" HEX LAG SCREW	36
ULH-6	40-1-00081	1/4" USS FLATWASHER	32
ULH-7	40-1-00082	3/8" USSS FLATWASHER	36

Standard Loft- Hardware

SLH-1	40-1-00055	1/4" X 3" HEX LAG SCREW	4
SLH-2	40-1-00059	3/8" X 3 1/2" HEX LAG SCREW	12
SLH-3	40-1-00061	3/8" X 5" HEX LAG SCREW	12
SLH-4	40-1-00081	1/4" USS FLATWASHER	4
SLH-5	40-1-00082	3/8" USS FLATWASHER	28
SLH-6	40-1-00096	3/8" X 7" HEX LAG SCREW	4

Wood Roof Hardware

WRH-1	40-1-00001	3/8" ACORN NUT PLATED	4
WRH-2	40-1-00007	3/8" X 3 1/2" CARRIAGE BOLT	4
WRH-3	40-1-00019	1 1/4" COATED DECK SCREW	18
WRH-4	40-1-00022	2 1/2" COATED DECK SCREW	4
WRH-5	40-1-00026	3/8" HEX NUT	4
WRH-6	40-1-00040	3/8" X 1" HEX BOLT	6
WRH-7	40-1-00073	3/8" SPLIT LOCKWAHSER	4
WRH-8	40-1-00080	3/8" 4-PRONG T-NUT	6
WRH-9	40-1-00082	3/8" USS FLATWASHER	10
WRH-10	40-1-00083	1/2" USS FLATWASHER	4
WRH-11	40-1-00104	2" COATED DECK SCREW	8
WRH-12	40-1-00123	1 1/2" COATED DECK SCREW	116

Universal Monkey Bar Hardware

Item No.	Part No.	Part Description	QTY.
MBH-1	40-1-00002	1/2" ACORN NUT PLATED	6
MBH-2	40-1-00013	1/2" X 7" CARRIAGE BOLT	6
MBH-3	40-1-00028	1/2" HEX NUT	6
MBH-4	40-1-00055	1/4" X 3" HEX LAG SCREW	4
MBH-5	40-1-00056	1/4" X 4 1/2" HEX LAG SCREW	16
MBH-6	40-1-00059	3/8" X 3 1/2" HEX LAG SCREW	12
MBH-7	40-1-00070	#14 X 2" PAN PHILLIPS T/S	4
MBH-8	40-1-00074	1/2" SPLIT LOCKWASHER	6
MBH-9	40-1-00081	1/4" USS FLATWASHER	24
MBH-10	40-1-00082	3/8" USS FLATWASHER	12
MBH-11	40-1-00083	1/2" USS FLATWASHER	6
MBH-12	40-1-00084	3/4" USS FLATWASHER	6
MBH-13	40-1-00109	1/2" X 9" HEX BOLT	1
MBH-14	40-1-00111	2" METAL TAP SCREW	12

Parrot Island Center Post Hardware

CPH-1	40-1-00059	3/8" X 3 1/2" HEX LAG SCREW	1
CPH-2	40-1-00061		1
CPH-3	40-1-00082		2

Universal Loft Accessories (Color Depends on Package)

ULA-1	39-1-00008	BUBBLE PANEL	1
ULA-2	37-1-00020	BINOCULARS	1

Monkey Bar Accessories

MBA-1	54-1-00001	1 1/4" X 22" PLAYGRIP TUBE	6
MBA-2	57-2-00005	1 1/4" PLAYGRIP LADDER HANDLE	2

Universal Loft- Base Lumber

ULB-1

60 1/4" 3- Hole Facia
QTY. 2



ULB-2

27 1/2" Rail Spindle
QTY. 20



ULB-3

25" Universal Rail Top
QTY. 4



ULB-4

25" Universal Filler
QTY. 4



ULB-5

25" Deck Runner
QTY. 4



ULB-6

25" Rail Bottom
QTY. 4



ULB-7

32" Deck Board
QTY. 2



ULB-8

53" Top Joist
QTY. 2



ULB-9

60 1/8" Tarp Center
QTY. 1



ULB-10

62 7/8" Tarp Side Facia
QTY. 2



ULB-11

32" Large Deck Board
QTY. 8



ULB-12

32" 6- Hole Facia
QTY. 2



Universal Loft- Base Lumber

ULB-13

60 1/8" 6- Hole Facia
QTY. 2



ULB-14

32 5/16" Tarp Upright
QTY. 2



Standard Loft Lumber

SL-1

28" Spiral Slide Filler
QTY. 2



SL-2

25" Entrapment Board
QTY. 1



SL-3

41" Center Upright
QTY. 2




SL-4

46" Corner Post
QTY. 4



SL-5

25" Entrapment Block
QTY. 2

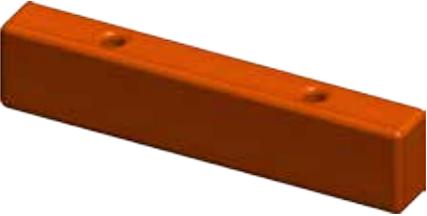

Universal Loft- Wood Roof Lumber

ULWR-1

6 5/16" Short Fan Board
QTY. 4



ULWR-2

8 7/16" Center Fan Board
QTY. 2



ULWR-3

28 3/4" Bottom Fan Board
QTY. 2



ULWR-4

37" Center Support
QTY. 2



ULWR-5

11 1/16" Peak Support
QTY. 2



ULWR-6

11 7/16" Fan Cap
QTY. 2



ULWR-7

39 3/8" Wood Roof Supports
QTY. 4



ULWR-8

62 7/8" Wood Roof Board
QTY. 18



Universal Monkey Bar Lumber

UMB-1

31 3/4" Entrapment Board
QTY. 1



UMB-2

28" Ladder Step
QTY. 4



UMB-3

16" Left Monkey Bar Gusset
QTY. 1



UMB-4

16" Right Monkey Bar Gusset
QTY. 1



UMB-5

96" Right Overhead
QTY. 1



UMB-6

96" Left Overhead
QTY. 1



UMB-7

103" Right Support Leg
QTY. 1



UMB-8

103" Left Support Leg
QTY. 1



UNIVERSAL LOFT- BASE HARDWARE

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

ULH-1
40-1-00001
2 1/2" Coated Deck Screw
QTY. 120



ULH-2
40-1-00054
1/4" x 2" Hex Lag Screw
QTY. 2



ULH-3
40-1-00055
1/4" x 3" Hex Lag Screw
QTY. 8



ULH-4
40-1-00056
1/4" x 4 1/2" Hex Lag Screw
QTY. 24



ULH-5
40-1-00059
3/8" x 3 1/2" Hex Lag Screw
QTY. 36



ULH-6
40-1-00081
1/4" USS Flatwasher
QTY. 32



ULH-7
40-1-00082
3/8" USS Flatwasher
QTY. 36



MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT



USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

STANDARD LOFT HARDWARE BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

SLH-1
40-1-00055
1/4" x 3" Hex Lag Screw
QTY. 4




SLH-2
40-1-00059
3/8" x 3 1/2" Hex Lag Screw
QTY. 12



SLH-3
40-1-00061
3/8" x 5" Hex Lag Screw
QTY. 12



SLH-4
40-1-00081
1/4" USS Flatwasher
QTY. 4

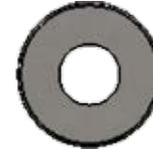

SLH-5
40-1-00082
3/8" USS Flatwasher
QTY. 28



SLH-6
40-1-00096
3/8" x 7" Hex Lag Screw
QTY. 4



MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT



USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

WOOD ROOF HARDWARE BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

WRH-1
40-1-00001
3/8" Acorn Nut Plated
QTY. 4



WRH-2
40-1-00007
3/8" x 3 1/2" Carriage Bolt
QTY. 4



WRH-3
40-1-00019
1 1/4" Coated Deck Screw
QTY. 18



WRH-4
40-1-00022
2 1/2" Coated Deck Screw
QTY. 4



WRH-5
40-1-00026
3/8" Hex Nut
QTY. 4



WRH-6
40-1-00040
3/8" x 1" Hex Bolt
QTY. 6




WRH-7
40-1-00073
3/8" Split Lockwasher
QTY. 4




WRH-8
40-1-00080
3/8" 4- Prong T-Nut
QTY. 6



WRH-9
40-1-00082
3/8" USS Flatwasher
QTY. 10

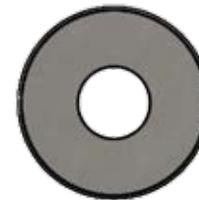

WRH-10
40-1-00083
1/2" USS Flatwasher
QTY. 4

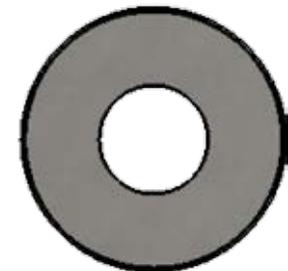


WRH-11
40-1-00104
2" Coated Deck Screw
QTY. 8



WRH-12
40-1-00123
1 1/2" Coated Deck Screw
QTY. 116



MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

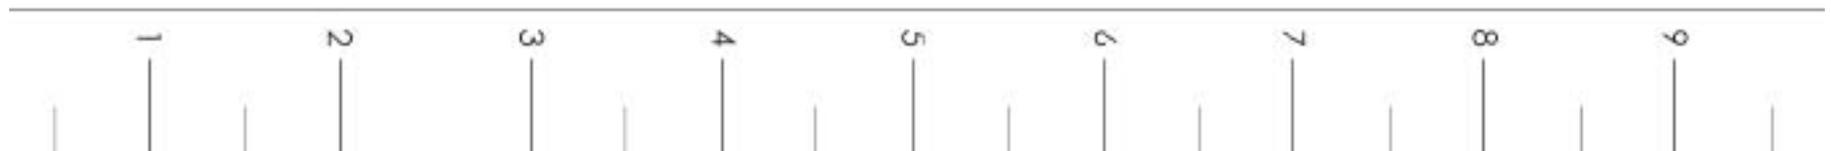

USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

UNIVERSAL MONKEY BAR HARDWARE BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

MBH-1

40-1-00002


1/2" Acorn Nut Plated
QTY. 6



MBH-2

40-1-00013

1/2" x 7" Carriage Bolt
QTY. 6

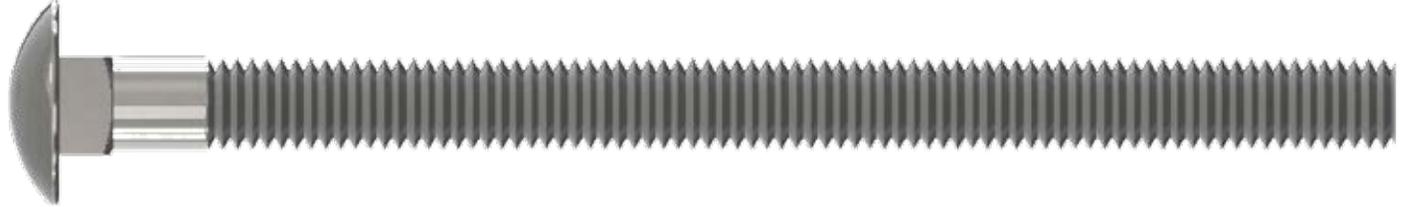

MBH-3

40-1-00028

1/2" Hex Nut
QTY. 6



MBH-4

40-1-00055


1/4" x 3" Hex Lag Screw
QTY. 4



MBH-5

40-1-00056

1/4" x 4 1/2" Hex Lag Screw
QTY. 16



MBH-6

40-1-00059

3/8" x 3 1/2" Hex Lag Screw
QTY. 12



MBH-7

40-1-00070


#14 x 2" Pan Phillips T/S
QTY. 4



MBH-8

40-1-00074

1/2" Split Lockwasher
QTY. 6

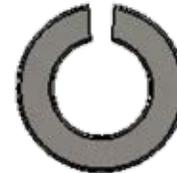

MBH-9

40-1-00081

1/4" USS Flatwasher
QTY. 24



MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT



USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.


UNIVERSAL MONKEY BAR HARDWARE BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)


MBH-10
40-1-00082
3/8" USS Flatwasher
QTY. 12



MBH-11
40-1-00083
1/2" USS Flatwasher
QTY. 6

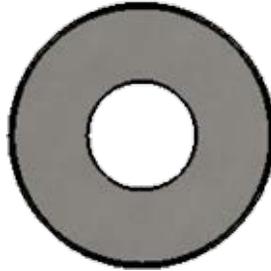

MBH-12
40-1-00084
3/4" USS Flatwasher
QTY. 6

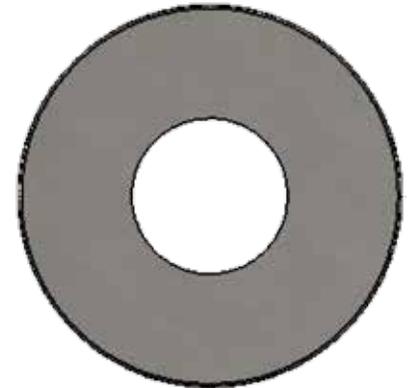


MBH-13
40-1-00109
1/2" x 9" Hex Bolt
QTY. 1



MBH-14
40-1-00111
2" Metal Tap Screw
QTY. 12




MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

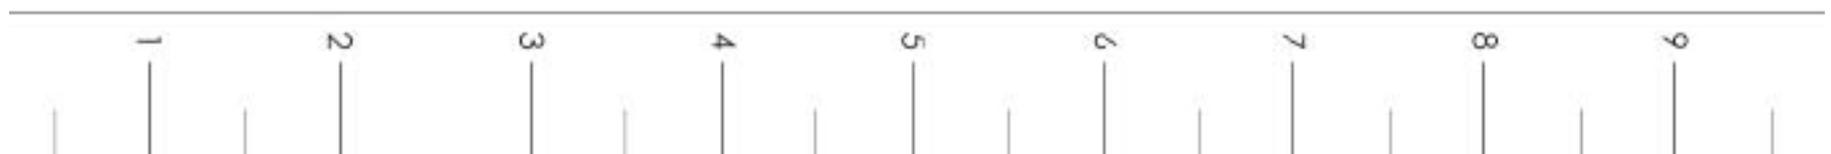

USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

Universal Loft Accessories (Color Depends on Package)

ULA-1
39-1-00008
Bubble Panel
QTY. 1

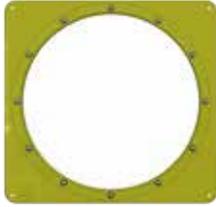


ULA-2
37-1-000020
Binoculars
QTY. 1



Monkey Bar Accessories

MBA-1
54-1-00001
1 1/4" x 22" Playgrip Tube
QTY. 6

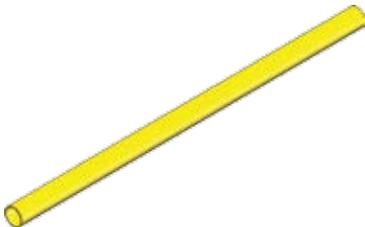


MBA-2
57-2-00005
1 1/4" Playgrip Ladder Handle
QTY. 2



Parrot Island Playcenter Set-up For Monkey Bar & Loft

First the trapeze part of the trapeze arm needs to be removed.

Next remove the Center Tarp Board and Center Post on the Rope Ladder Side of the Playcenter for replacement.

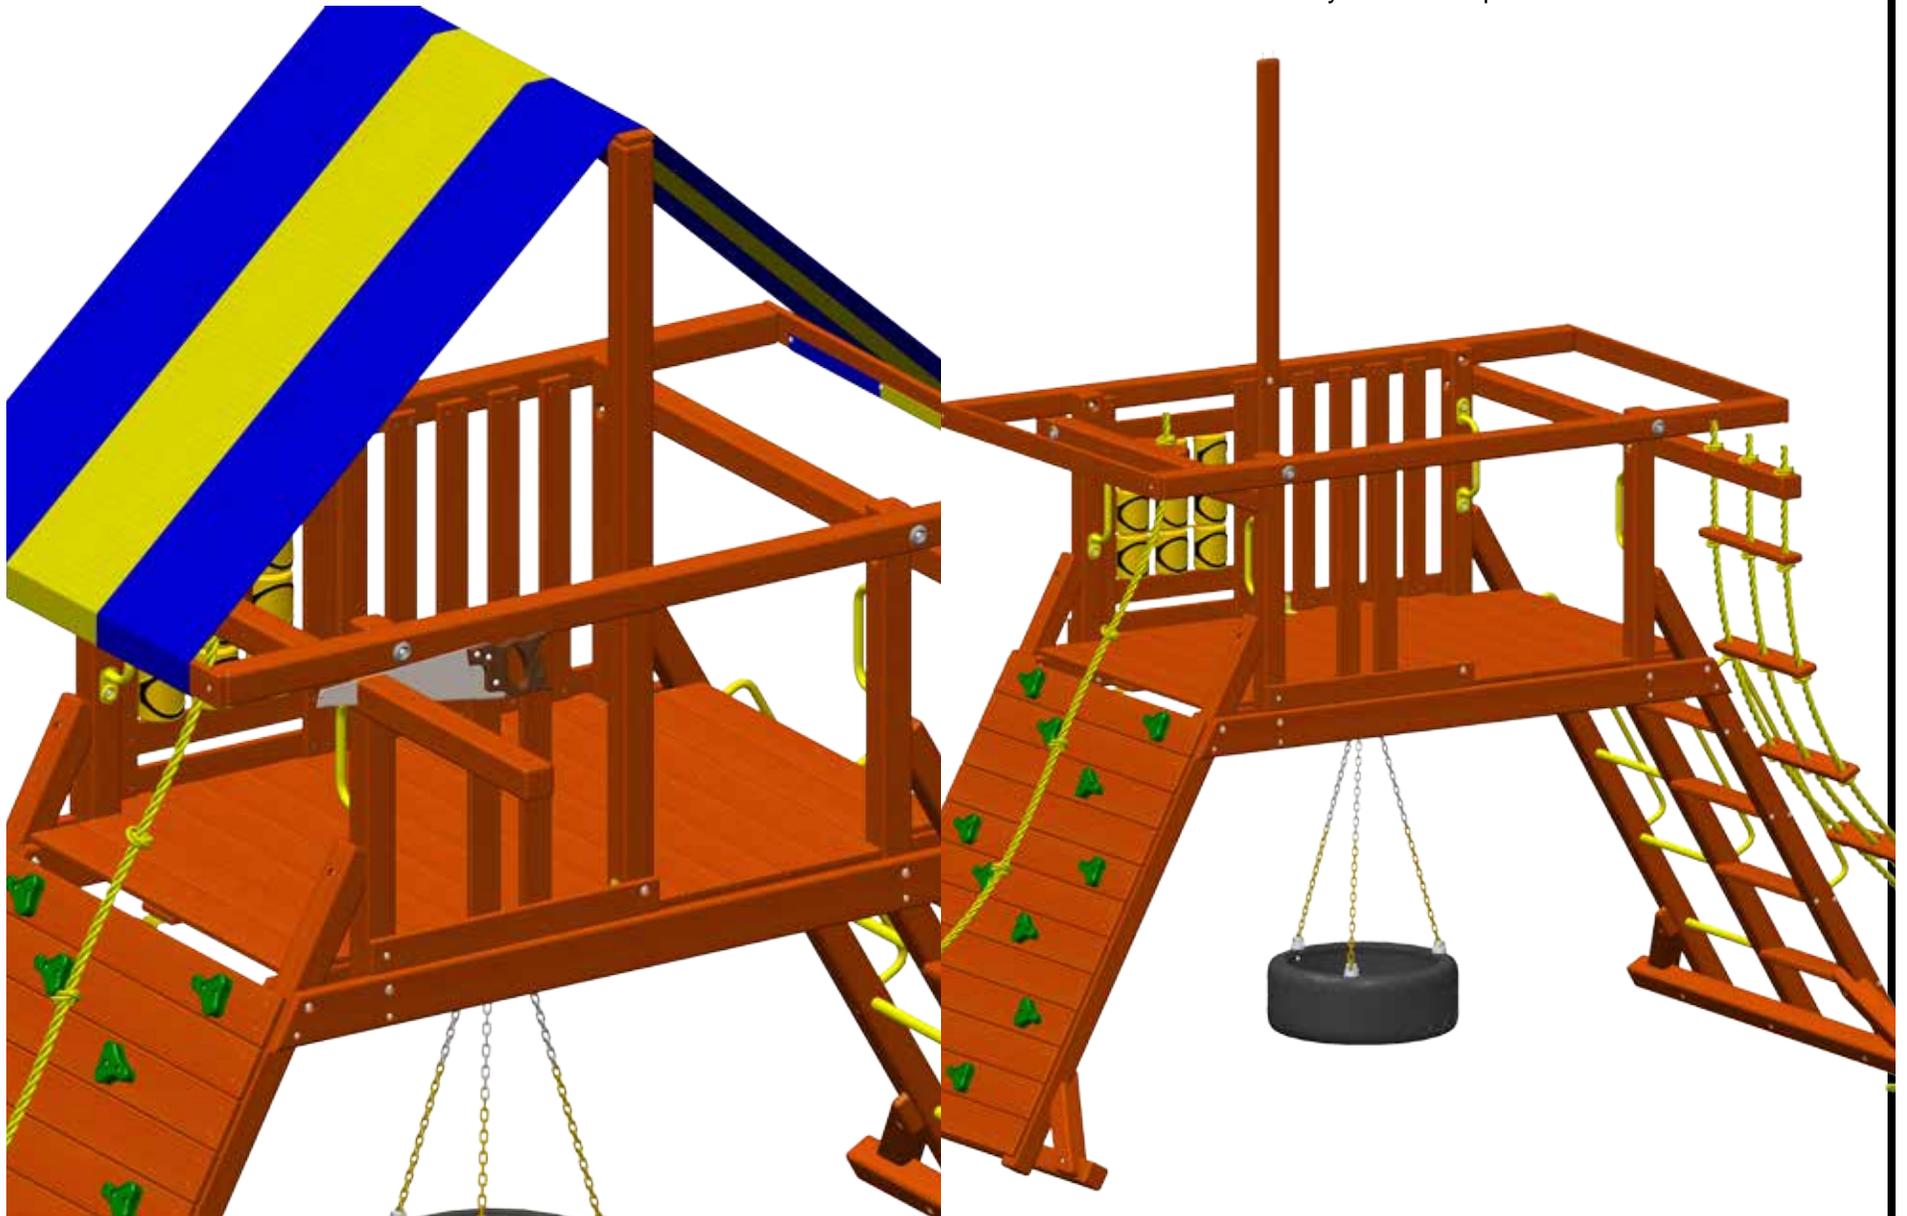






Parrot Island Playcenter Set-up For Monkey Bar & Loft

PARTS NEEDED

- PCP-1- 75" Parrot Island Loft Center Post- (1)
- Removed 90 Degree Bracket- (1)

HARDWARE NEEDED

- CPH-1- 3/8" x 3 1/2" Hex Lag Screw- (1)
- CPH-2- 3/8" x 5" Hex Lag Screw- (1)
- CPH-3- 3/8" USS Flatwasher- (2)
- Hardware w/ Removed Bracket- (1)

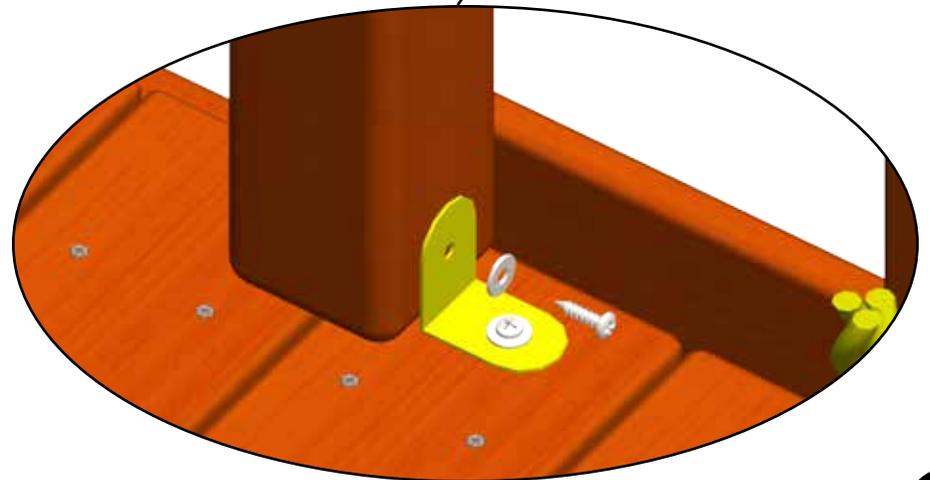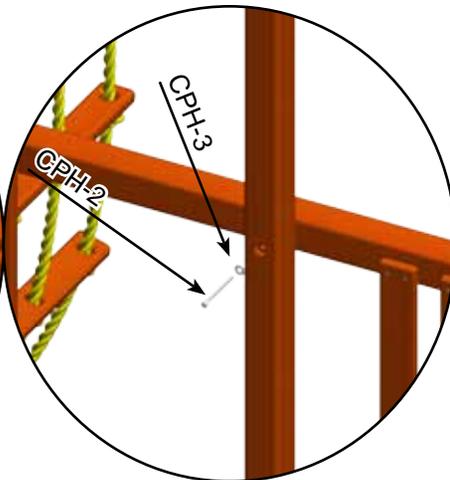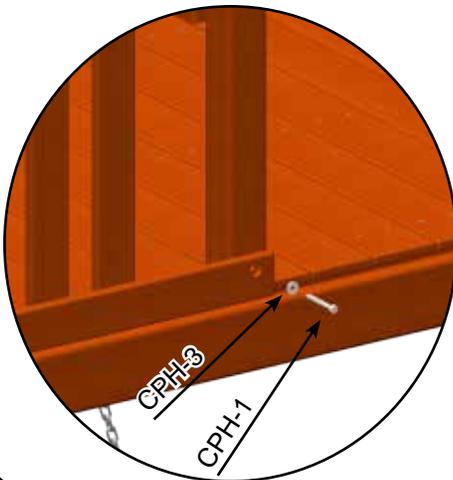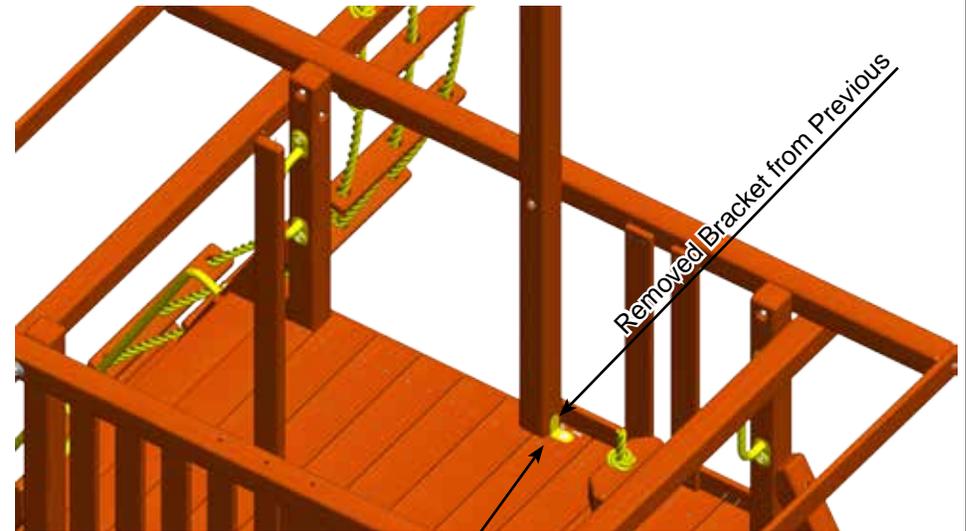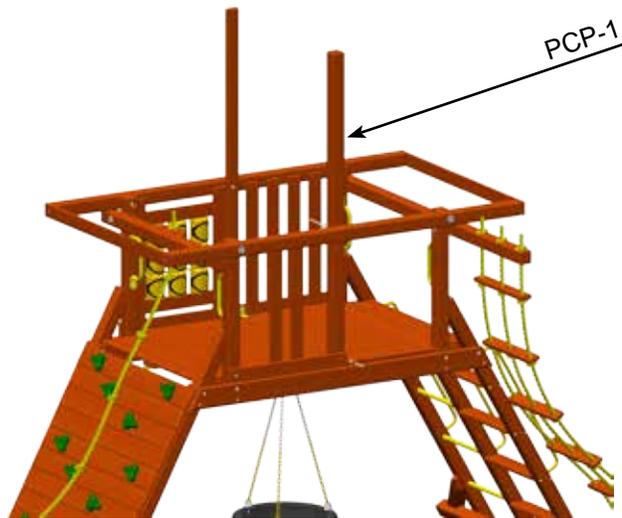

Monkey Bar Install




PARTS NEEDED

UMB-8- Left Support Leg-	(1)
UMB-7- Right Support Leg-	(1)
UMB-2- Ladder Step-	(4)

HARDWARE NEEDED

MBH-9- 1/4" USS Flatwasher-	(16)
MBH-5- 1/4" x 4 1/2" Hex Lag Screw-	(16)

Place the Center Tarp Board back along with the tarp and Using a 9/16" Drill Bit, Drill Through the Corner Post for the Hex Bolt Installation to come.

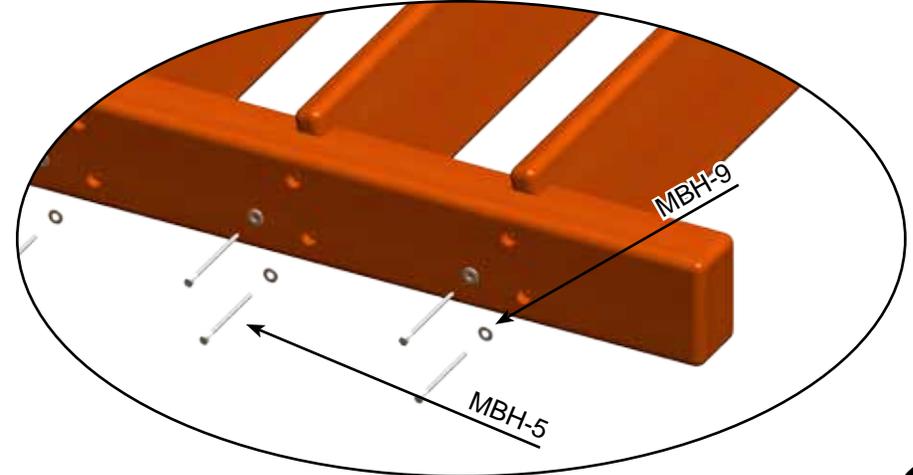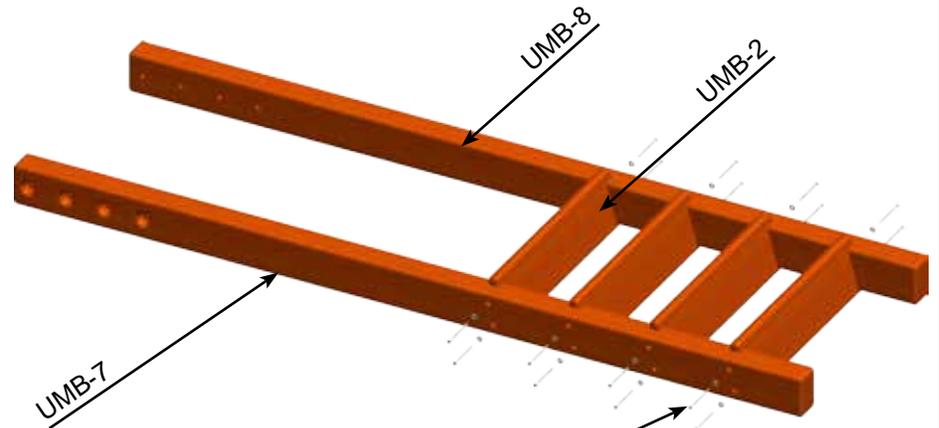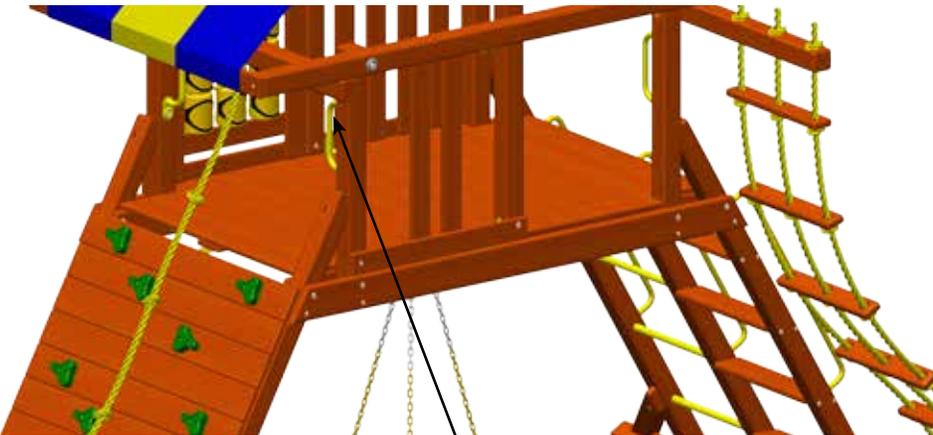





Monkey Bar Install

PARTS NEEDED

- UMB-1- Entrapment Board- (1)
- UMB-5- Right Overhead- (1)
- UMB-6- Left Overhead- (1)
- MBA-1- 1 1/4" x 22" Playgrip Tube- (6)

HARDWARE NEEDED

- MBH-6- 3/8" x 3 1/2" Hex Lag Screw- (4)
- MBH-10- 3/8" USS Flatwasher- (4)
- MBH-14- 2" Metal Tap Screw- (12)

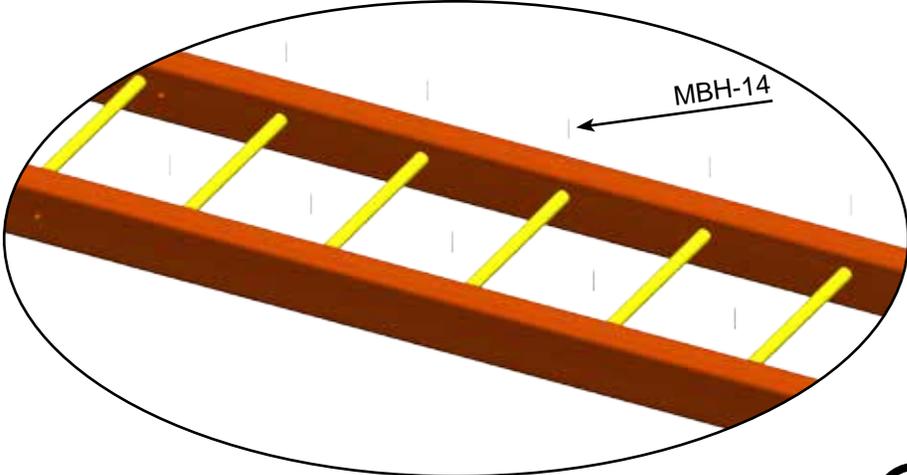
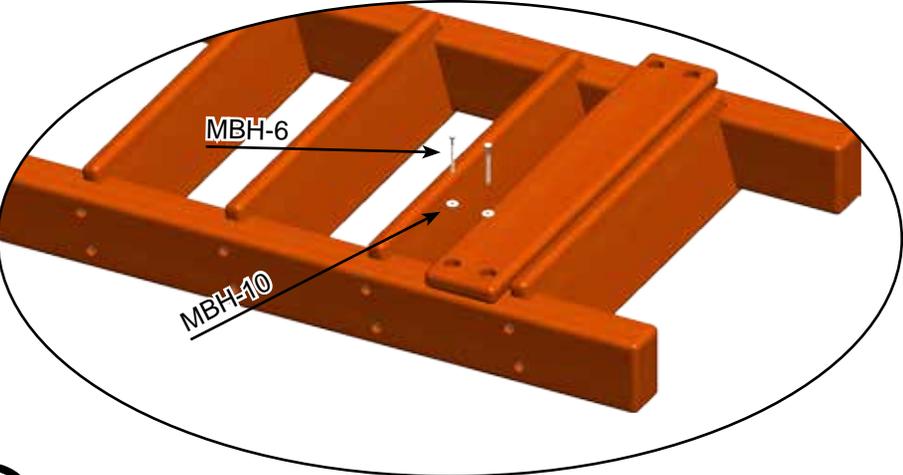
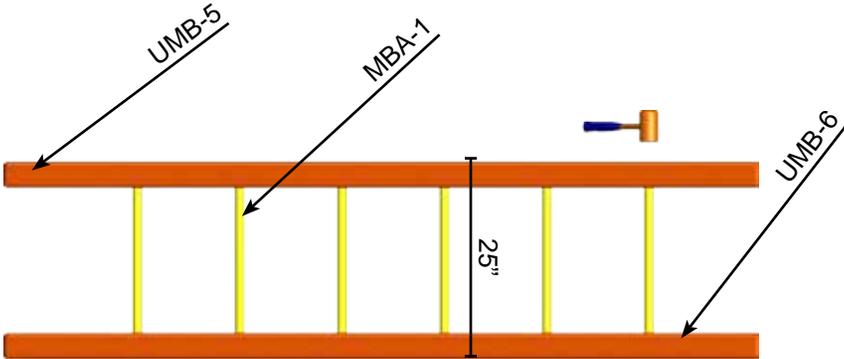
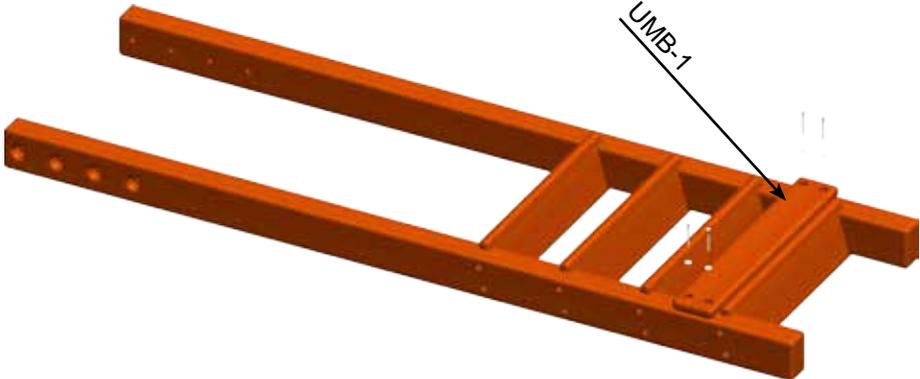


Monkey Bar Install

PARTS NEEDED

HARDWARE NEEDED

Overhead-	(1)	MBH-2- 1/2" x 7" Carriage Bolt-	(2)	MBH-12- 3/4" USS Flatwasher-	(2)
Ladder-	(1)	MBH-11- 1/2" USS Flatwasher-	(2)	MBH-8- 1/2" Split Lockwasher-	(2)
UMB-3- Left Monkey Bar Gusset-	(1)	MBH-3- 1/2" Hex Nut-	(2)	MBH-1- 1/2" Acorn Nut Plated-	(2)
UMB-4- Right Monkey Bar Gusset-	(1)	MBH-10- 3/8" USS Flatwasher-	(8)	MBH-6- 3/8" x 3 1/2" Hex Lag Screw-	(8)

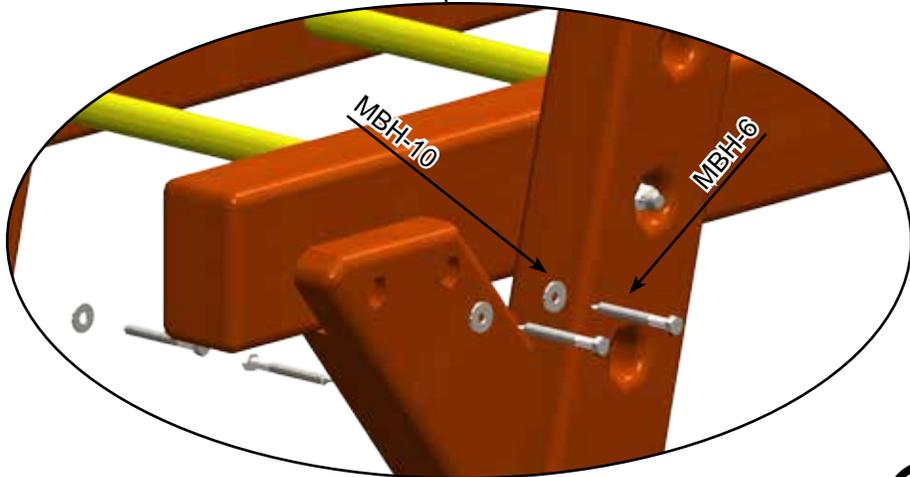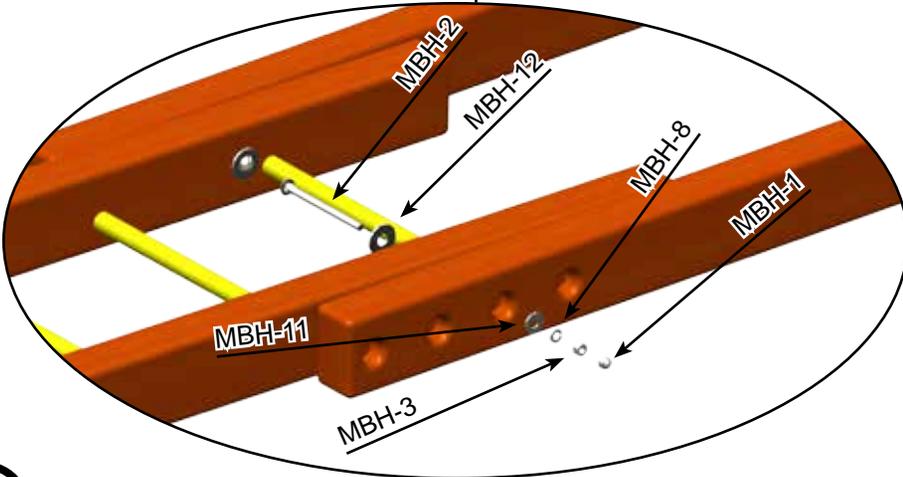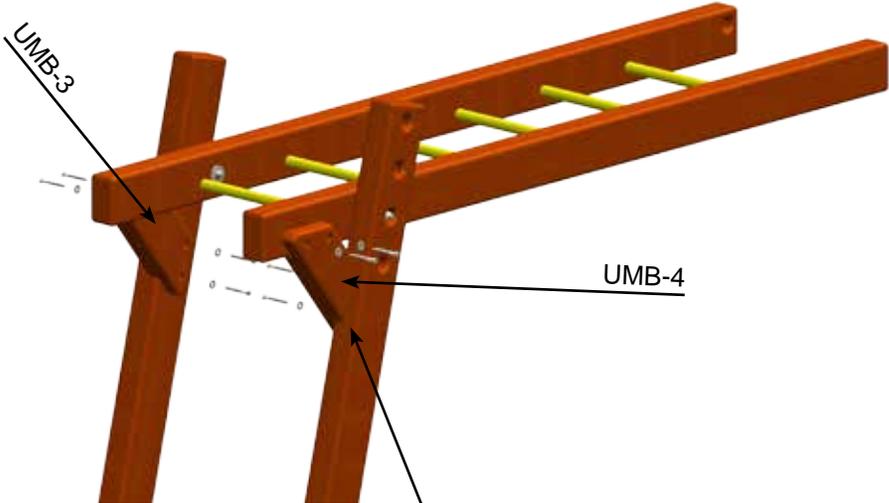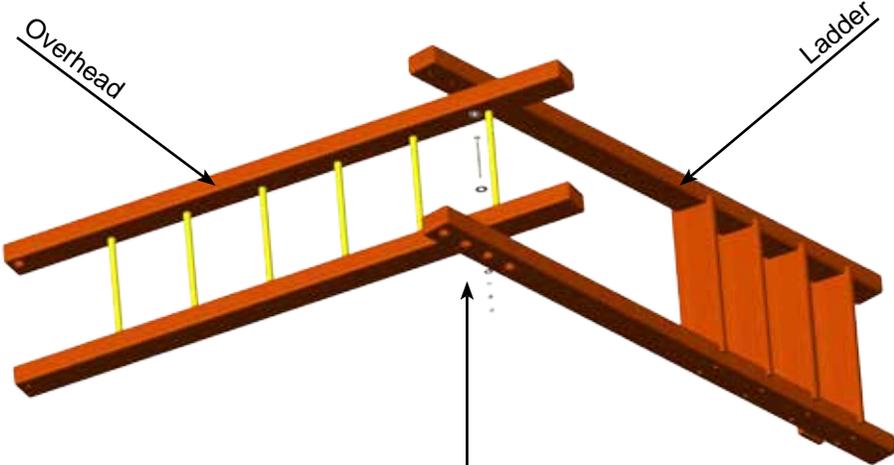

Universal Loft Install


PARTS NEEDED

ULB-12- 6-Hole Facia-
SL-4- Corner Post-
ULA-1- Bubble Panel-

(2) ULB-8- Top Joist-
(4) SL-5- Entrapment Block-
(1) (2)

HARDWARE NEEDED

(2) ULH-7- 3/8" USS Flatwasher-
(16) ULH-5- 3/8" x 3 1/2" Hex Lag Screw-
(4) SLH-5- 3/8" x 7" Hex Lag Screw-

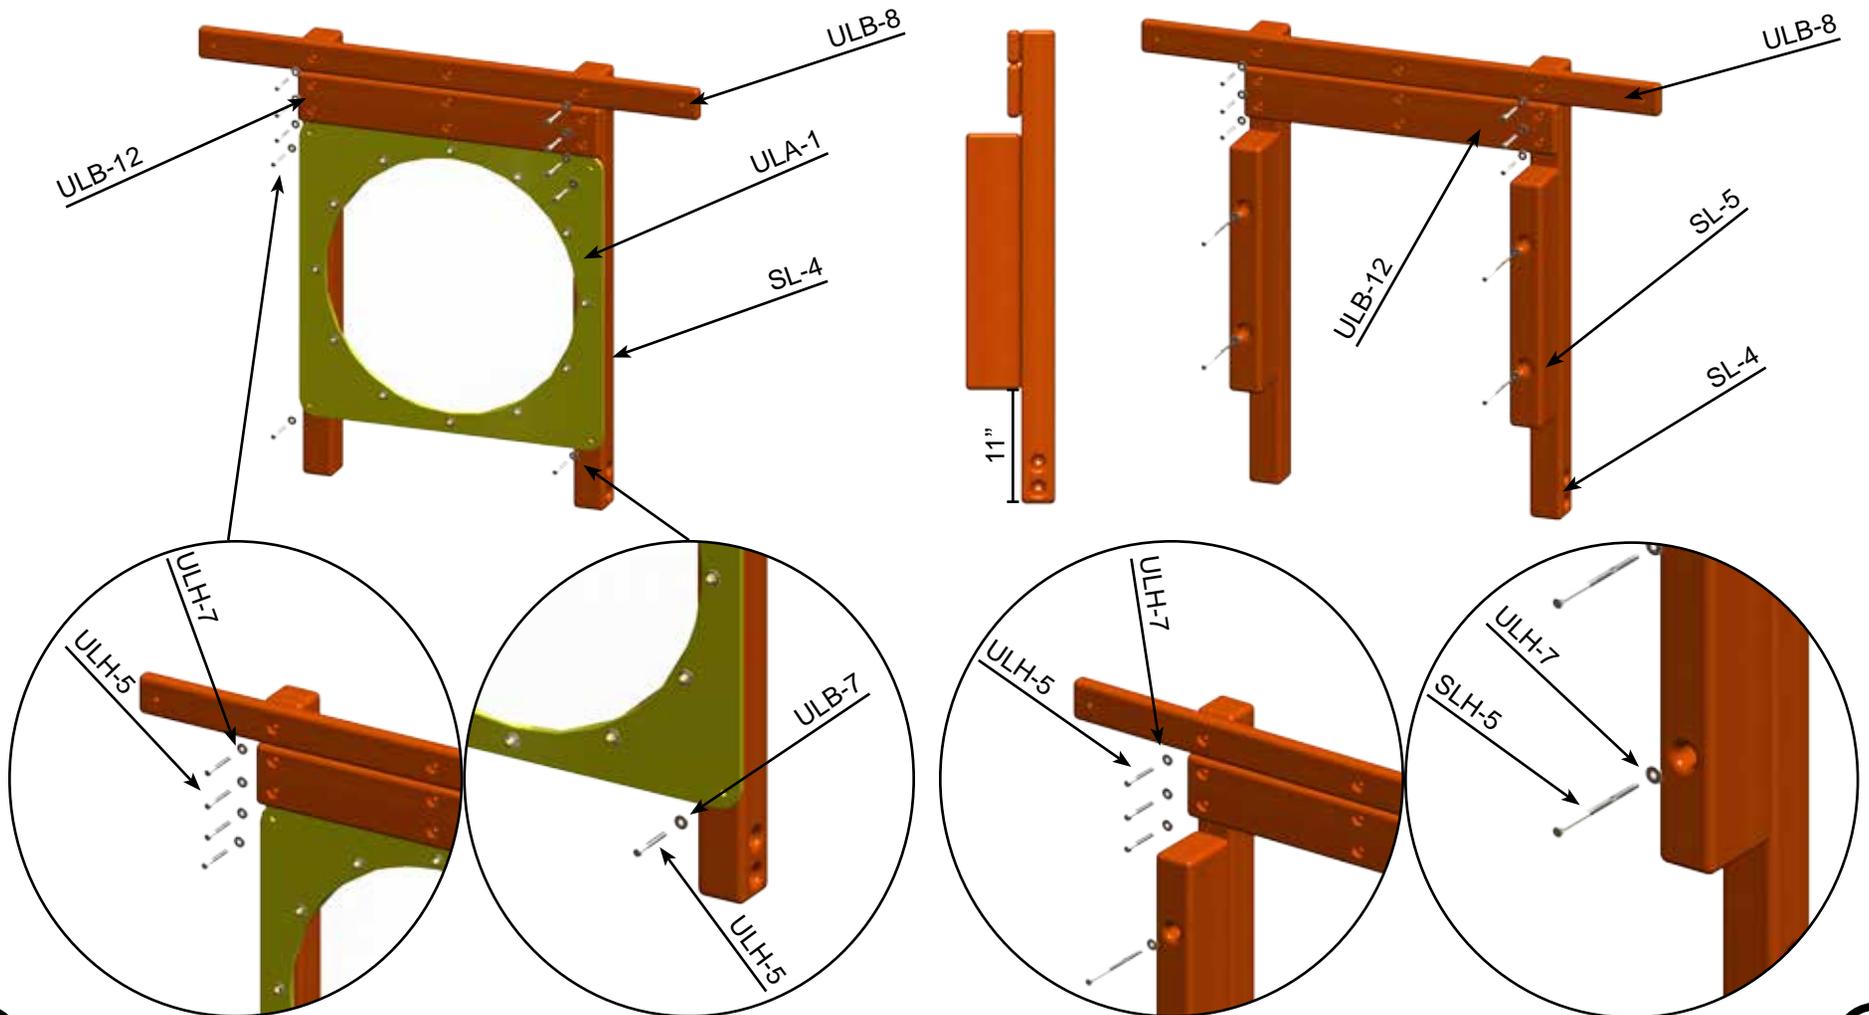

Universal Loft Install





PARTS NEEDED

ULB-5- Deck Runner-	(4)
ULB-11- Large Deck Board-	(8)
ULB-7- Deck Board-	(2)
SL-2- Entrapment Board-	(1)

HARDWARE NEEDED

ULH-1- 2 1/2" Coated Deck Screw-	(40)
SLH-2- 3/8" x 3 1/2" Hex Lag Screw-	(4)
SLH-5- 3/8" USS Flatwasher-	(4)

Make 2 of these Assemblies

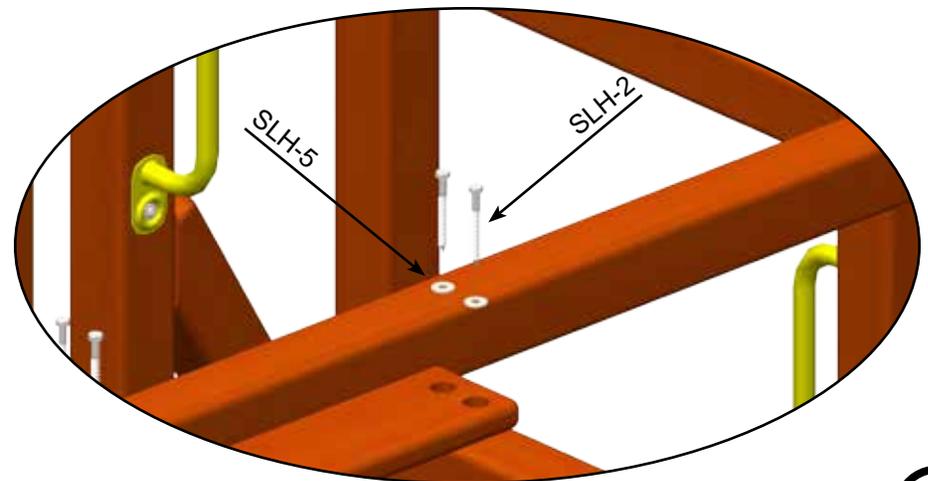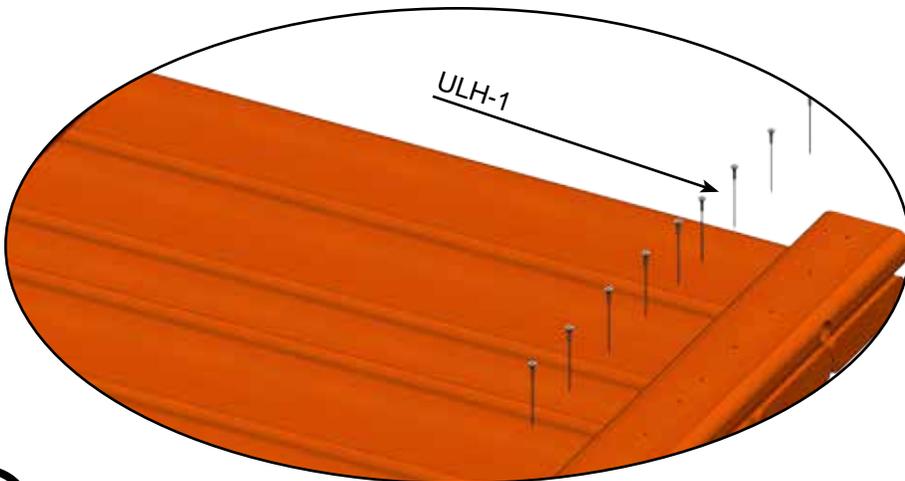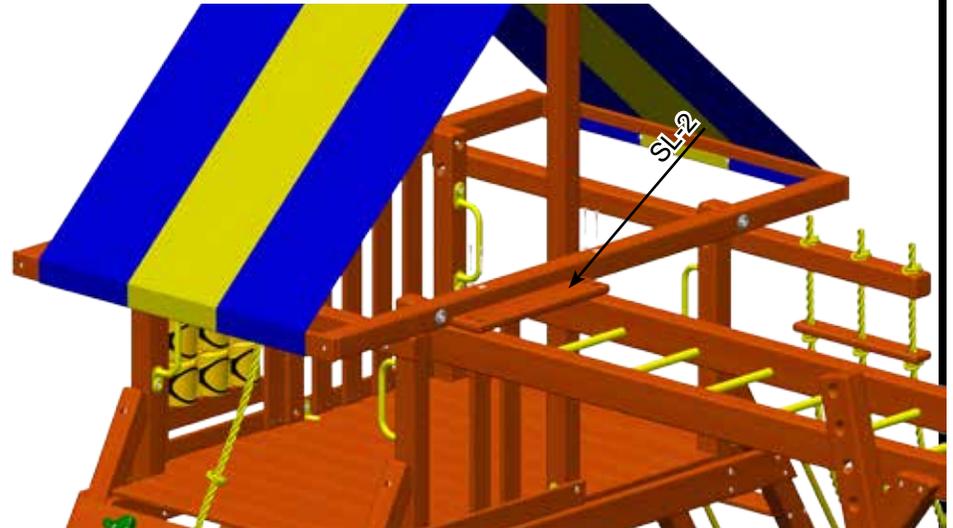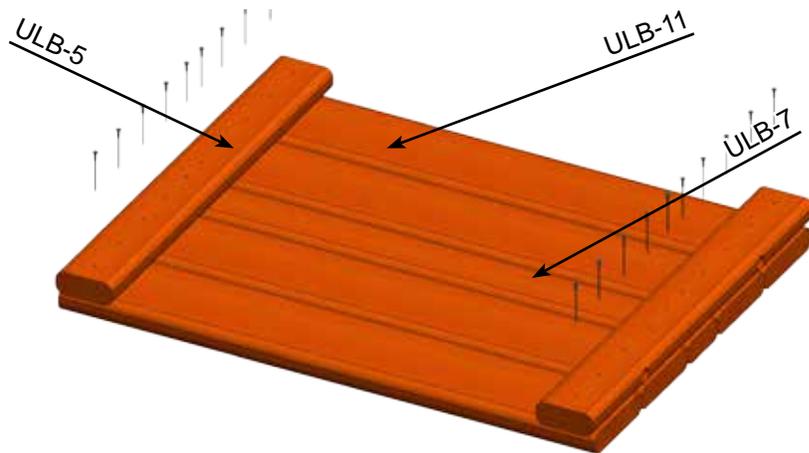




Universal Loft Install

PARTS NEEDED

Entrapment Assembly- (1)
ULB-4- Universal Filler- (2)
Loft Deck- (1)

HARDWARE NEEDED

SLH-3- 3/8" x 5" Hex Lag Screw- (4)
SLH-5- 3/8" USS Flatwasher- (4)
ULH-4- 1/4" x 4 1/2" Hex Lag Screw- (4)
ULH-6- 1/4" USS Flatwasher- (4)

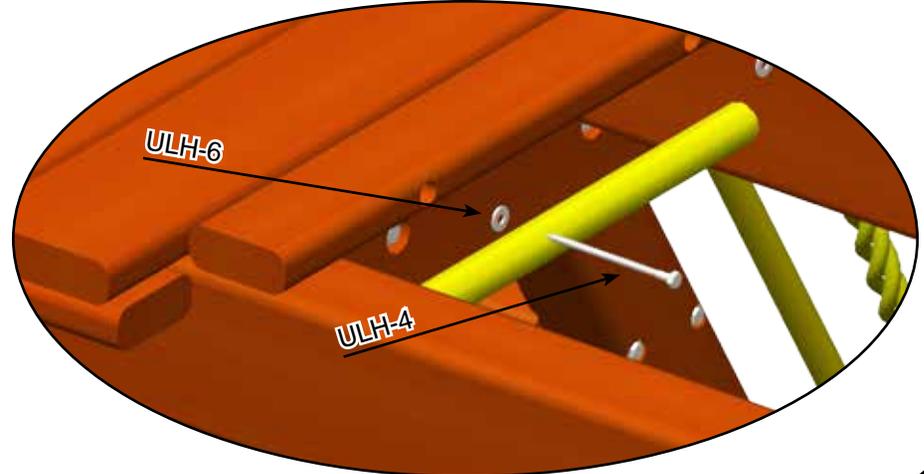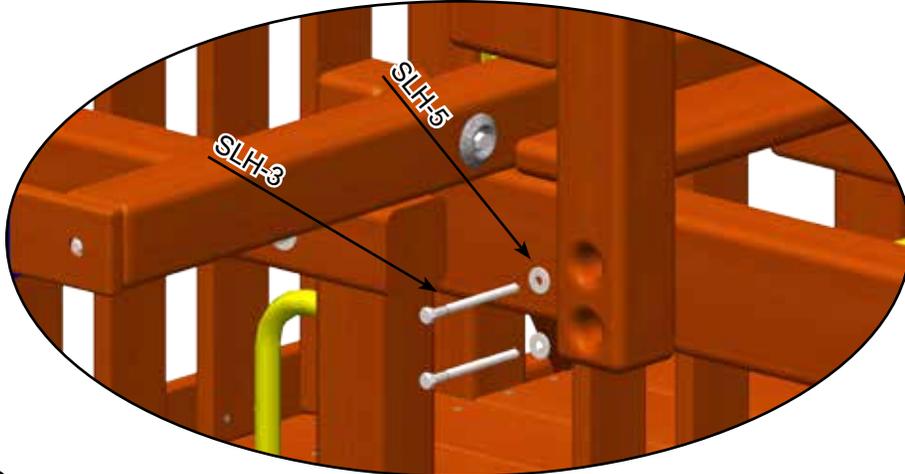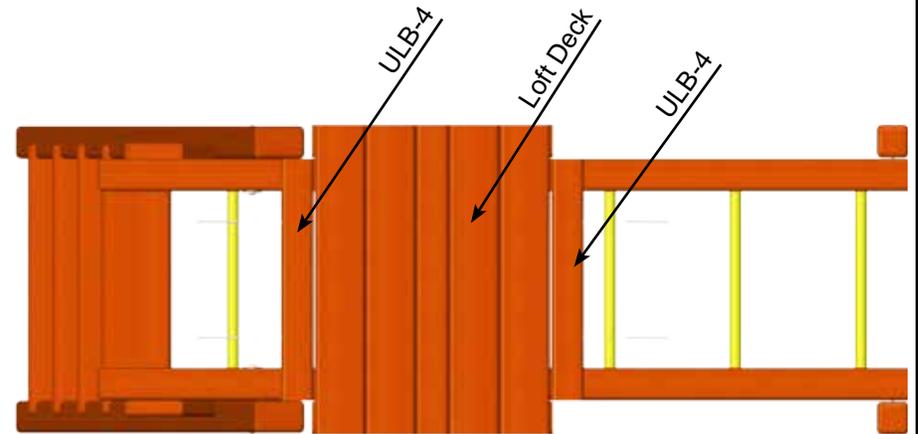





Universal Loft Install

PARTS NEEDED

SL-3- Center Upright-	(2)
ULB-4- Universal Filler- Deck Assembly-	(1)
	(1)

HARDWARE NEEDED

SLH-5- 3/8" USS Flatwasher-	(4)
SLH-3- 3/8" x 5" Hex Lag Screw-	(4)
ULH-6- 1/4" USS Flatwasher-	(2)
ULH-4- 1/4" x 4 1/2" Hex Lag Screw-	(2)

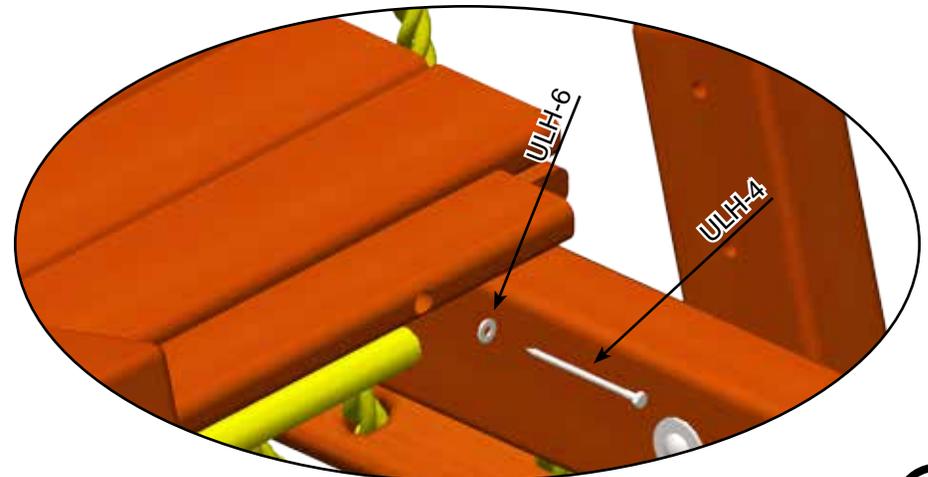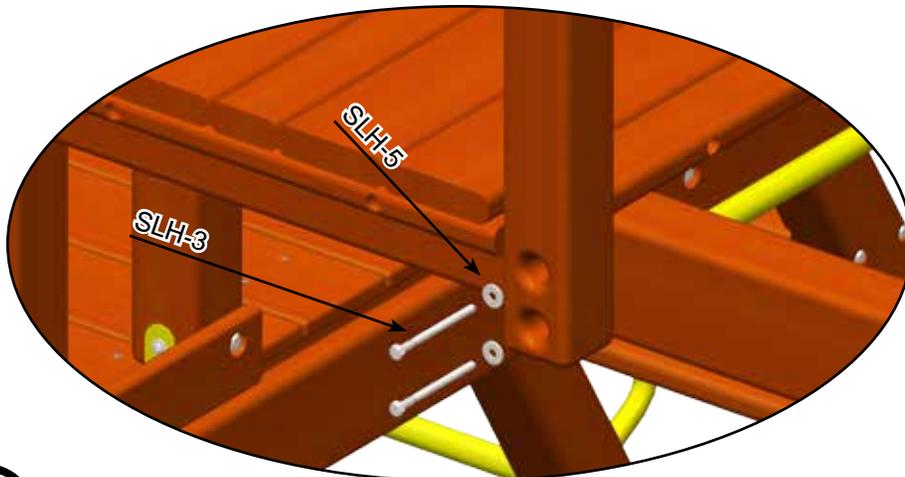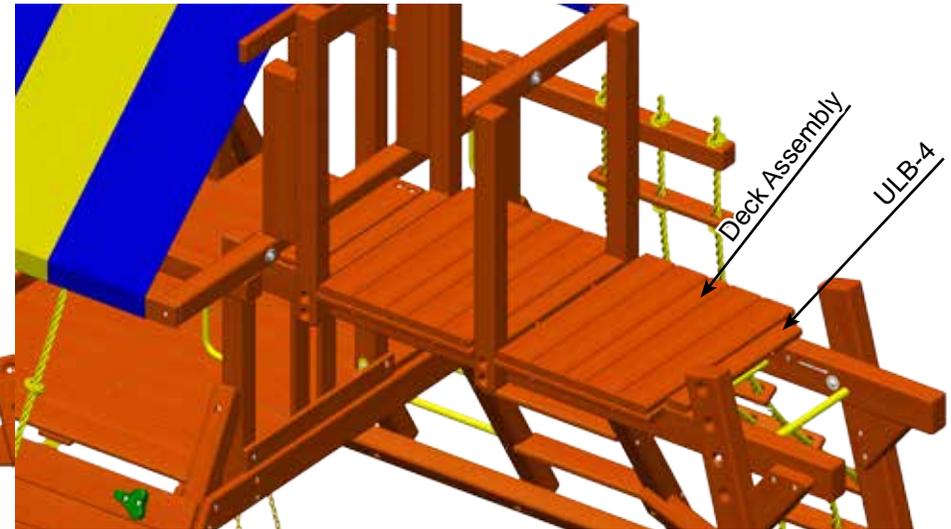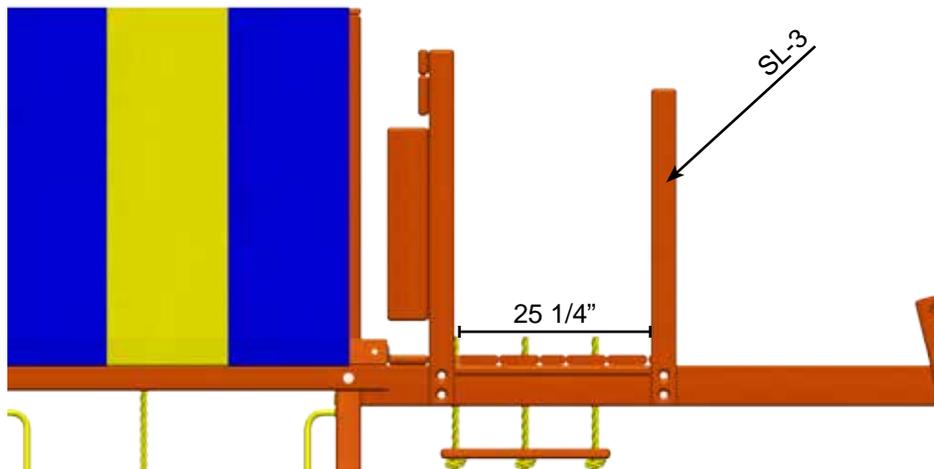

Universal Loft Install

PARTS NEEDED

Bubble Assembly-

(1)


HARDWARE NEEDED

SLH-3- 3/8" x 3 1/2" Hex Lag Screw- (4)

SLH-5- 3/8" USS Flatwasher- (4)

ULH-6- 1/4" USS Flatwasher- (8)

ULH-4- 1/4" x 4 1/2" Hex Lag Screw- (8)

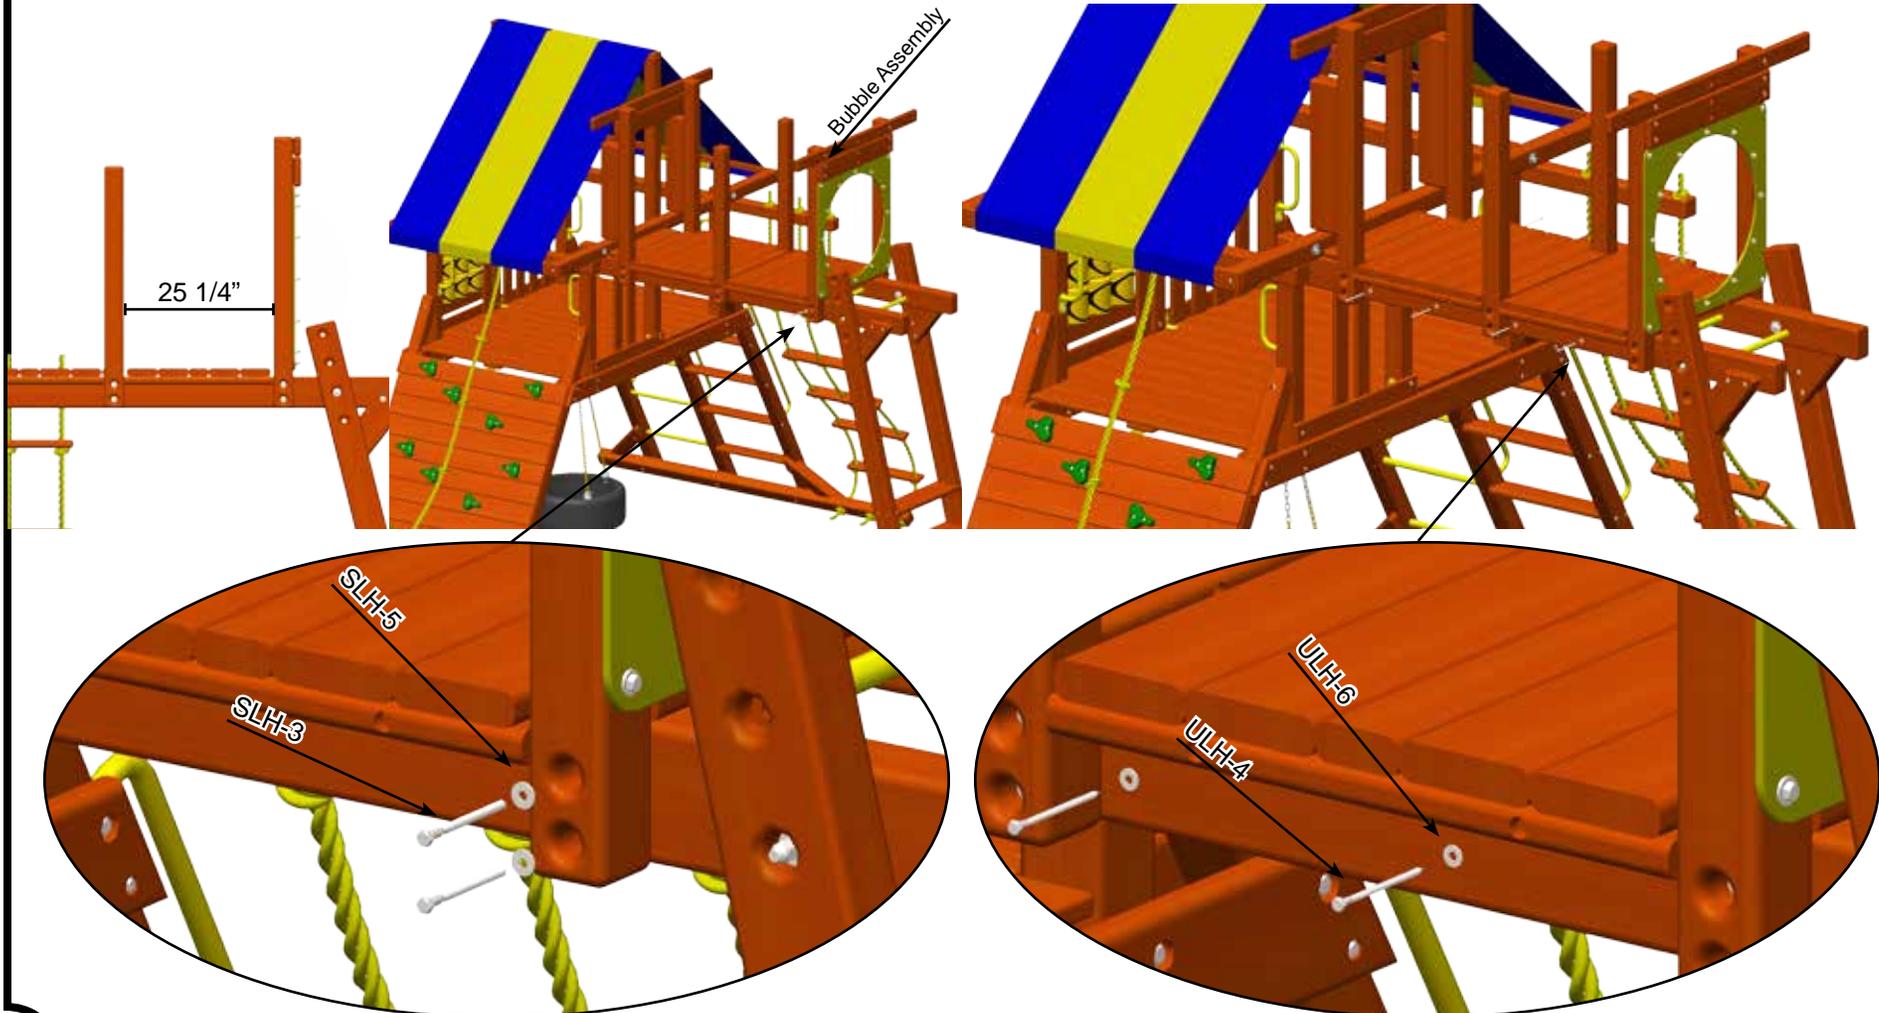





Universal Loft Install

PARTS NEEDED

ULB-13- 6-Hole Facia- (2)
ULB-1- 3- Hole Facia- (2)

HARDWARE NEEDED

ULH-7- 3/8" USS Flatwasher- (18)
ULH-5- 3/8" x 3 1/2" Hex Lag Screw- (18)

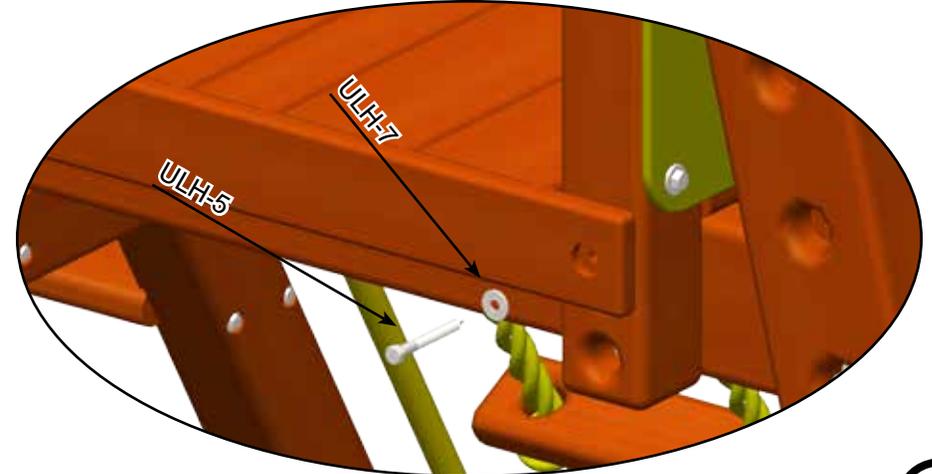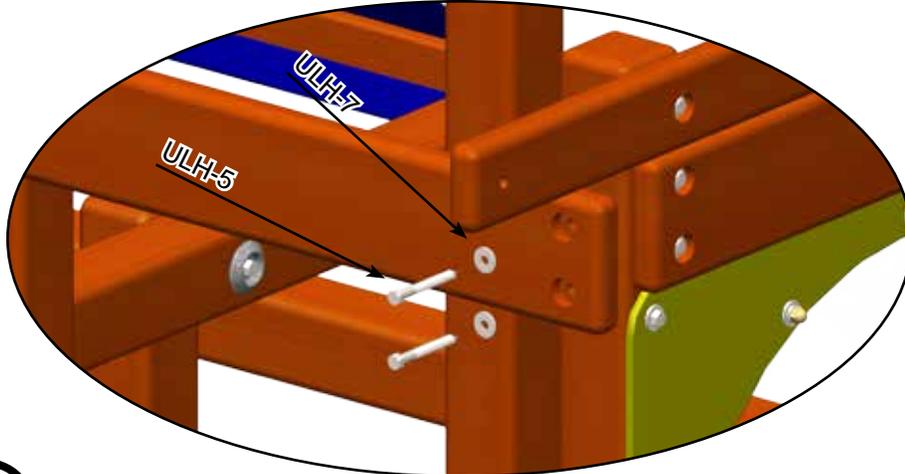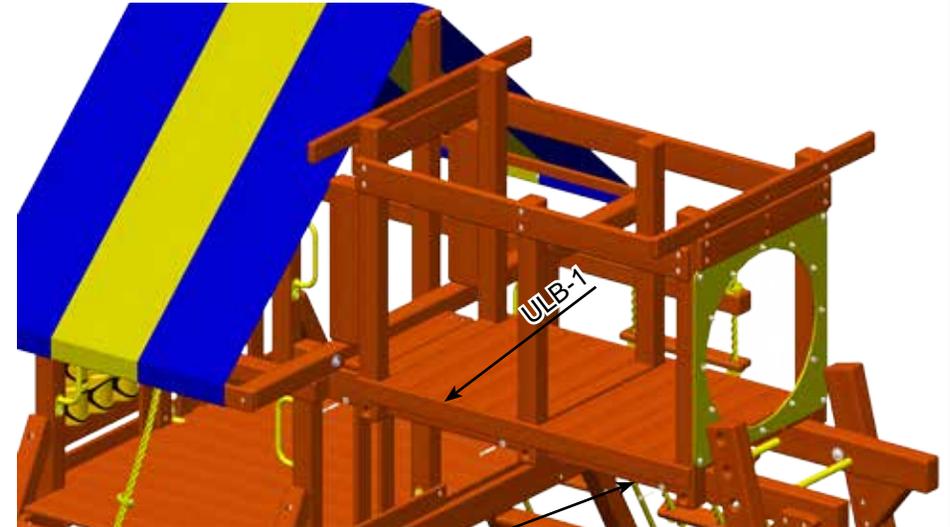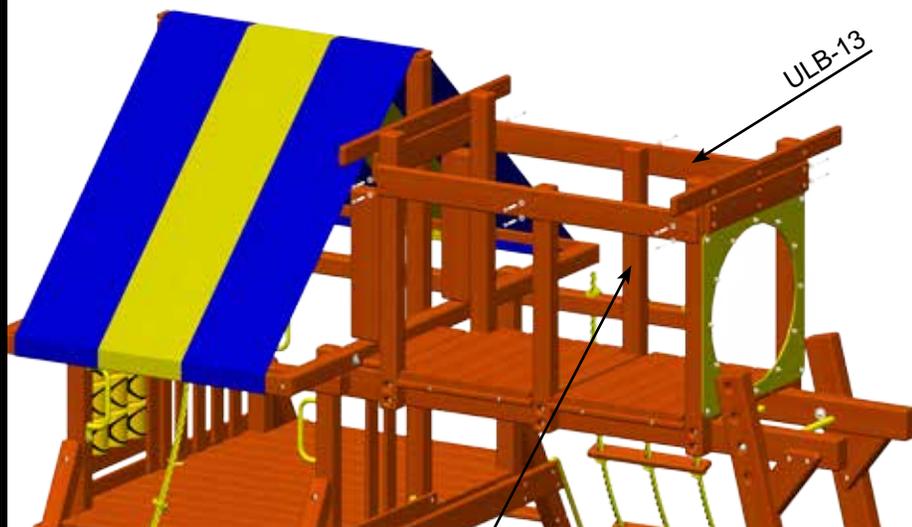

Universal Loft Install






PARTS NEEDED

ULB-3- Universal Rail Top-	(3)
ULB-2- Rail Spindle-	(15)
ULB-6- Rail Bottom-	(3)
Loft Rail-	(3)

HARDWARE NEEDED

ULH-1- 2 1/2" Coated Deck Screw-	(60)
ULH-4- 1/4" x 4 1/2" Hex Lag Screw-	(6)
ULH-3- 1/4" x 3" Hex Lag Screw-	(6)
ULH-6- 1/4" USS Flatwasher-	(12)

Make 3 of these Assemblies

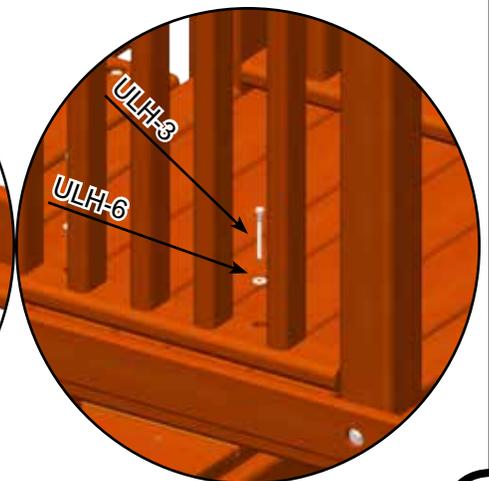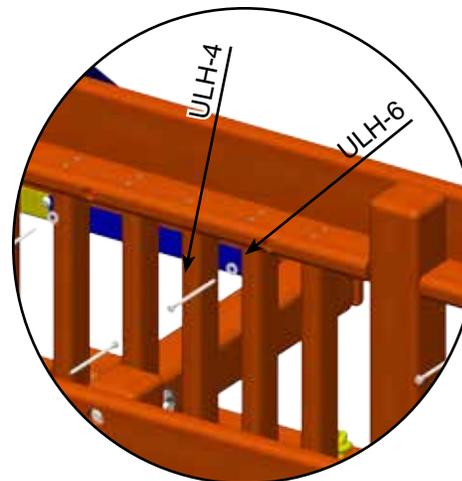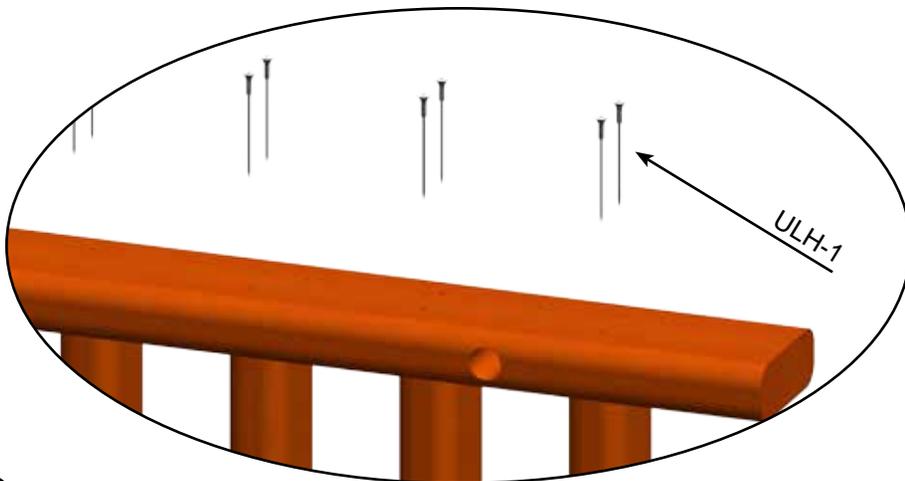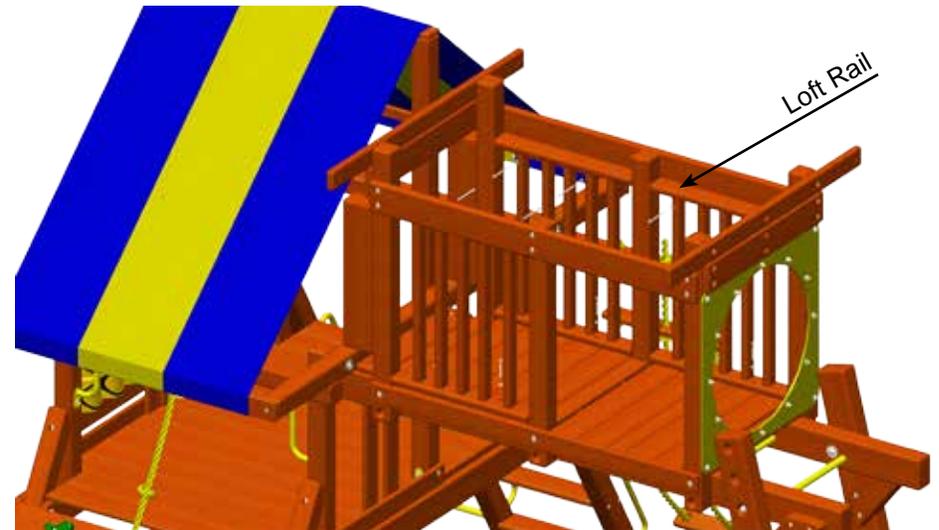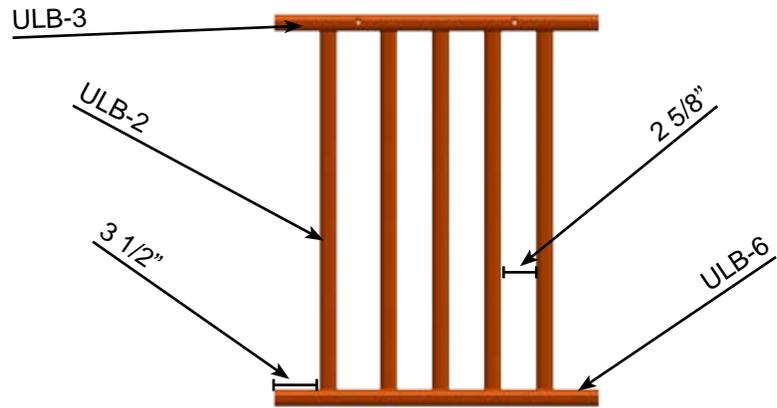






Universal Loft Tarp Install (Skip for Wood Roof Install)

PARTS NEEDED

- ULB-14- Tarp Upright- (2)
- ULB-9- Tarp Center- (1)
- ULB-10- Tarp Side Facia- (2)

HARDWARE NEEDED

- ULH-7- 3/8" USS Flatwasher- (6)
- ULH-5- 3/8" x 3 1/2" Hex Lag Screw- (6)
- ULH-1- 2 1/2" Coated Deck Screw- (8)
- ULH-4- 1/4" x 4 1/2" Hex Lag Screw- (2)
- ULH-6- 1/4" USS Flatwasher- (2)

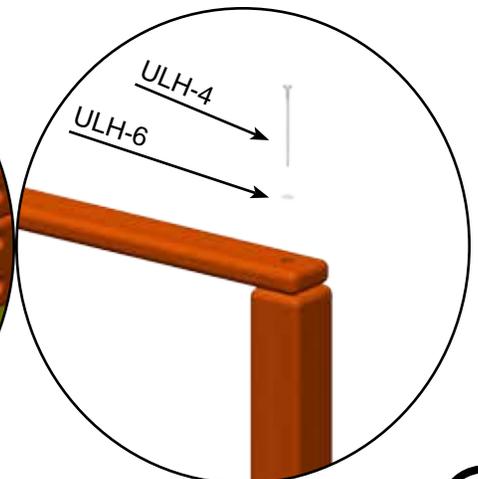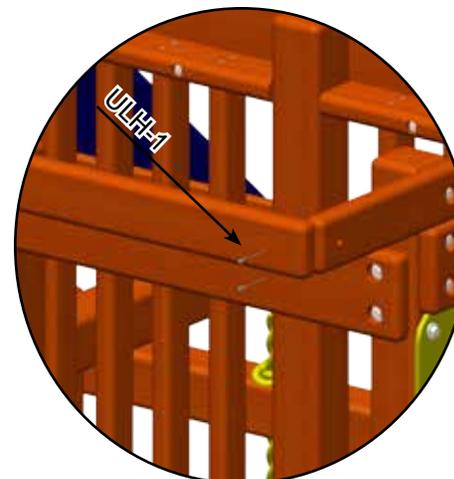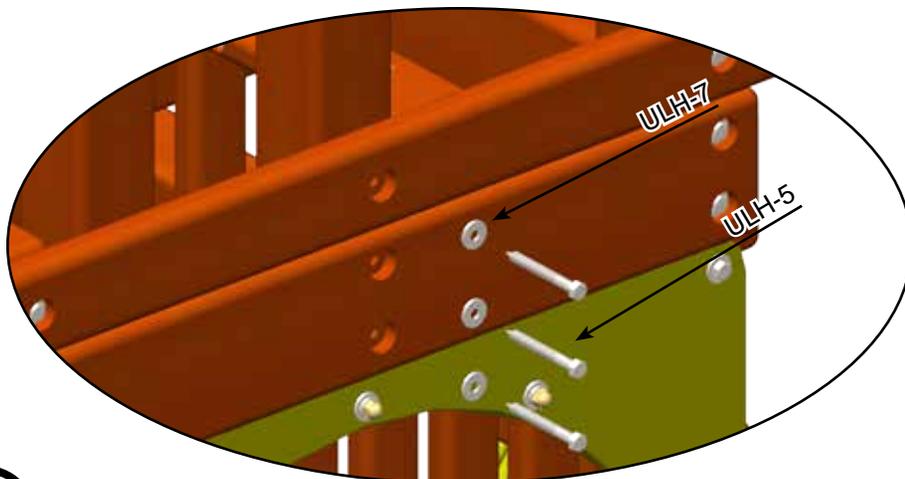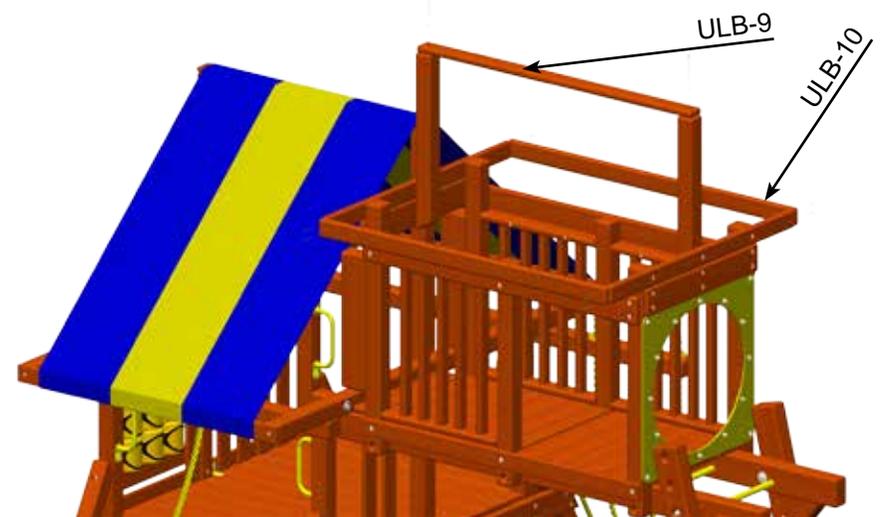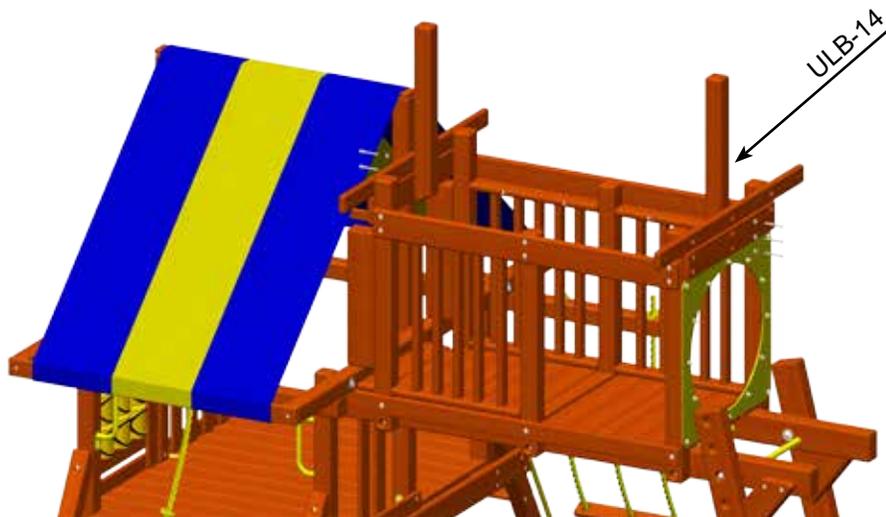

Universal Loft Tarp Install (Skip for Wood Roof Install)

PARTS NEEDED


Loft Tarp w/ Hardware-

(1)

HARDWARE NEEDED

Phillips Screw Snaps-

(8)

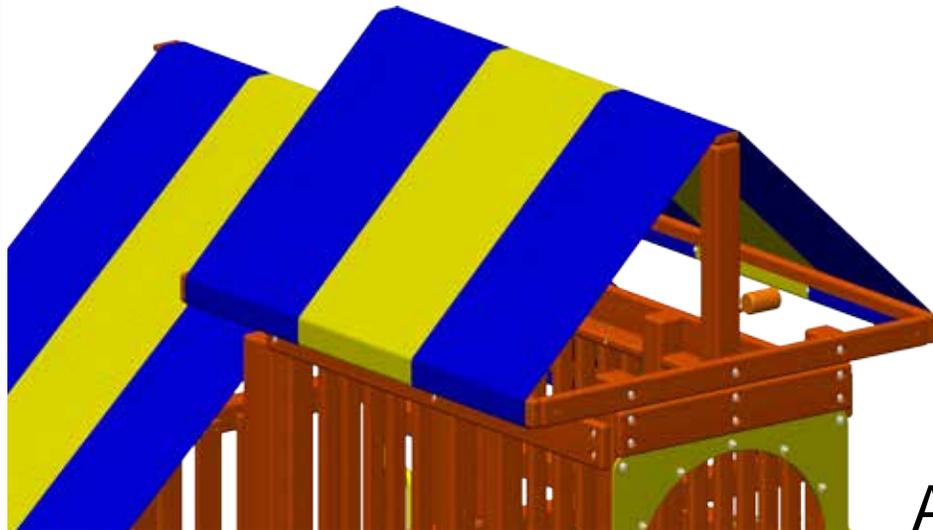

A




B

(Figure A.)- Take one corner of the VINYL TARP and place it flush in the corner. Tap the snap with a blunt object, leaving an indentation of the snap in the wood. Repeat this process until all the snaps have been indented in the wood on both sides of the Playcenter.

(Figure B.)- Using the indentions you just made with the snaps, take the 5/8" PHILLIPS SCREW SNAPS and drill one into each indentation.

(Figure C.)- Take the corner of the VINYL TARP and start placing the snaps on the PHILLIPS SCREW SNAPS. Fold the VINYL TARP over the top of the UNIVERSAL TARP BOARD. Pull tight and place the snaps on the PHILLIPS SCREW SNAPS.

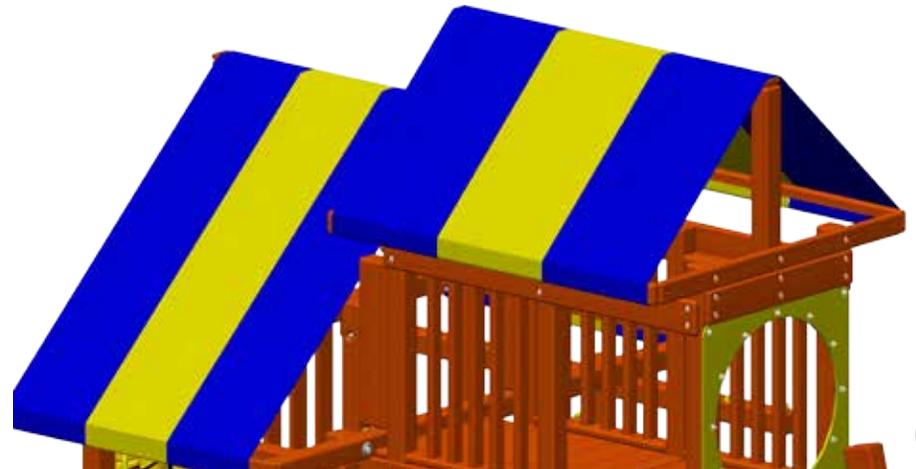

C

Universal Loft Wood Roof Install (Skip if Tarp Installed)





PARTS NEEDED

- ULWR-1- Short Fan Board- (4)
- ULWR-3- Bottom Fan Board- (2)
- ULWR-6- Fan Cap- (2)
- ULWR-7- Wood Roof Supports- (4)

HARDWARE NEEDED

- WRH-12- 1 1/2" Coated Deck Screw- (24)
- WRH-5- 3/8" Hex Nut- (4)
- WRH-9- 3/8" USS Flatwasher- (4)
- WRH-2- 3/8" x 3 1/2" Carriage Bolt- (4)
- WRH-1- 3/8" Acorn Nut Plated- (4)
- WRH-7- 3/8" Split Lockwasher- (4)
- WRH-10- 1/2" USS Flatwasher- (4)

Make 2 of these Assemblies

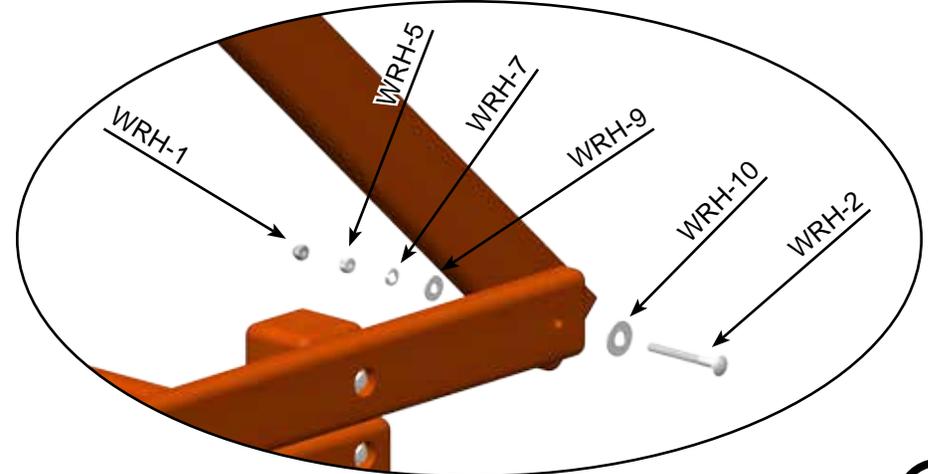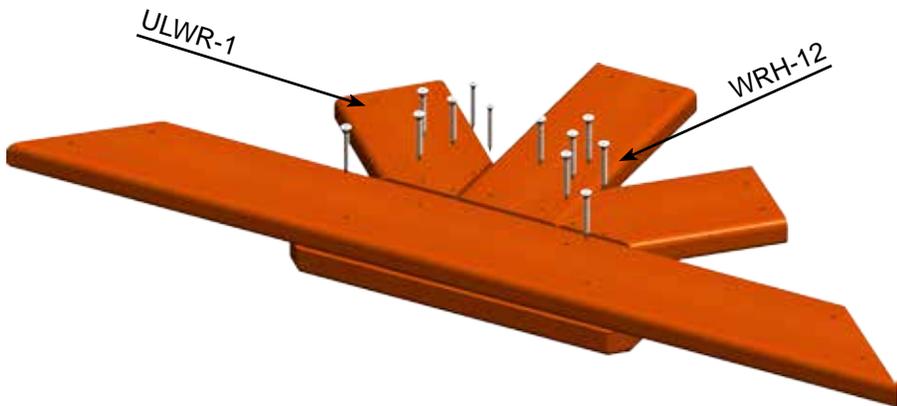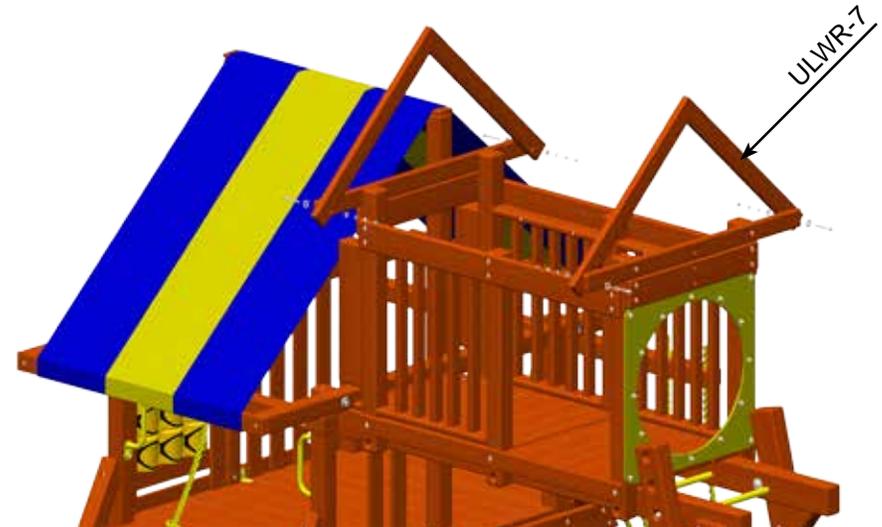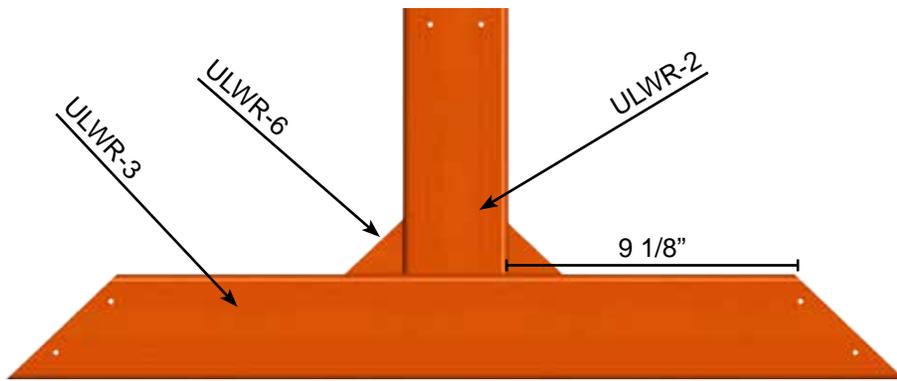





Universal Loft Wood Roof Install (Skip if Tarp Installed)

PARTS NEEDED

ULWR-5- Peak Support- (2)
Wood Roof Fan- (2)

HARDWARE NEEDED

WRH-11- 2" Coated Deck Screw- (8)
WRH-12- 1 1/2" Coated Deck Screw- (20)

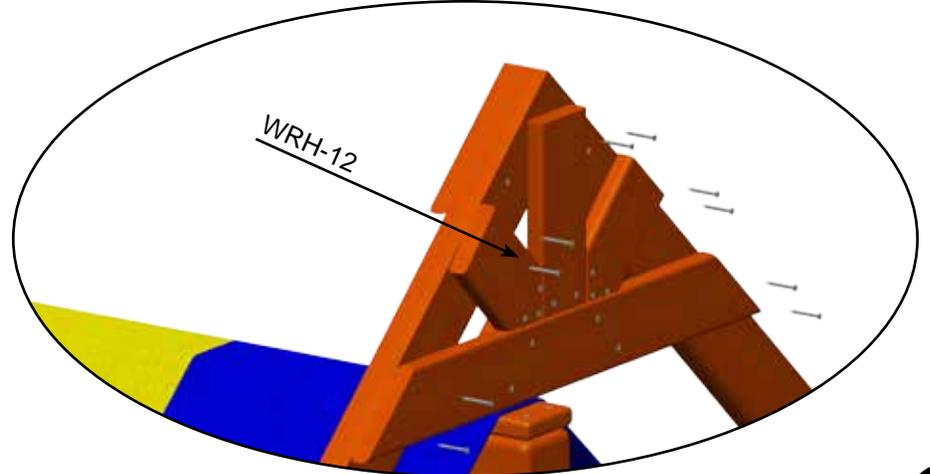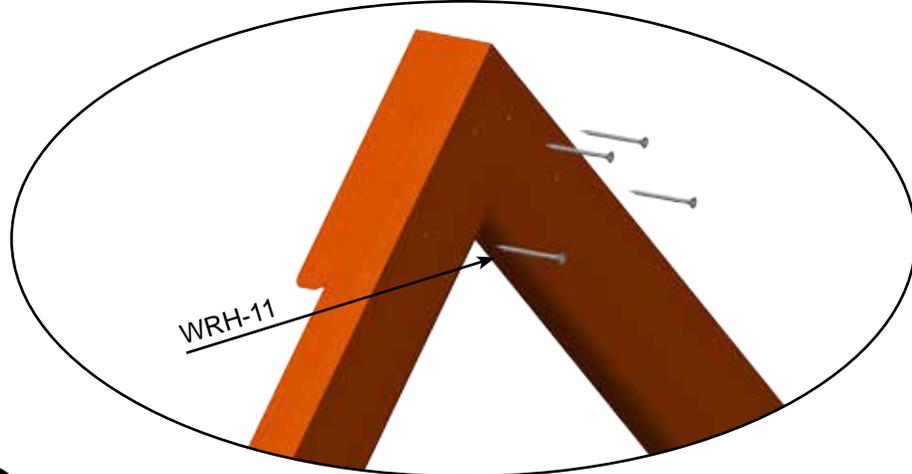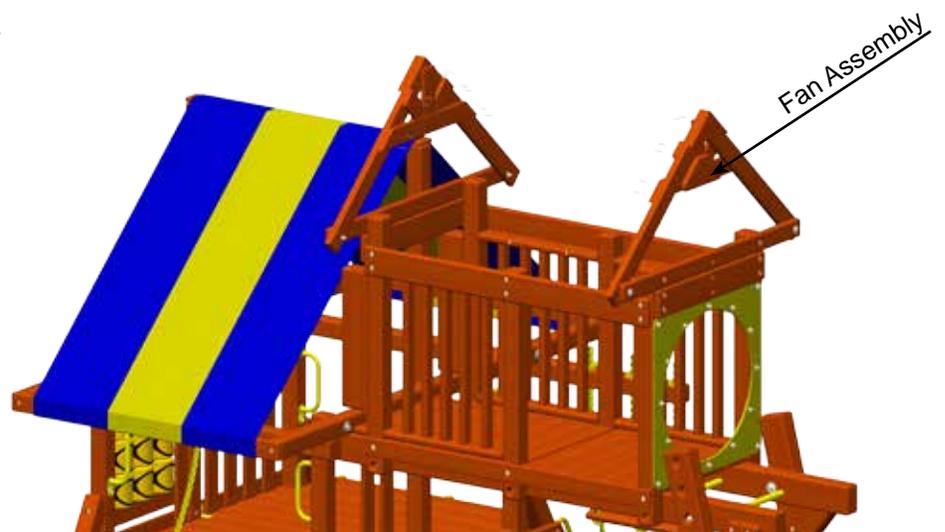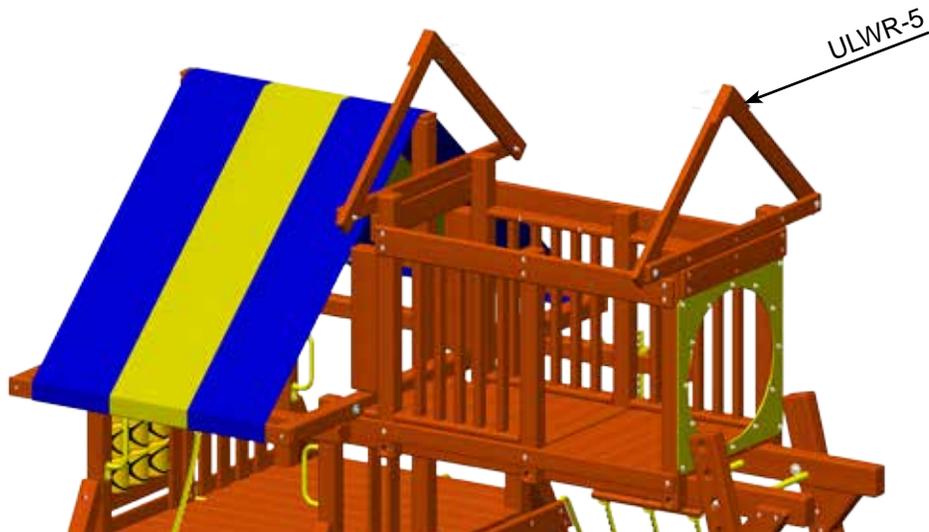

Universal Loft Wood Roof Install (Skip if Tarp Installed)

PARTS NEEDED




ULWR-8- Wood Roof Board- (10)

HARDWARE NEEDED

WRH-8- 3/8" 4- Prong T-Nut- (6)
WRH-5- 3/8" USS Flatwasher- (6)
WRH-6- 3/8" x 1" Hex Bolt- (6)
WRH-12- 1 5/8" Coated Deck Screw- (40)



Repeat for Both Sides

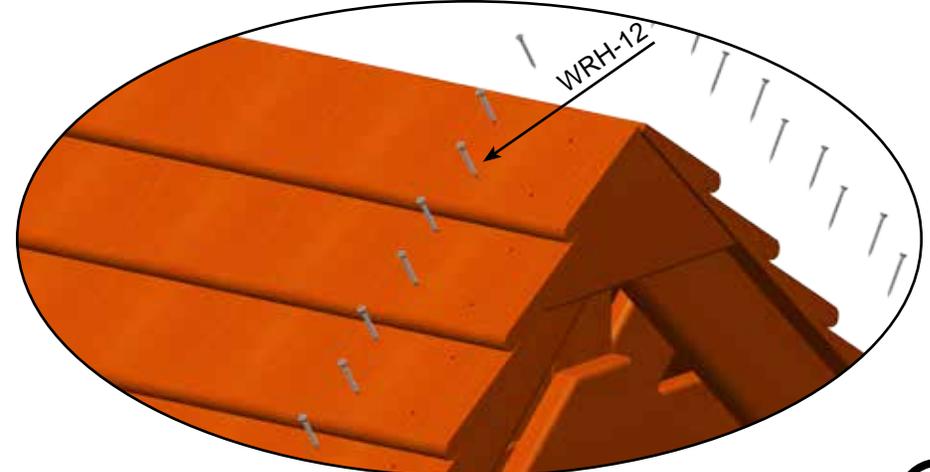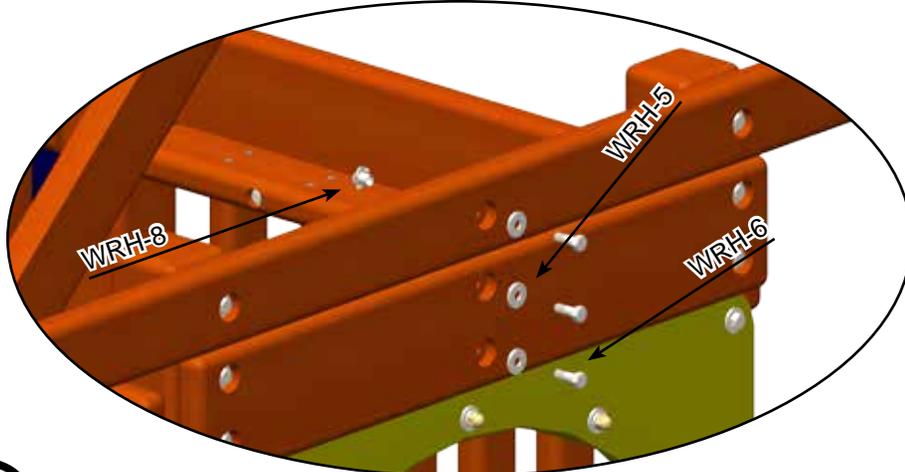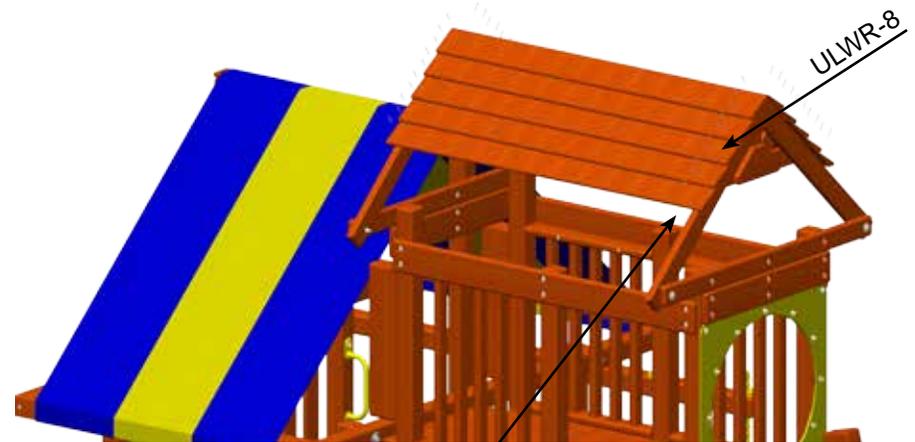

Universal Loft Wood Roof Install (Skip if Tarp Installed)


PARTS NEEDED

ULWR-4- Center Support- (2)
ULWR-8- Wood Roof Board- (8)




HARDWARE NEEDED

WRH-3- 1 1/4" Coated Deck Screw- (18)
WRH-12- 1 1/2" Coated Deck Screw- (32)

Repeat for Both Sides

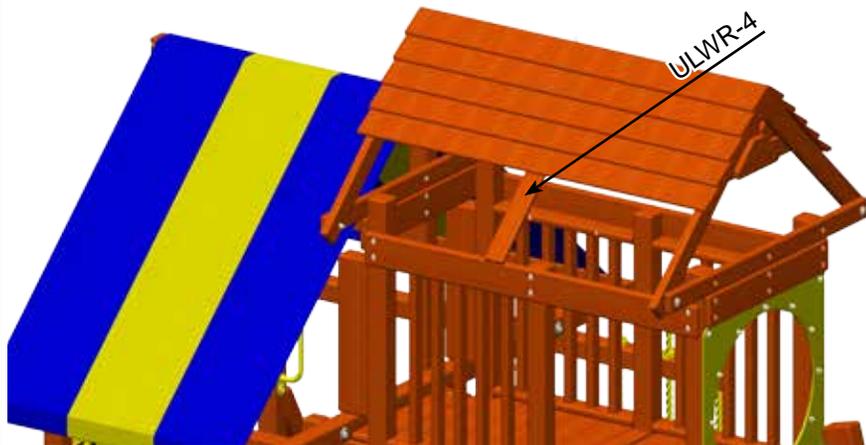

Repeat for Both Sides

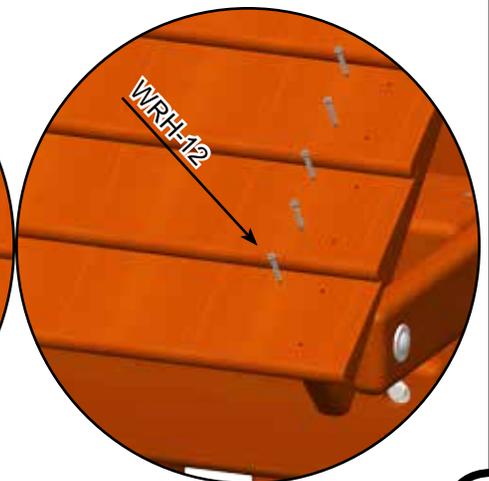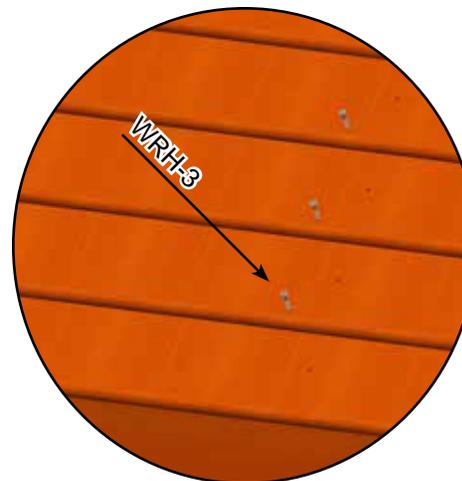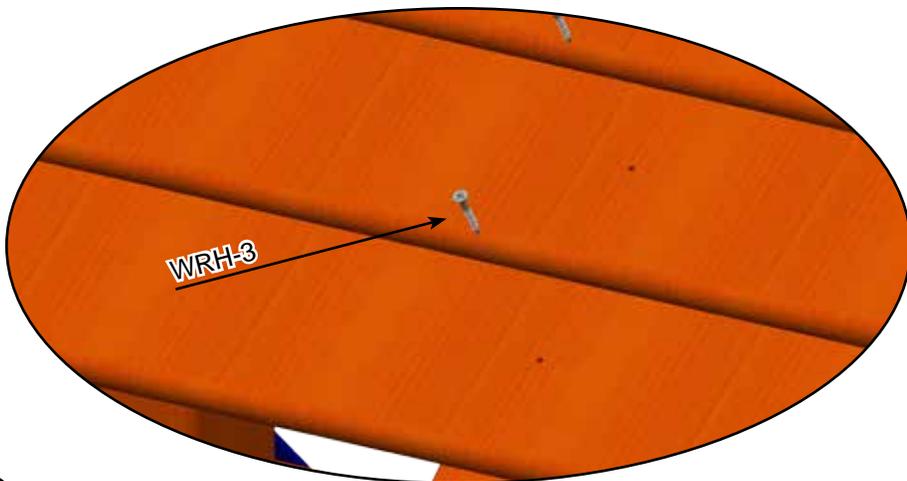

Universal Loft Install (For Spiral Install see Spiral Slide Install Manual)

PARTS NEEDED

SL-1- Spiral Slide Filler- (2)

HARDWARE NEEDED

SLH-1- 1/4" x 3" Hex Lag Screw- (4)

SLH-4- 1/4" USS Flatwasher- (4)

MBH-9- 1/4" USS Flatwasher- (4)

MBH-7- #14 x 2" Pan Phillips T/S- (4)

