


Toucan Playcenter Installation Manual

Version 1B.18

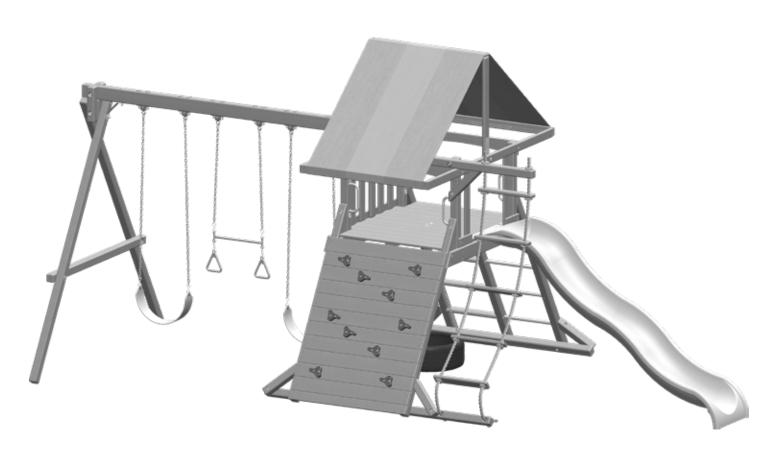

Tools Needed for Assembly

Tape Measure 24" Level Angle Square

Phillips Screw Driver 3/8" Cordless Drill or Electric Drill 3/8" Drive Ratchet or Electric Impact Gun

Claw Hammeror Rubber Mallet Pliers or Vise Grips 7/16" Deep Well Socket

9/16" Deep Well Socket 3/4" Deep Well Socket 1/8", 1/4", and 9/16" Drill Bits Phillips Head Screw Bits An Adult with two Adult Helpers

Please familiarize yourself with the install manual, parts/components and general construction process of your new swing set before getting started. Approximate assembly time: 6 to 8 hours. 6 foot unobstructed safety perimeter around swing set recommended.

IMPORTANT - PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or "cracks" in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty. Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please contact the Tree Frogs Swing Set Dealer that you purchased your swing set from.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

Pre-Assembly Hints

- Depending on your experience, assembly of our play sets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will
 have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate
 from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass.
 - This will save time and familiarize you with all the different pieces in the hardware bag.
 - **Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.**
- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- All 1/4" and 3/8" lag bolts must have pre-drilled holes 1-1/2" to 2" deep. Use a 1/8" drill bit for the 1/4" lag bolts and 1/4" drill bit for 3/8" lag bolts. Use pre-drilled holes in facias as a reference for placing lag bolt pilot holes.
- If a board lifts or rises causing a gap between boards when running in lag bolts or screws, back out the screw or lag bolt and press or apply pressure (but not enough to crack or break board) while re¬running in the lag bolt or screw in the same hole.
- Do not over tighten bolts, lag bolts or screws. You can damage boards, break hardware, and/or strip out the hardware.
- When using hammer do not beat on the hardware, but gently tap it in. Never beat on the wood as it will leave marks.

Leveling Your Swing Set During Assembly

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.

^{**} Important: if you require a channel depth of more than 6",then we recommend you have your play set area professionally graded before completing assembly. **

Choosing A Location For Your Playset

When choosing a location for your swing set, always keep your child or children's safety in mind. Here are some recommendations to help you locate and install a safe play area.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor; 3 occupants who have a combined weight of 525 pounds on the swing area; for a total Unit capacity of 5 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- The swing set should be located on level ground. The stationary components such as ladders and slides are required to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree, overhanging branches, electrical wires, clotheslines, etc. Any swinging equipment is also required to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. The swing set should be located a safe distance from any water hazards, such as a lake, river, bayou, swimming pool, etc.
- Do not install this residential swing set in a commercial setting. This swing set is not manufactured for commercial usage and will void all warranties. Tree Frogs Wooden Swing Set Factory is not responsible for any damages or injuries resulting from this swing set being used in a commercial setting.
- Never install this swing set indoors; or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.
- The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your swing set. The CPSC's Consumer Information Sheet for Playground Surfacing Materials is on the next page. A resilient surface, should be installed after the swing set has been completely assembled according to these instructions. The swing set must rest on solid ground. Please note that this swing set has a maximum fall height of 7'.

Maintaining Your Swing Set

Here are some maintenance tips required to insure safe play on your swing set for years of fun.

- At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for sign of deterioration and replace if necessary.
- On a yearly basis, we recommend that you coat your swing set with a sealant or preservative. You may also wantto spot sand any areas prior to sealing.
- ** Special note: Although we recommend that you reseal your swing set annually, you may have to touch up the high traffic areas and/or areas that have a high exposure to direct sunlight.**
- Be sure that the sealant you select is non-toxic and child safe. Your local Tree Frogs Wooden Swing Set Factory dealer may offer a complete power wash and reseal and maintenance program.
- Do not use line trimmers or "weed eaters" around your swing set. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.
- Remove plastic swing seats and take in doors or do not use when temperature drops below 0°F.

Please keep this install manual for future reference.

To insure SAFE PLAY adults must teach children:

- Not to walk close to, in front of, behind, or between moving items.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the swing set in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to stand in the swing seats.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the swing set any item that is not specifically designed for use with the
 equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and
 chains. These may become strangulation hazards.
- To hold on to swings and climbers with both hands.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the swing set.

To also insure SAFE PLAY adults must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitted shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose fitting clothing, neckties, and any clothing with a drawstring.
 Serious injury could result should any part of the children's clothing become entangled in the swing set.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.

Weight limits for Treefrogs Swingsets

Fort Platform: 800 Lbs. Total Weight. Swing Belts: 175 Lbs.

<u>Trapeze</u>: 125 Lbs. <u>Full Bucket Swing</u>: 50 Lbs.

<u>Toddler Bucket Swing</u>: 50 Lbs. <u>Tire Swing</u>: 125 Lbs. Total Weight

Rope Ladder: 75 Lbs. Rock Wall: 150 Lbs.

All Slides: 125 Lbs.

Tree Frogs recommends that the weight limits for all components must not be exceeded.

Failure to adhere to these and other safety guidelines could result in damage to the swing set.

and/or injury to the users.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. However, it should be recognized that some injuries from falls will occur no matter what playground surfacing material is used.

Playground equipment should never be placed on hard surfaces such as concrete or asphalt. Grass may appear to be acceptable, but can turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around play equipment.

MATERIAL	UNCOMPRESSED DEPTH			COMPRESSED DEPTH
	6 Inch	9 Inch	12 Inch	9 inch
Wood Chips	7	10	11	10
Double Shredded Bark Mulch	6	10	11	7
Engineered Wood Fibers	6	7	>12	6
Fine Sand	5	5	9	5
Coarse Sand	5	5	6	4
Fine Gravel	6	7	10	6
Medium Gravel	5	5	6	5
Shredded Tires**	10-12	N/A	N/A	N/A

TABLE 1 -CRITICAL HEIGHTS (in feet) OF TESTED MATERIAL

Table 1 should be read as follows: If, for example, uncompressed wood chips are used at a minimum of 6 inches, the Critical Height is 7 feet. If 9 inches of uncompressed wood chips are used, the Critical Height is 10 feet. It should be noted that, for some materials, the Critical Height decreases when the material is compressed. It is recommended that a shock absorbing material should extend a minimum of 6 feet in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability in your area, and its cost.

This information has been extracted from the CPSC publications "Playground Surfacing-Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to:

Office of Public Affairs
U.S. Consumer Product Safety Commission
Washington, D.C. 20207

Toll-free Hotline: 1-800-638-2772 or at http://www.cpsc.gov

^{**} This is data from tests conducted by independent testing laboratories on a 6 inch depth of uncompressed shredded tire samples produced by four manufacturers. The test reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

2018 TREE FROGS Limited Lifetime Warranty

Limited 10-Year Warranty, Limited 5-Year Warranty

Tree Frogs Warranties all Jaguar Playcenter Series, Bengal Forts Series, MegaDeck Fort Series Redwood components and Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for the period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product. The Redwood and Cedar components warranty is extended to a Limited Lifetime Warranty to the original owner upon registering this warranty within 90 days of purchase at www.treefrogsswingsets.com.

Tree Frogs Warranties all Parrot Island Fort Series, Parrot Island Playcenter Series, Rainforest Cottage Series Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

Tree Frogs Warranties all Toucan Fort Series, Toucan Playcenter Series, Orangutan Fort Series, Stand Alone Swings Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 5 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

In addition, a 10-Year Limited Warranty applies to all roto-molded slides, ductile iron swing hangers, tire swivels, metal climbing rungs and swing beam brackets against failure due to rust or failure in defect in material. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty.

Furthermore, a 5-Year Limited Warranty applies to all components & accessories including all swings, chain ladders, gliders, handles, brackets, bubble panels, tarps, steering/ships wheels, telescopes, binoculars, buoy ball, blow molded slides and disc seat that are not covered under the 10-Year Warranty to be free from defects in material and workmanship. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty.

And for a period of 1-Year Tree Frogs warranties all ropes, structural foam molded slides to be free of defects in material and workmanship. Fading is not considered a defect and may occur with seasonal and geographical conditions.

*10-Year Warranty Exclusion: Toucan Fort Series, Toucan Playcenter Series, Orangutan Series, Stand Alone Swings (Limite 5Yr/5Yr/1Yr WARRANTY).

This warranty is limited to a repair or replacement of the defective part. Product covered under this warranty will be shipped at the customer's expense. Tree Frogs is not responsible for any expense associated with freight, or delivery and installation of the warranted part(s). Tree Frogs reserves the right to inspect all warranty claim parts for which a claim has been made.

This limited warranty applies only to the original retail purchaser and for residential use only, non-residential use voids warranty. These warranties void when product is transferred or sold or no longer in possession by original owner. A copy of the original invoice must be presented to initiate warranty claim. This limited warranty does not cover damage from abuse, acts of God, vandalism, maintenance guideline neglect, alterations, normal wear & tear, use other than residential, unauthorized modification, damage due to moving of product or improper installation and or use. Any modification could damage the structural integrity of the play system and voids all warranties.

This warranty is exclusive and expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Tree Frogs does not assume, or authorize any person to assume for us, any other liability in connection with the sale of our products.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Register your play system's warranty at www.treefrogsswingsets.com.

Tree Frogs reserves the right at any time to change product specifications or substitute similar components.

See your instruction manual for guidelines on regular maintenance. http://treefrogsshowrooms.com/installation-manuals/. Your child's play system & perimeter play zone should be inspected regularly for any wear & safety hazards.

Toucan Playcenter

251-1 Box 2 of 3 End Tarp Board QTY. 2 251-2 Box 1 of 3 Slim Deck Board QTY. 2 251-3 Box 1 of 3 Front Rail Bottom QTY. 2 251-4 Box 1 of 3 Rail Picket QTY. 6

251-5 Box 1 of 3 Back Bottom Picket QTY. 1 251-6 Box 1 of 3 Bottom Rockwall Filler Board QTY. 1 251-7 Box 1 of 3 Center Tarp Board QTY. 1 251-8 Box 1 of 3 Rockwall Support QTY. 1

251-9 Box 1 of 3 End Deck Board QTY. 4 251-10 Box 1 of 3 1-Rock Rockwall Board QTY, 4 251-11 Box 1 of 3 2-Rock Rockwall Board QTY. 3 251-12 Box 1 of 3 Blank Rockwall Board QTY. 4



251-13 Box 1 of 3 Large Deck Board QTY. 6 251-14 Box 1 of 3 Side Arch QTY. 2 251-15 Box 1 of 3 Deck Support QTY. 1 251-16 Box 2 of 3 Front Top Joist QTY. 1

251-17 Box 1 of 3 Rope Ladder Rung QTY. 5 251-18 Box 1 of 3 Front Center Post QTY. 1 251-19 Box 1 of 3 Center Post QTY. 1 251-20 Box 1 of 3 Ladder Step QTY. 4

251-21 Box 1 of 3 T-Nut Mainbeam QTY. 2 251-22 Box 1 of 3 Mainbeam QTY. 2 251-23 Box 2 of 3 Small A-Frame Block QTY. 1 251-24 Box 2 of 3 A-Frame Block QTY. 1






251-25 Box 2 of 3 A-Frame Block Sunk QTY. 1 251-26 Box 2 of 3 Left Gusset QTY. 2 251-27 Box 2 of 3 Right Gusset QTY. 2 251-28 Box 2 of 3 Trapeze Gusset QTY. 1



251-29 Box 2 of 3 Back Corner Post QTY. 1



251-31 Box 2 of 3 Back Rope Ladder Corner Post QTY. 1 251-32 Box 2 of 3 Front Rope Ladder Corner Post QTY. 1



251-33
Box 1 of 3
Center Step/ Pipe Ladder Leg
QTY. 1

251-34 Box 2 of 3 A-Frame Crossmember QTY, 1 251-35 Box 2 of 3 Ground Runner QTY. 1

251-36 Box 2 of 3 Left Pipe Ladder Leg

Toucan Playcenter

251-37 Box 2 of 3 Right Step Ladder Leg QTY. 1 251-38 Box 2 of 3 Rockwall Leg QTY. 2 251-39 Box 2 of 3 Upper Rope Arm QTY. 1 251-40 Box 2 of 3 Swingbeam Top Joist QTY. 1

251-41 Box 2 of 3 Rope Ladder Runner QTY. 1 251-42 Box 2 of 3 A-Frame Leg QTY. 2 251-43 Box 2 of 3 Swingbeam QTY. 1




558-1 Box 1 of 1 Fan Board #1 QTY. 4 558-2 Box 1 of 1 Fan Bottom QTY. 2 558-3 Box 1 of 1 Center Tarp Board QTY. 1 558-4 Box 1 of 1 Center Support QTY. 2

558-5 Box 1 of 1 End Wood Roof Board QTY. 2 558-6 Box 1 of 1 Fan Plate QTY. 2 558-7 Box 1 of 1 Wood Roof Board QTY. 20 558-8 Box 1 of 1 Wood Roof Support QTY. 4

Toucan Playcenter

251-A Spiral Ground Anchor QTY. 6



251-C 120 Degree Bracket QTY. 2

251-D 1" Playgrip Safety Handle QTY. 4









251-E 90 Degree Bracket QTY. 2

251-F T-Bracket QTY. 1

251-G 15' Yellow Rope QTY. 2

251-H Tire Swivel QTY. 1









251-I 34" PC Coated Chain QTY. 3


251-J Tire Swing Eye Bolt QTY. 3

251-K 16" Trapeze Bar w/ Rings QTY. 1

251-L Swingbeam Tri-Plate QTY. 1





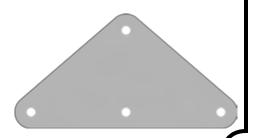

Toucan Playcenter

251-M 45 Degree Bracket QTY. 1

251-N Ductile Iron Swing Hanger QTY. 6

251-O Rockwall Rocks QTY. 10

251-P Chained Belt Swing QTY. 2







251-Q Telescope QTY. 1

251-R Ship's Wheel QTY. 1











251-HWR-BAG (TOUCAN PLAYCENTER HARDWARE BAG) INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

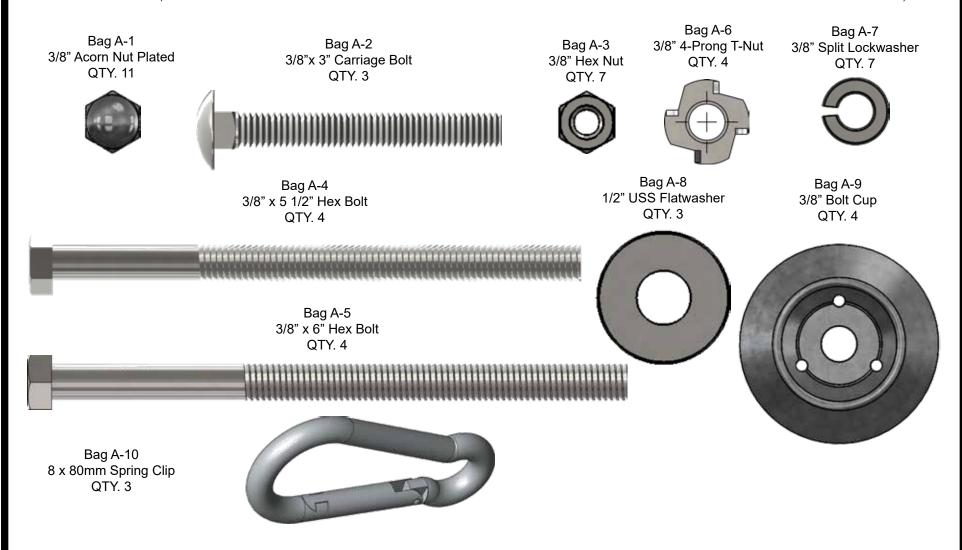

Note: Hardware Pictures above may not be to scale, please use a Tape Measure to Verify Length. Measurement should be taken from the bottom of the bolt head to the bottom of the bolt.

> **NOTE: HARDWARE PICTURES ARE FOR ILLUSTRATIVE PURPOSES ONLY AND MAY DIFFER FROM THE ACTUAL PRODUCT. FOR EXAMPLE - TREAD COUNT AND LENGTH OF TREAD ON BOLT. ***

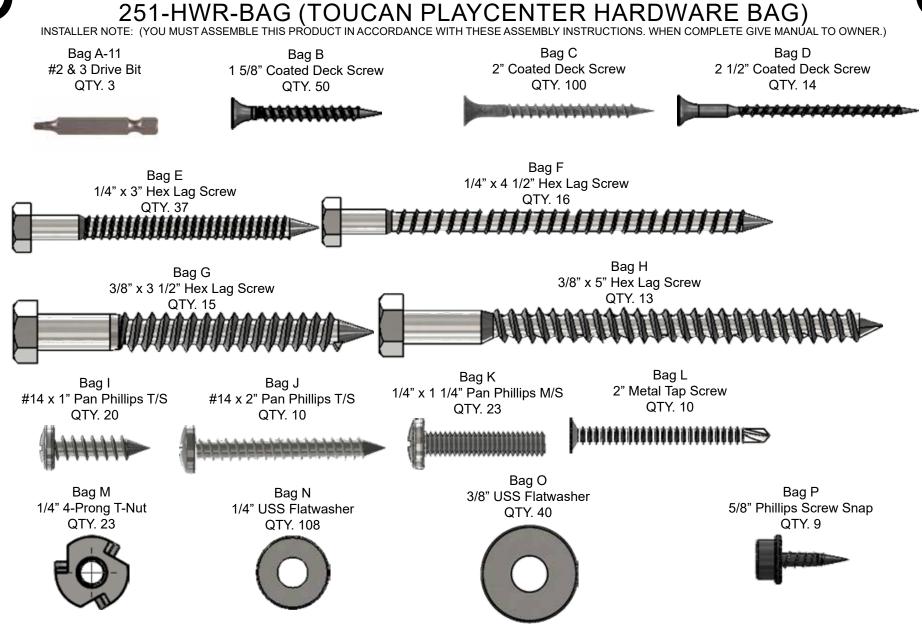


***Note: Hardware Pictures above may not be to scale, please use a Tape Measure to Verify Length.


Measurement should be taken from the bottom of the bolt head to the bottom of the bolt.***

**NOTE: HARDWARE PICTURES ARE FOR ILLUSTRATIVE PURPOSES ONLY AND MAY DIFFER FROM THE ACTUAL PRODUCT.
FOR EXAMPLE - TREAD COUNT AND LENGTH OF TREAD ON BOLT. ***


251-SB-HWR (TOUCAN PLAYCENTER SWINGBEAM HARDWARE BAG) INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

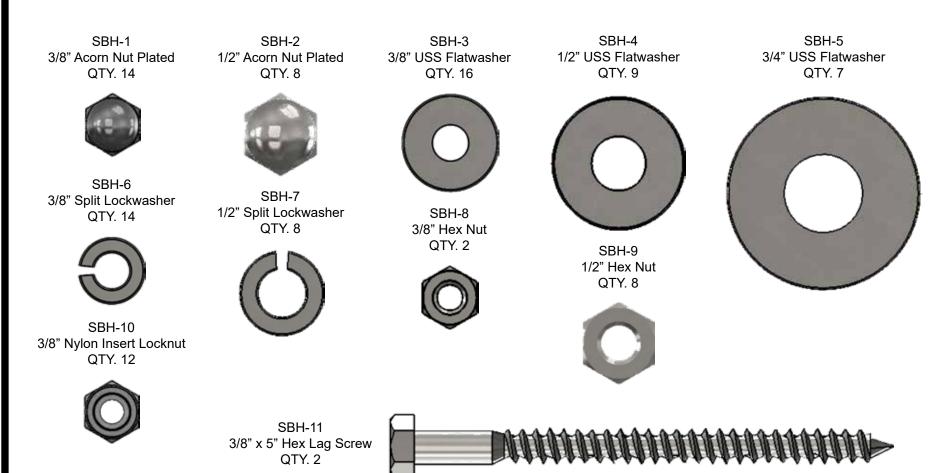

Note: Hardware Pictures above may not be to scale, please use a Tape Measure to Verify Length. Measurement should be taken from the bottom of the bolt head to the bottom of the bolt.

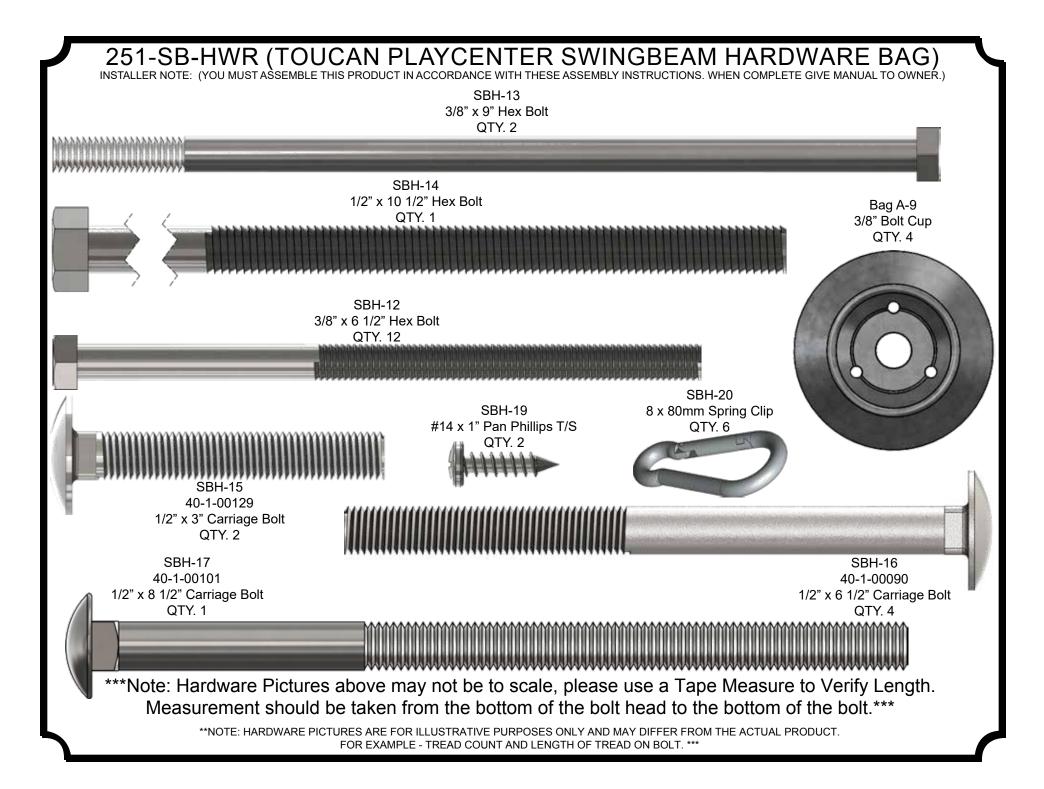

558-HWR-BAG (TOUCAN PLAYCENTER WOOD ROOF HARDWARE BAG) INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

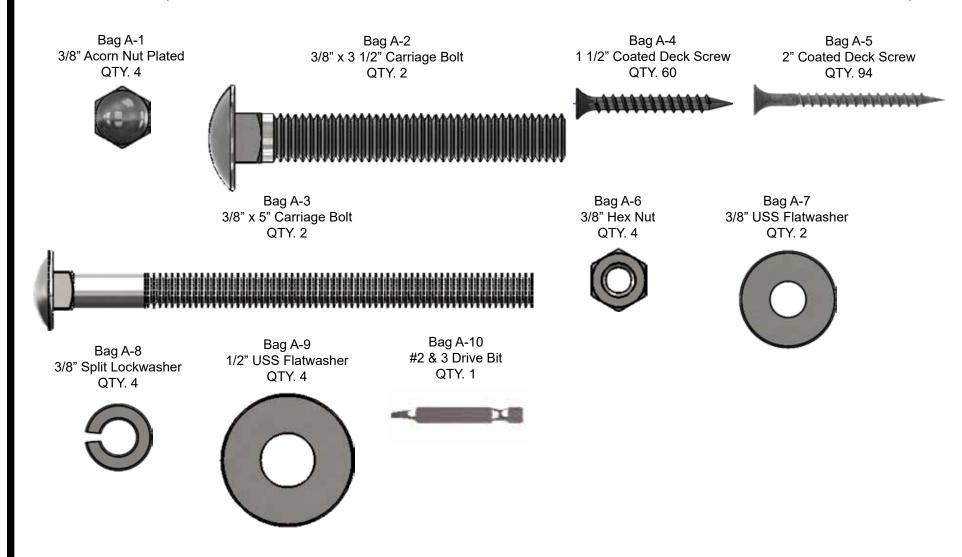


Note: Hardware Pictures above may not be to scale, please use a Tape Measure to Verify Length. Measurement should be taken from the bottom of the bolt head to the bottom of the bolt.

PARTS NEEDED

HARDWARE BAG NEEDED

251-33- Center Step/ Pipe Ladder Leg-	(1)
251-37- Right Step Ladder Leg-	(1)
251-20- Ladder Step-	(4)
251-36" Left Pipe Ladder Leg-	(1)
251-B- 1 1/4" x 22 1/4" Playgrip Tube-	(4)

N- 1/4" USS Flatwasher-(16)F- 1/4" x 4 1/2" Hex Lag Screw-(16) L- 2" Metal Tap Screw-(8)

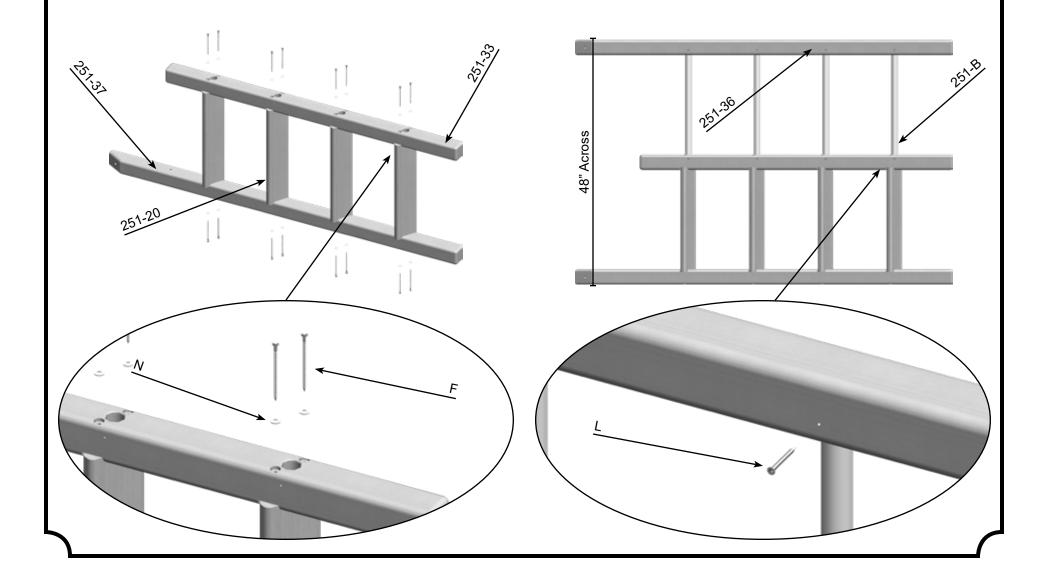

PARTS NEEDED


HARDWARE BAG NEEDED

251-35- Ground Runner-251-27- Right Gusset(1) (1) (1)

H- 3/8" x 5" Hex Lag Screw-

251-26- Left Gusset-

O- 3/8" USS Flatwasher-

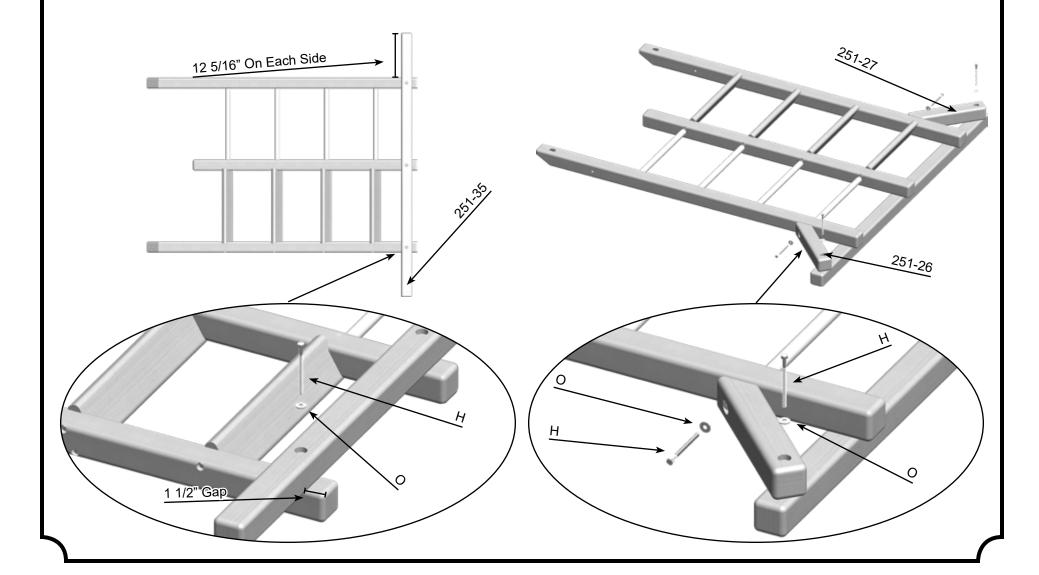

PARTS NEEDED

HARDWARE BAG NEEDED

(48)

(4)

K- 1/4" x 1 1/4" Pan Phillips M/S-


(3) (2) (4) (1) 251-11- 2- Rock Rockwall Board-251-38- Rockwall Ladder Leg-

(20) (20) N- 1/4" USS Flatwasher-(20) M- 1/4" 4-Prong T-Nut-

251-12- Blank Rockwall Board-

C- 2" Coated Deck Screw-

251-6- Bottom Rockwall Filler Board-

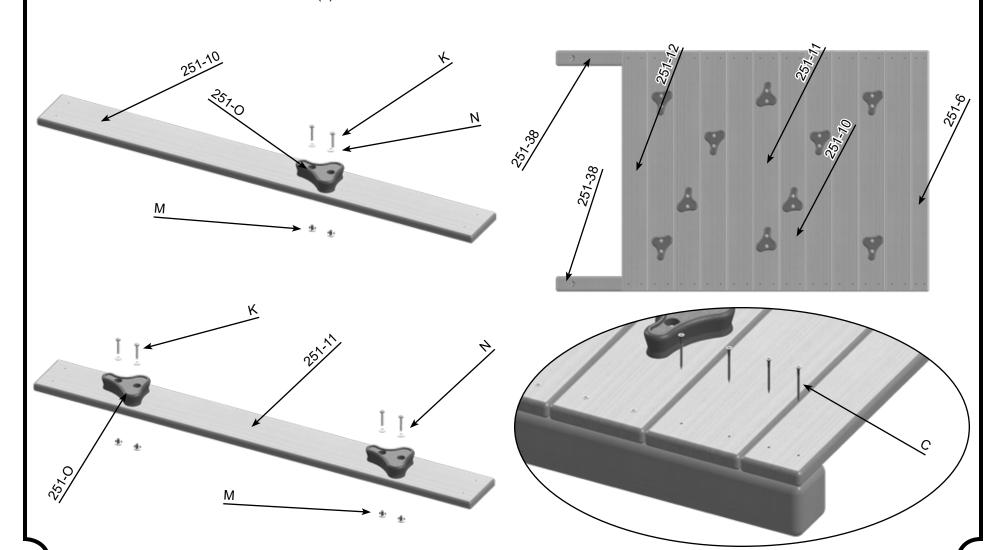

PARTS NEEDED

HARDWARE BAG NEEDED

251-8- Rockwall Support-251-41- Rope Ladder Runnger-


(1) (1)

B- 1 5/8" Coated Deck Screw-

H- 3/8" x 5" Hex Lag Screw-

(12) (2) (2)

O- 3/8" USS Flatwasher-

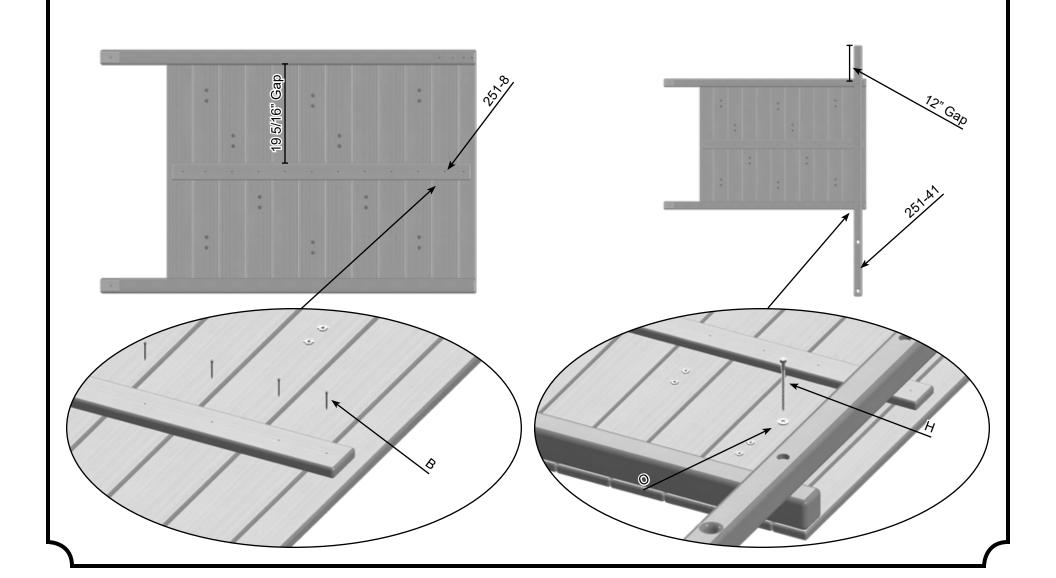

PARTS NEEDED

HARDWARE BAG NEEDED

(8)

251-27- Right Gusset-

O- 3/8" USS Flatwasher-

H- 3/8" x 5" Hex Lag Screw-

251-26- Left Gusset-

A-4- 3/8" x 5 1/2" Hex Bolt-

(4) A-6- 3/8" 4-Prong T-Nut-

251-21- T-Nut Mainbeam-


(2) (2)

A-1- 3/8" Acorn Nut Plated-

(4)

251-22- Mainbeam-


(4)

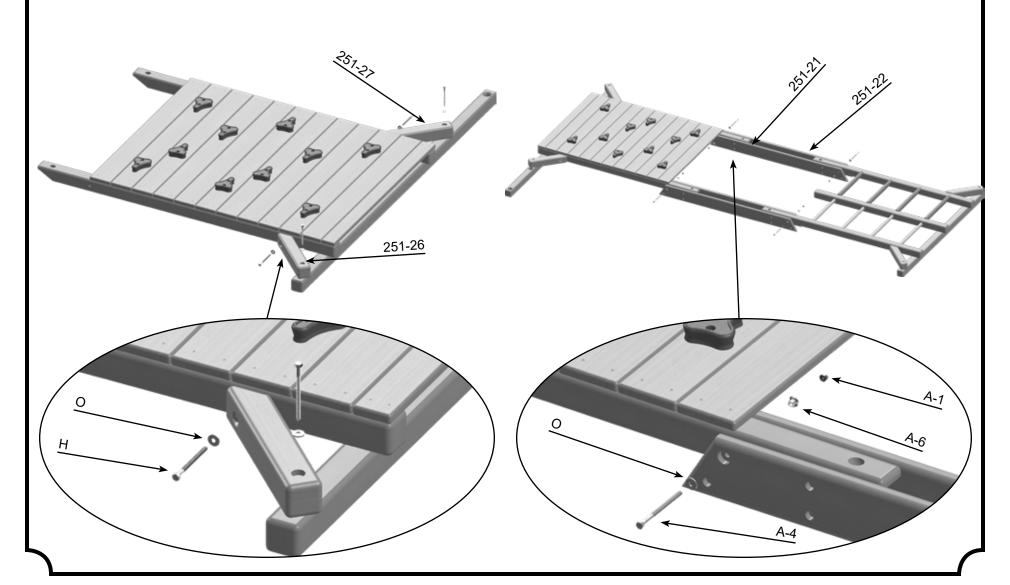

PARTS NEEDED

HARDWARE BAG NEEDED

251-29- Back Corner Post-	(1)	N- 1/4" USS Flatwasher-	(24)
251-30- Front Corner Post-	(1)	E- 1/4" x 3" Hex Lag Screw-	(24)
251-31- Back Rope Ladder Corner Post-	(1)		
251-32- Front Rope Ladder Corner Post-	(1)		

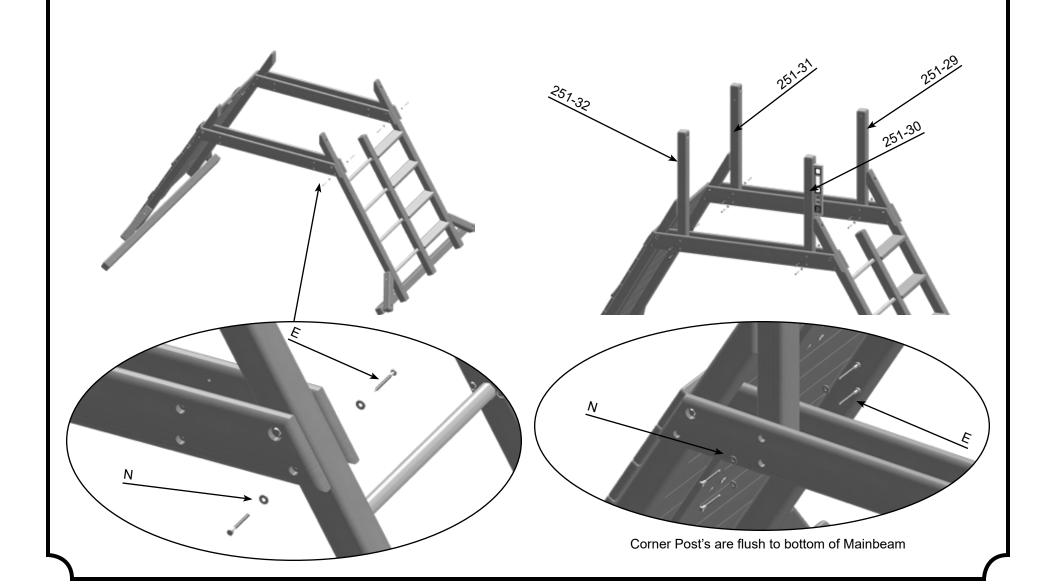

PARTS NEEDED


HARDWARE BAG NEEDED

251-9- End Deck Board-

(4)

(4) (4) (16) O- 3/8" USS Flatwasher-G- 3/8" x 3 1/2" Hex Lag Screw-

E- 2" Coated Deck Screw-

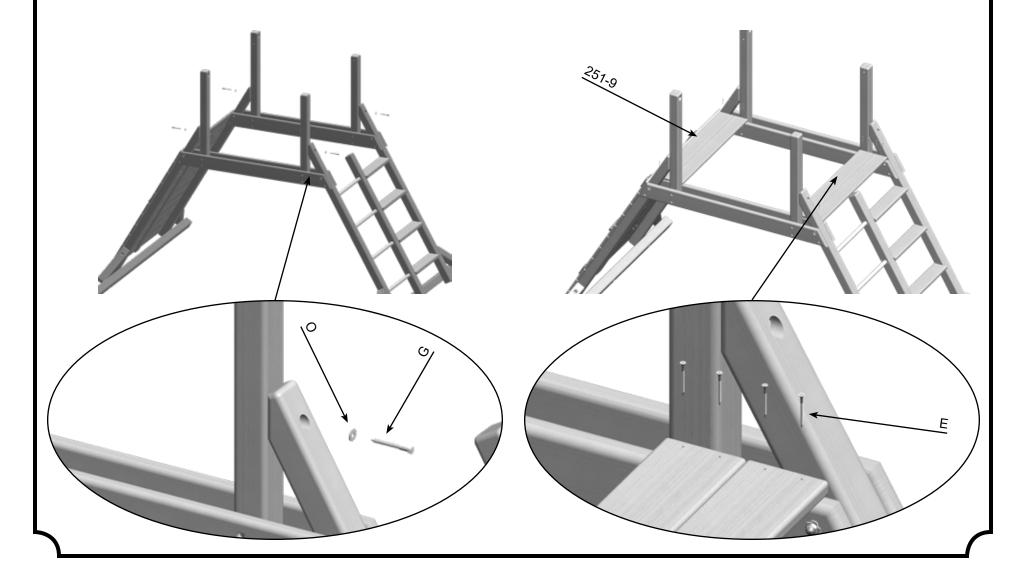

PARTS NEEDED

HARDWARE BAG NEEDED

251-13- Large Deck Board-251-2- Slim Deck Board-


(6) (2) (1)

251-15- Deck Support-

C- 2" Coated Deck Screw-

(32) (12)

B- 1 5/8" Coated Deck Screw-

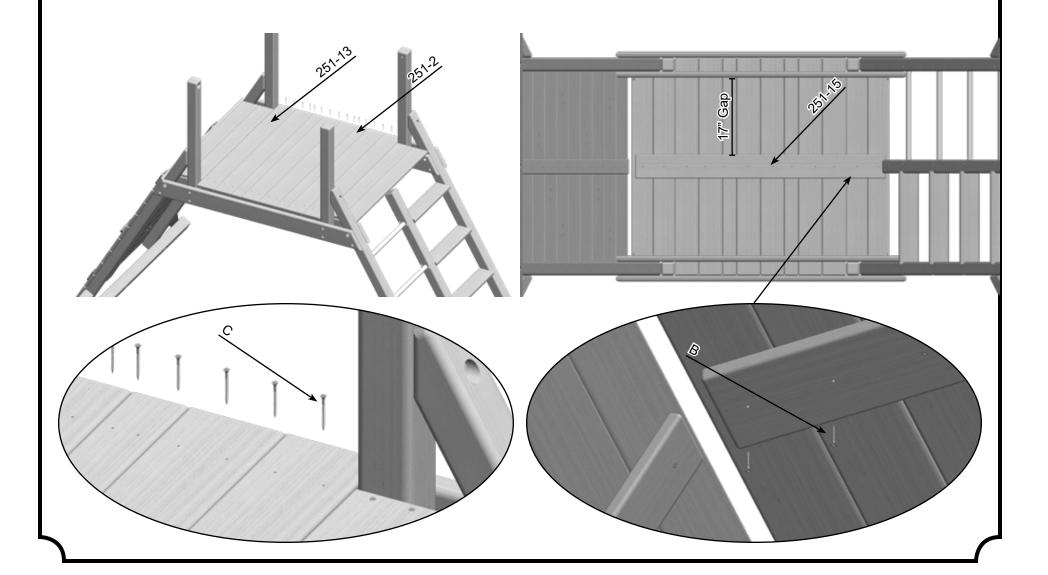

PARTS NEEDED

HARDWARE BAG NEEDED


251-40- Swingbeam Top Joist-251-C- 120 Degree Bracket-

- (1) (2) N- 1/4" USS Flatwasher-
 - A-1- 3/8" Acorn Nut Plated-
 - A-7- 3/8" Split Lockwasher-
 - A-9- 3/8" Bolt Cup-

- I- #14 x 1" Pan Phillips T/S-
- (2) A-3- 3/8" Hex Nut-
- O- 3/8" USS Flatwasher-(2) (2)
- (2) A-5- 3/8" x 6" Hex Bolt-

(8)

(2)

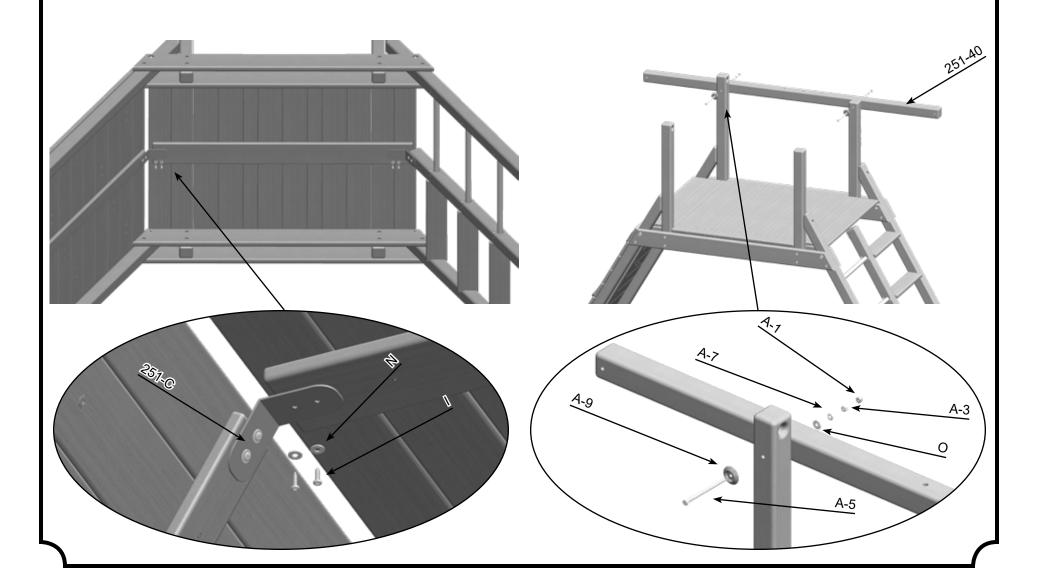

PARTS NEEDED

HARDWARE BAG NEEDED

251-39- Upper Rope Arm-

(1) (1)

A-5- 3/8" x 6" Hex Bolt-

(2) (4) A-9- 3/8" Bolt Cup-

251-16- Front Top Joist-

O- 3/8" USS Flatwasher-


A-7- 3/8" Split Lockwasher-

(2) (2) (2)

A-3- 3/8" Hex Nut-

(2) A-1- 3/8" Acorn Nut Plated-

G- 3/8" x 3 1/2" Hex Lag Screw-

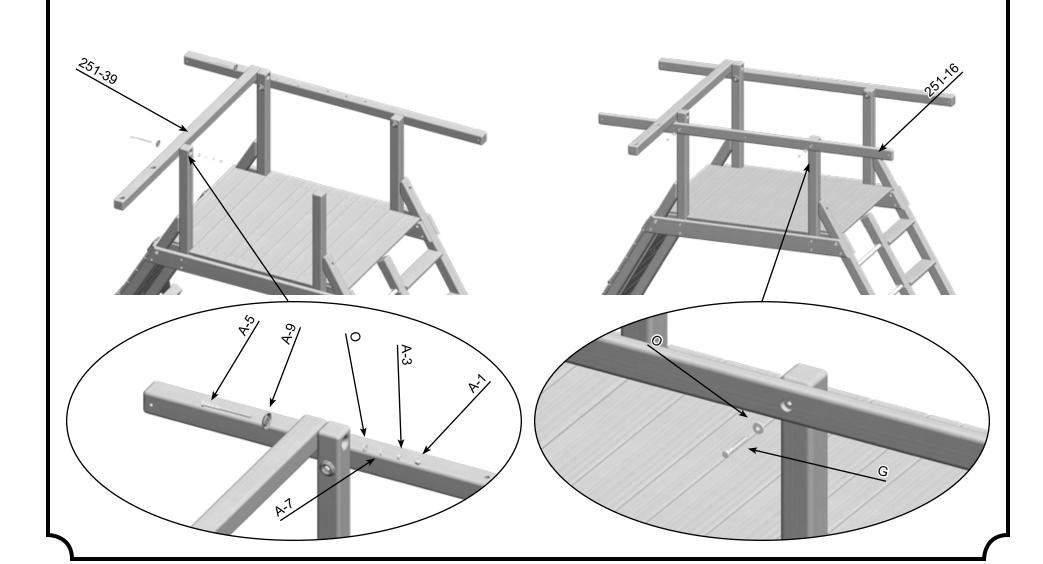

PARTS NEEDED

HARDWARE NEEDED


251-14- Side Arch-

N- 1/4" USS Flatwasher-

(10) (10)

251-5- Back Bottom Picket Support-

E- 1/4" x 3" Hex Lag Screw-

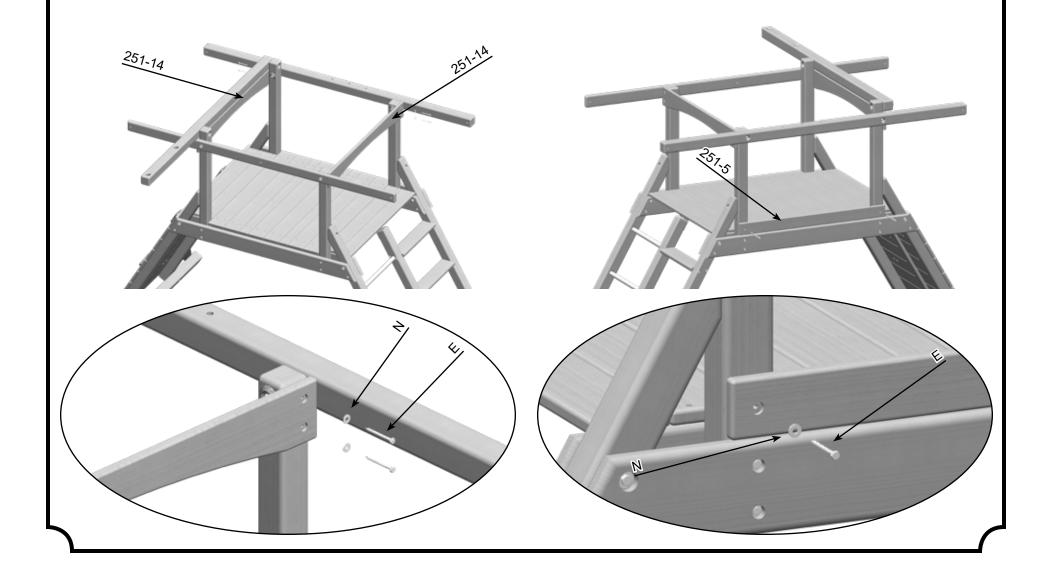


PARTS NEEDED

HARDWARE BAG NEEDED

251-3- 9 1/2" Front Rail Bottom-251-18- Front Center Post-251-F- T-Bracket-

- (2) N- 1/4" USS Flatwasher-A-2- 3/8" x 3" Carriage Bolt-
- (1) (1) O- 3/8" USS Flatwasher-A-3- 3/8" Hex Nut-
 - E- 1/4" x 3" Hex Lag Screw-

- I- #14 x 1" Pan Phillips T/S-(6)
- (1) (1) A-8- 1/2" USS Flatwasher-
- (1) (1) (1) A-7- 3/8" Split Lockwasher-
- (1) A-1- 3/8" Acorn Nut Plated-(2)

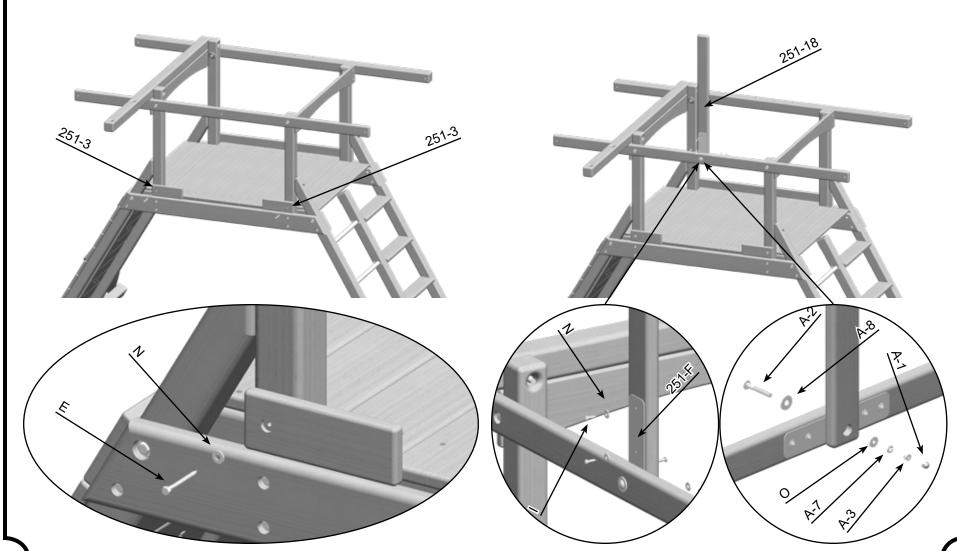

PARTS NEEDED

HARDWARE BAG NEEDED

251-19- Center Post-(1) (2) 251-4- Rail Picket-

O- 3/8" USS Flatwasher-


G- 3/8" x 3 1/2" Hex Lag Screw-

(1)

C- 2" Coated Deck Screw-

(2)

B- 1 5/8" Coated Deck Screw-

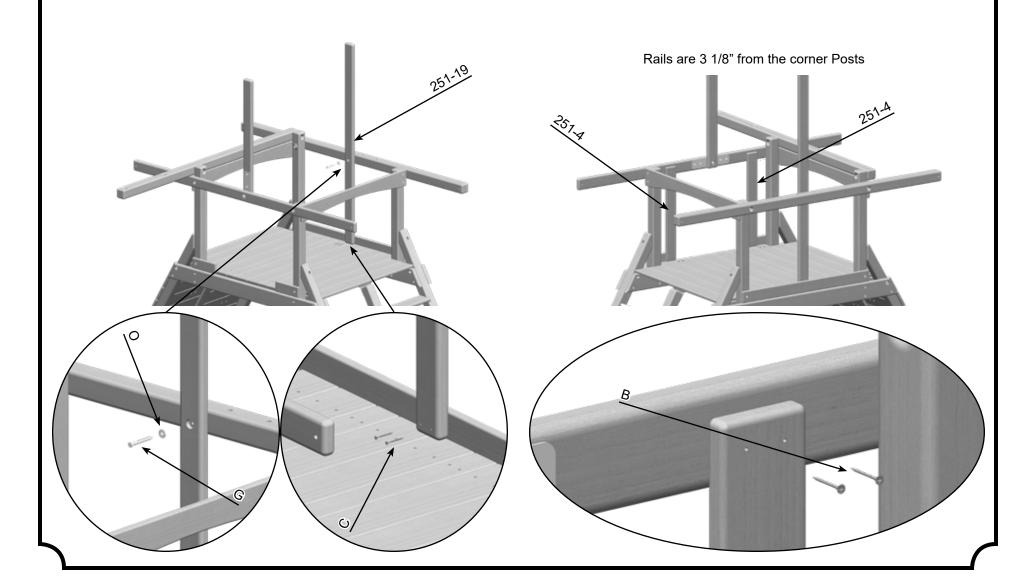

PARTS NEEDED

HARDWARE BAG NEEDED


251-4- Rail Picket-251-28- Trapeze Gusset(4) (1)

B- 1 5/8" Coated Deck Screw-

O- 3/8" USS Flatwasher-

(16) (2) (2)

G- 3/8" x 3 1/2" Hex Lag Screw-

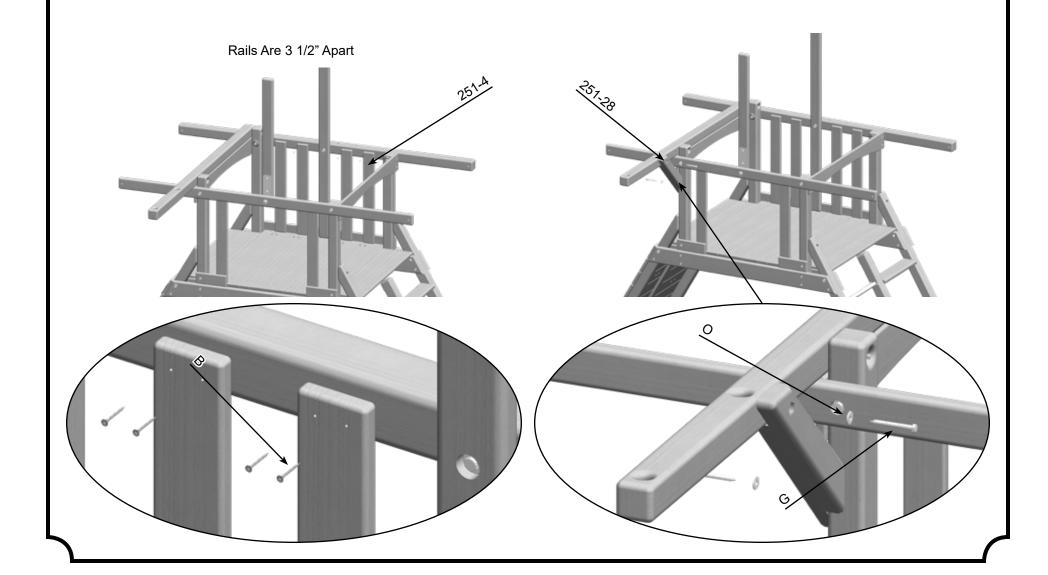

PARTS NEEDED

HARDWARE BAG NEEDED


251-1- End Tarp Board-251-7- Center Tarp Board(2) (1) D- 2 1/2" Coated Deck Screw-


(12)

P- 5/8" Phillips Snap Screw-


(8)

(For Wood Roof Skip this Step)

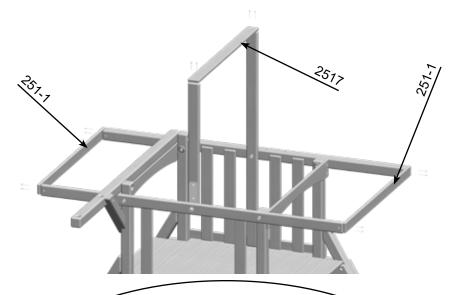

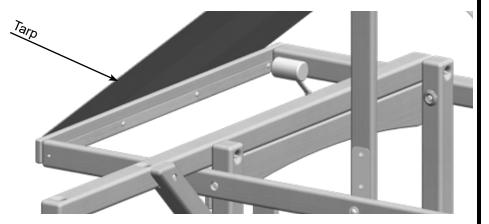

Stretch Tarp over the Tarp Boards and Mark the Button Locations

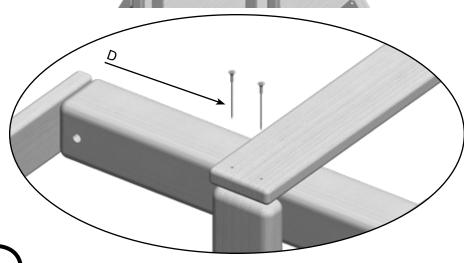



Using a Phillips Head screw the 5/8" Tarp Snaps in the marks and Place the Tarp on the Snaps

PARTS NEEDED


HARDWARE BAG NEEDED

251-G- 15' Yellow Rope-251-L- Swingbeam Tri-Plate-251-17- Rope Ladder Rung-


- SBH-15- 1/2" x 3" Carriage Bolt-(2)
- (2) (2) SBH-5- 3/4" USS Flatwasher-(2) (2)
- (1) SBH-4- 1/2" USS Flatwasher-
- SBH-7- 1/2" Split Lockwasher-

(5) SBH-9- 1/2" Hex Nut(2) SBH-2- 1/2" Acorn Nut Plated-

(For Wood Roof Skip this Step)

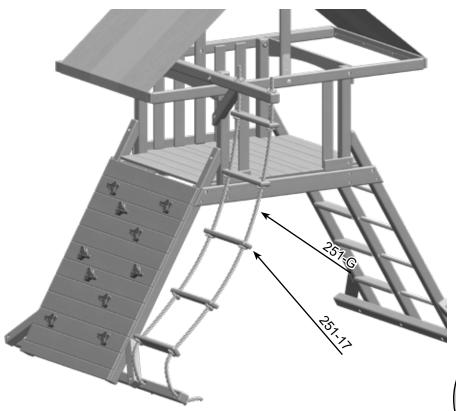

Thread 251-G up through the bottom of 251-39 and tie a double knot. Slide the 251-17s up on the 251-7s with about 1'- 2" between Rope Rungs. Tying a knot on the bottom of each Rope Rung. Then thread through 251-41 and pull tight. Now tie a double knot.

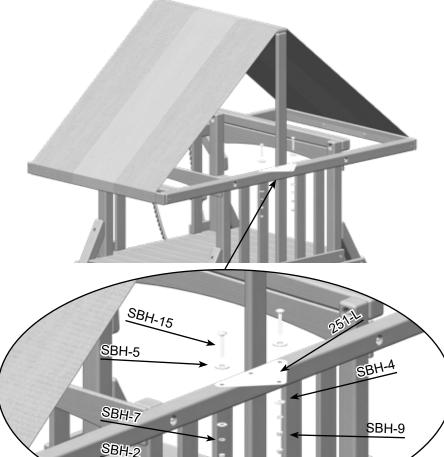

PARTS NEEDED

HARDWARE BAG NEEDED

251-43- Swingbeam-251-24- A-Frame Block-


251-25- A-Frame Block Sunk-

251-23- Small A-Frame Block-

- (1) SBH-12- 3/8" x 6 1/2" Hex Bolt-
- (1) SBH-3- 3/8" USS Flatwasher-
- SBH-8- 3/8" Hex Nut-(1)
- (1) SBH-13- 3/8" x 9" Hex Bolt-
- (12)SBH-18- 3/8" Bolt Cup-
- (13)(13)SBH-6- 3/8" Split Lockwasher-
- SBH-1- 3/8" Acorn Nut Plated-(13)(1)

(13)


(1) SBH-10- 3/8" Nylon Insert Locknut-(12)

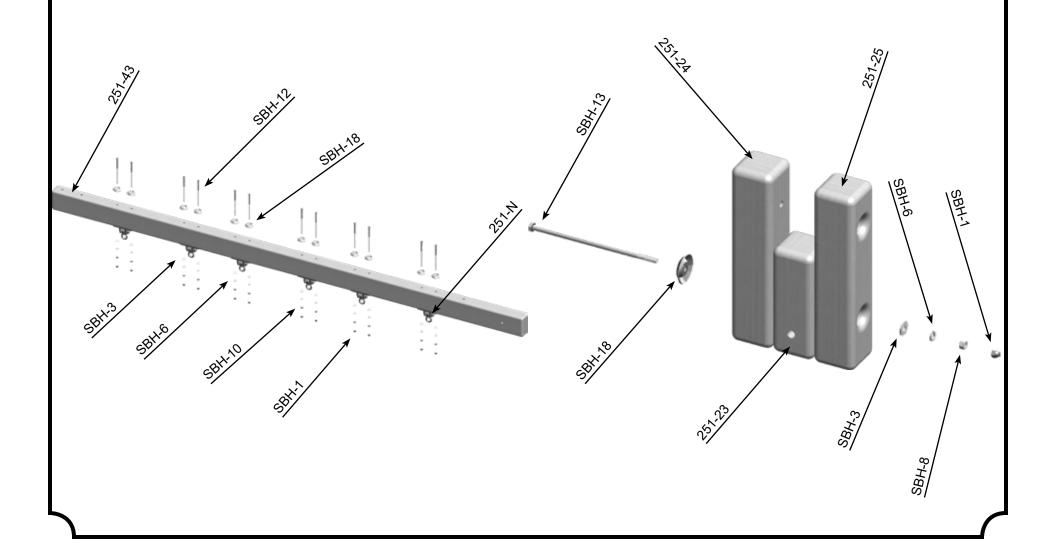

PARTS NEEDED

HARDWARE BAG NEEDED

251-42- A-Frame Leg-(2) (1) SBH-14- 1/2" x 10 1/2" Hex Bolt-(1) SBH-4- 1/2" USS Flatwasher-(5) (4) 251-M- 45 Degree Bracket-SBH-7- 1/2" Split Lockwasher-(4) SBH-9- 1/2" Hex Nut-(3) SBH-2- 1/2" Acorn Nut Plated-(4) SBH-5- 3/4" USS Flatwasher-(2)SBH-17- 1/2" x 8 1/2" Carriage Bolt-(1) SBH-16- 1/2" x 6 1/2" Carriage Bolt-

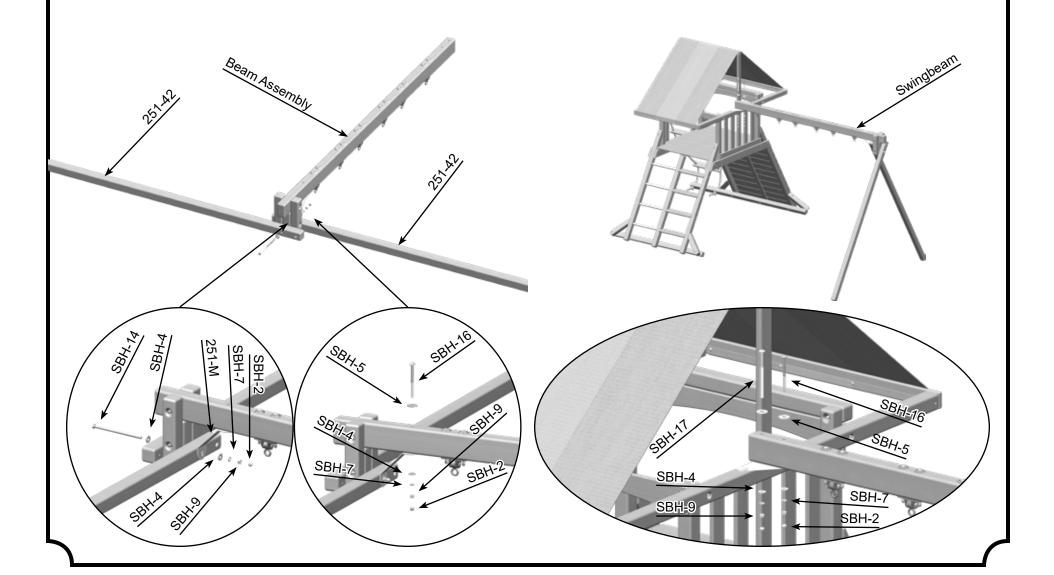

PARTS NEEDED


HARDWARE BAG NEEDED

251-34- A-Frame Crossmember-


(1) SBH-16- 1/2" x 6 1/2" Carriage Bolt-SBH-4- 1/2" USS Flatwasher-SBH-9- 1/2" Hex Nut-SBH-3- 3/8" USS Flatwasher-(2) SBH-5- 3/4" USS Flatwasher-(2) SBH-7- 1/2" Acorn Nut Plated-SBH-3- 3/8" USS Flatwasher-(2) SBH-11- 3/8" x 5" Hex Lag Screw-




Place the top corner of the A-FRAME CROSSMEMBER to the outside of theAFRAME LEG. Use a clamp or another person to hold one side while leveling. Once level and held down, use a pen/pencil to mark a hole on the A-FRAME LEGS

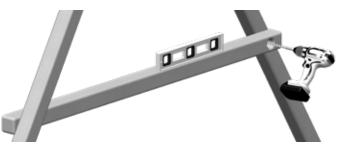

Drill a 9/16" hole through the A-FRAME LEGS where your marks are. The holes should be slightly bigger than the bolt to allow for easy insert of the Carriage Bolt used in next step.

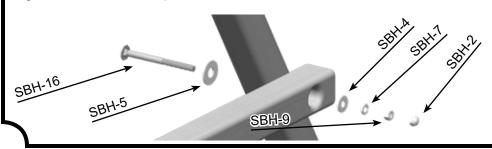

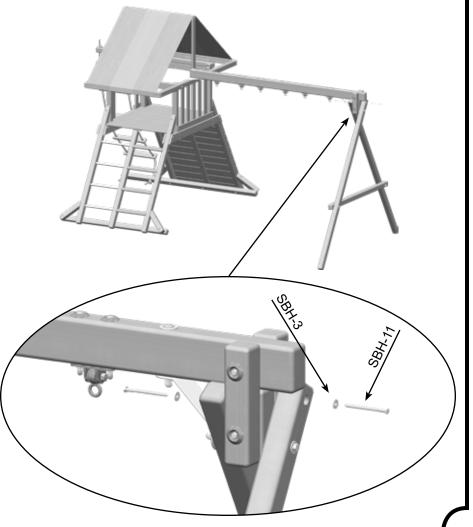

(2)

(2)

(2)

PARTS NEEDED


HARDWARE BAG NEEDED

251-E- 90 Degree Bracket-(2) (4)

N- 1/4" USS Flatwasher-I- #14 x 1" Pan Phillips T/S- (12)(4) (8)

251-D- 1" Playgrip Safety Handles-

J- #14 x 2" Pan Phillips T/S-

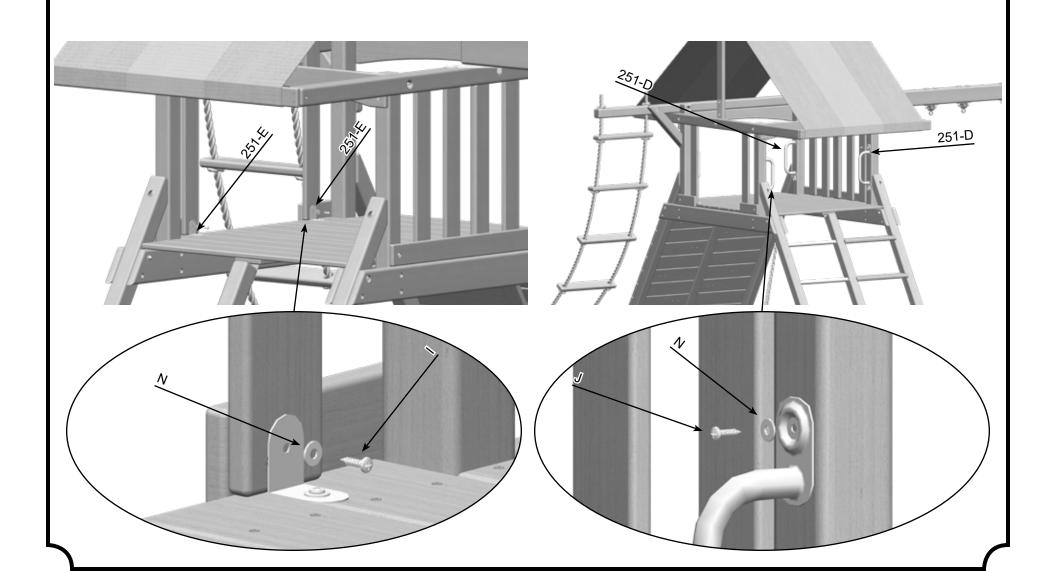

PARTS NEEDED

HARDWARE BAG NEEDED

251-H- Tire Swivel-

A-2- 3/8" x 3" Carriage Bolt-

A-8- 1/2" USS Flatwasher-

(2) (2) (2)

251-I- 34" PC Coated Chain-


(3) O- 3/8" USS Flatwasher(2) A-7- 3/8" Split Lockwasher-

A-3- 3/8" Hex Nut-


A-1- 3/8" Acorn Nut Plated-

A-10-8 x 80mm Spring Clip-


(3)

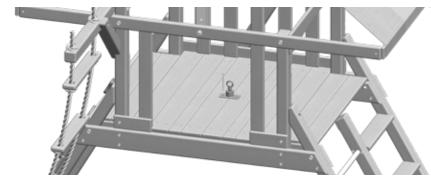



Using the 251-H and a Pencil, Mark the the holes to drill in the center of the deck.

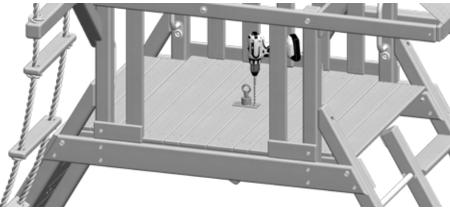

Using a 7/16" Drill Bit, Drill the marked holes.

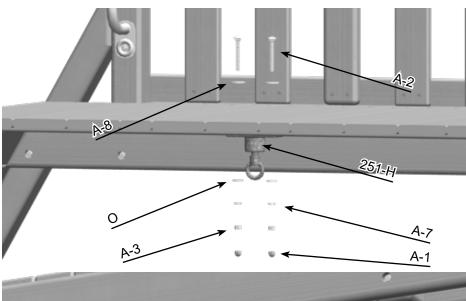

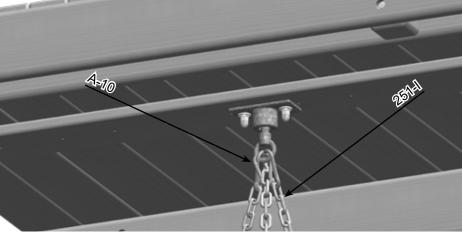

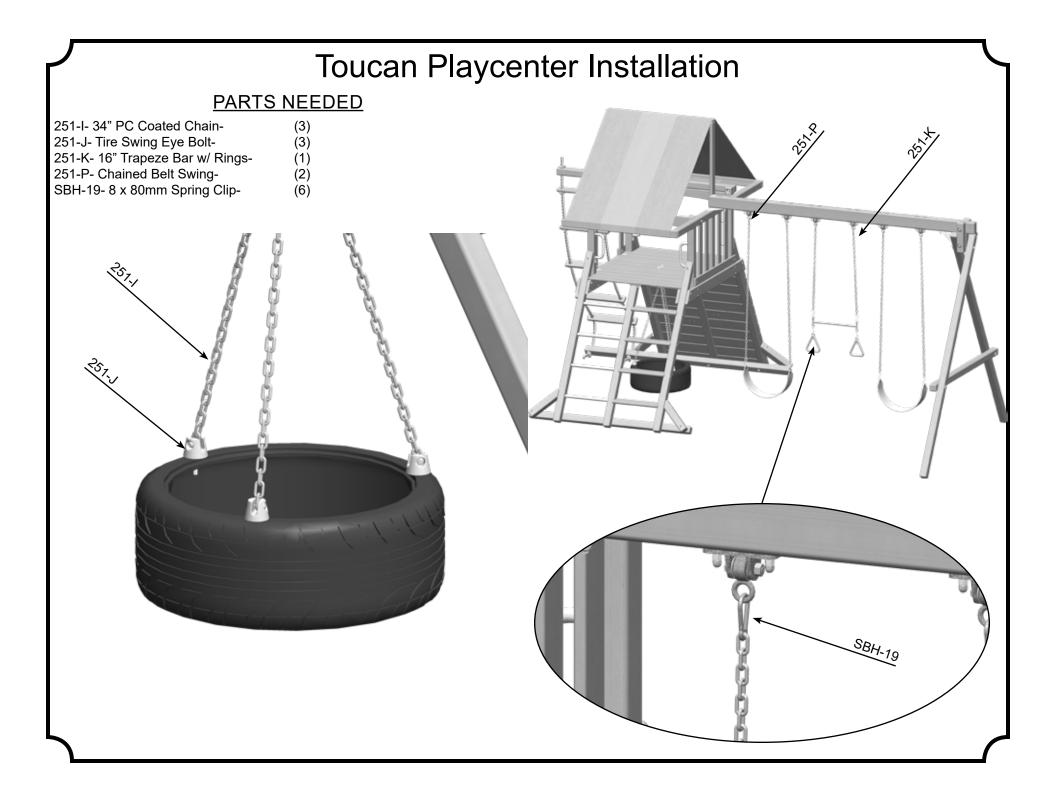


PARTS NEEDED

HARDWARE NEEDED


Slide-(1) N- 1/4" USS Flatwasher-

(3) (3) (3) M- 1/4" 4-Prong T-Nut-

K- 1/4" x 1 1/4" Pan Phillips M/S-

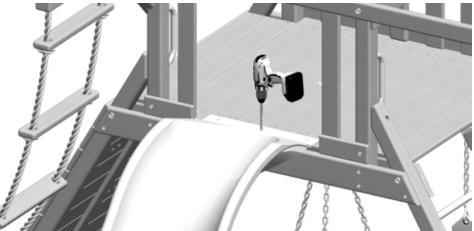

USing a 7/16" Drill Bit mark and Drill holes for slide.

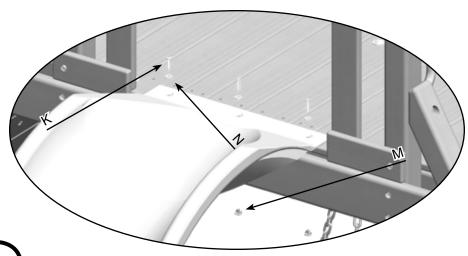



PARTS NEEDED


(4) (2)


HARDWARE BAG NEEDED


558-1- Fan Board #1-558-2- Fan Bottom-558-6- Fan PlateA-4- 1 1/2" Coated Deck Screw-D- 2 1/2" Coated Deck Screw(20)


558-3- Center Tarp Board-


oso-s- Cerilei Tarp Board- (1



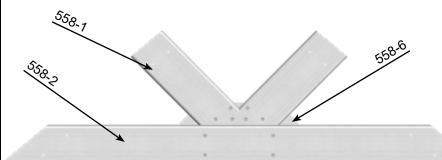

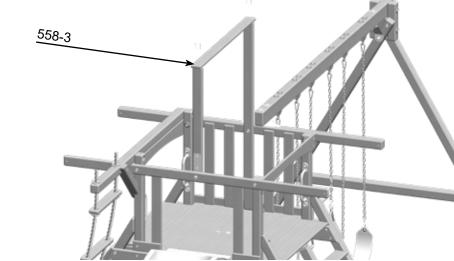

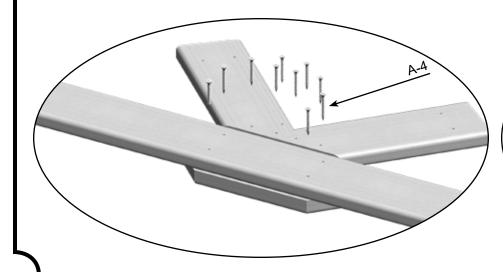

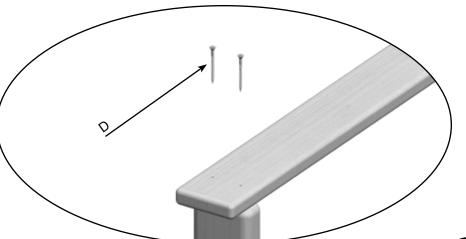

PARTS NEEDED

558-8- Wood Roof Support-Wood Roof Fan-

- (4) A-3- 3/8" x 5" Carriage Bolt-
- (2) A-9- 1/2" USS Flatwasher-

A-6- 3/8" Hex Nut-


A-8- 3/8" Split Lockwasher-

HARDWARE NEEDED

- (2) A-2- 3/8" x 3 1/2" Carriage Bolt-
- (4) A-7- 3/8" USS Flatwasher-
- (4) A-1- 3/8" Acorn Nut Plated- (4)

(4)

(4) A-4- 1 1/2" Coated Deck Screw- (16)

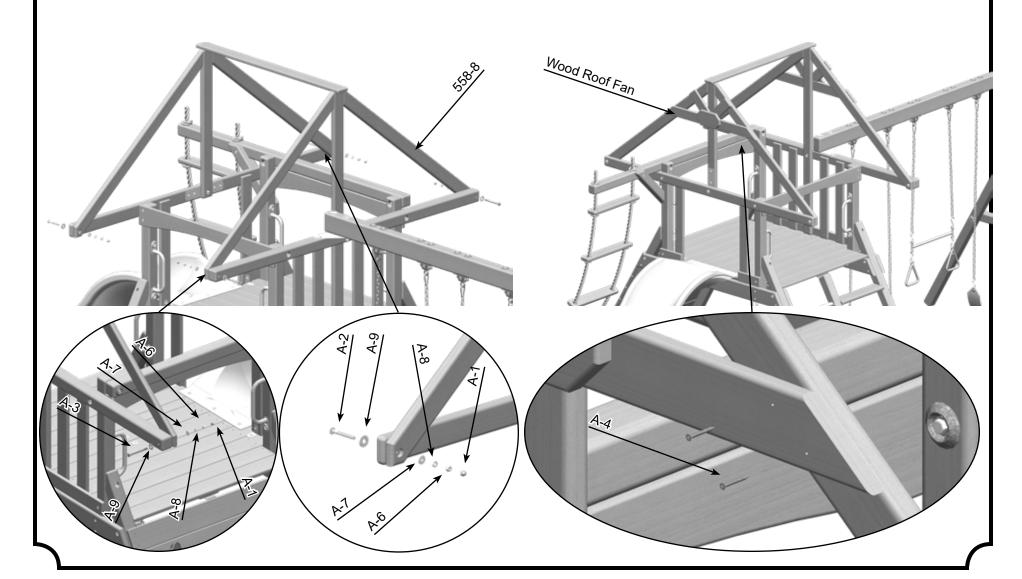

PARTS NEEDED


HARDWARE NEEDED

558-7- Wood Roof Board-558-4- Center Support(10) (2) A-5- 2" Coated Deck Screw-

(40)

A-4- 1 1/2" Coated Deck Screw-

(10)

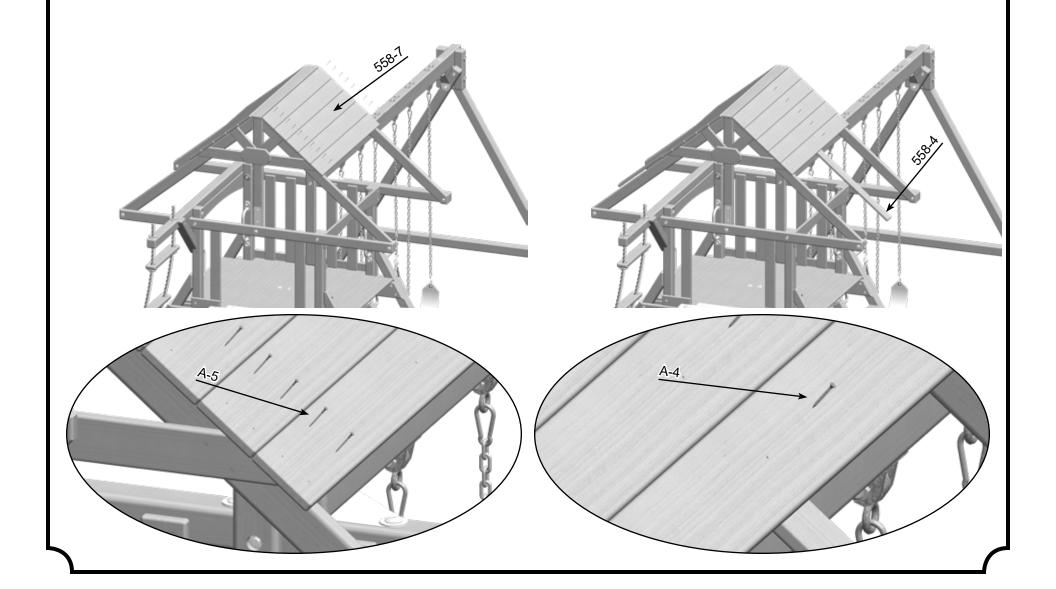


PARTS NEEDED

HARDWARE NEEDED

558-7- Wood Roof Board-558-5- End Wood Roof Board(10) (2) A-5- 2" Coated Deck Screw-

(48)

A-4- 1 1/2" Coated Deck Screw- (12)

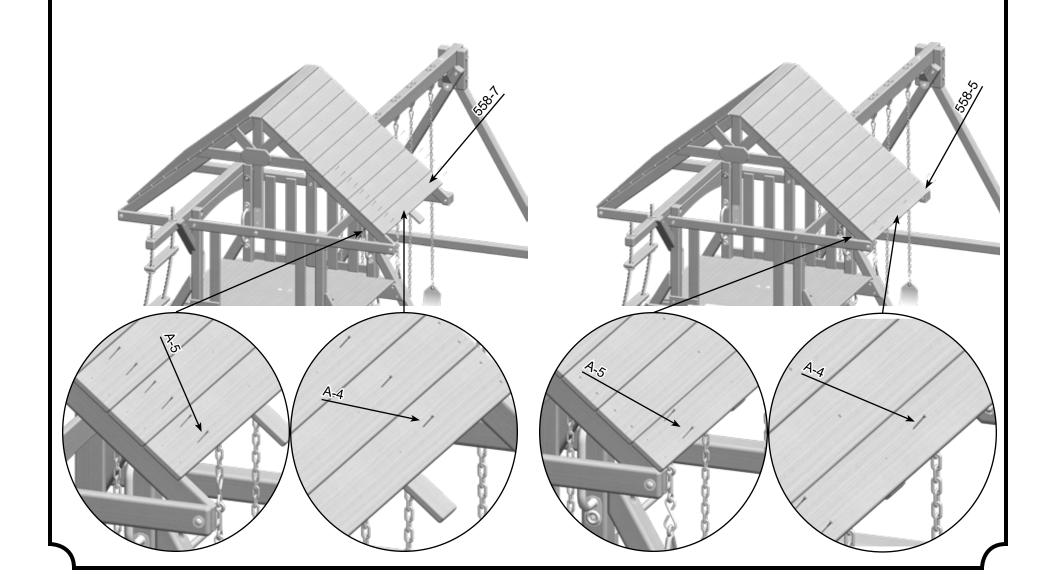

PARTS NEEDED

HARDWARE NEEDED

251-1- End Tarp Board-

(2) (1) (1)

251-Q- Telescope-251-R- Ships Wheel-

D- 2 1/2" Coated Deck Screw-(8)

