



AMERICA'S BEST VALUE IN SWING SETS.™

Lemur Fort Install Manual

Version 3.16



Tools Needed for Assembly

Tape Measure	24" Level	Angle Square
Phillips Screw Driver	3/8" Cordless Drill or Electric Drill	3/8" Drive Ratchet or Electric Impact Gun
Claw Hammer or Rubber Mallet	Pliers or Vise Grips	7/16" Deep Well Socket
9/16" Deep Well Socket	3/4" Deep Well Socket	1/8", 1/4", and 9/16" Drill Bits
Phillips Head Screw Bits	An Adult with two Adult Helpers	

Please familiarize yourself with the install manual, parts/components and general construction process of your new swing set before getting started. Approximate assembly time: 6 to 8 hours. 6 foot unobstructed safety perimeter around swing set recommended.

Choosing A Location For Your Playset

When choosing a location for your swing set, always keep your child or children's safety in mind. Here are some recommendations to help you locate and install a safe play area.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor; 3 occupants who have a combined weight of 525 pounds on the swing area; for a total Unit capacity of 5 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- The swing set should be located on level ground. The stationary components such as ladders and slides are required to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree, overhanging branches, electrical wires, clotheslines, etc. Any swinging equipment is also required to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. The swing set should be located a safe distance from any water hazards, such as a lake, river, bayou, swimming pool, etc.
- Do not install this residential swing set in a commercial setting. This swing set is not manufactured for commercial usage and will void all warranties. Tree Frogs Wooden Swing Set Factory is not responsible for any damages or injuries resulting from this swing set being used in a commercial setting.
- Never install this swing set indoors; or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.
- The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your swing set. The CPSC's Consumer Information Sheet for Playground Surfacing Materials is on the next page. A resilient surface, should be installed after the swing set has been completely assembled according to these instructions. The swing set must rest on solid ground. Please note that this swing set has a maximum fall height of 7'.

Maintaining Your Swing Set

Here are some maintenance tips required to insure safe play on your swing set for years of fun.

- At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for sign of deterioration and replace if necessary.
- On a yearly basis, we recommend that you coat your swing set with a sealant or preservative. You may also want to spot sand any areas prior to sealing.

**** Special note:** Although we recommend that you reseal your swing set annually, you may have to touch up the high traffic areas and/or areas that have a high exposure to direct sunlight.**

- Be sure that the sealant you select is non-toxic and child safe. Your local Tree Frogs Wooden Swing Set Factory dealer may offer a complete power wash and reseal and maintenance program.
- Do not use line trimmers or "weed eaters" around your swing set. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.
- Remove plastic swing seats and take in doors or do not use when temperature drops below 0°F.

Weight Limits for Tree Frogs Swing Sets

Fort Platform: 800 Lbs. Total Weight

Swing Belts: 175 Lbs.

Trapeze: 125 Lbs.

Full Bucket Swing: 50 Lbs.

Toddler Bucket Swing: 50 Lbs.

Tire Swing: 125 Lbs. Total Weight

Rope Ladder: 75 Lbs.

Rock Wall: 150 Lbs.

All Slides: 125 Lbs.

Tree Frogs recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the swing set and/or injury to the users.

Please keep this install manual for future reference.

To insure SAFE PLAY adults must teach children:

- Not to walk close to, in front of, behind, or between moving items.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the swing set in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to stand in the swing seats.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the swing set any item that is not specifically designed for use with the equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and chains. These may become strangulation hazards.
- To hold on to swings and climbers with both hands.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the swing set.

To also insure SAFE PLAY adults must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitted shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose fitting clothing, neckties, and any clothing with a drawstring. Serious injury could result should any part of the children's clothing become entangled in the swing set.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.

IMPORTANT - PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or "cracks" in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty.

Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please contact the Tree Frogs Swing Set Dealer that you purchased your swing set from.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

Pre-Assembly Hints

- Depending on your experience, assembly of our play sets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass. This will save time and familiarize you with all the different pieces in the hardware bag.

****Important note:** Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.**

- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- All 1/4" and 3/8" lag bolts must have pre-drilled holes 1-1/2" to 2" deep. Use a 1/8" drill bit for the 1/4" lag bolts and 1/4" drill bit for 3/8" lag bolts. Use pre-drilled holes in facias as a reference for placing lag bolt pilot holes.
- If a board lifts or rises causing a gap between boards when running in lag bolts or screws, back out the screw or lag bolt and press or apply pressure (but not enough to crack or break board) while re-running in the lag bolt or screw in the same hole.
- Do not over tighten bolts, lag bolts or screws. You can damage boards, break hardware, and/or strip out the hardware.
- When using hammer do not beat on the hardware, but gently tap it in. Never beat on the wood as it will leave marks.

Leveling Your Swing Set During Assembly

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.

**** Important:** if you require a channel depth of more than 6",
then we recommend you have your play set area professionally graded before completing assembly. **

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms.

Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. However, it should be recognized that some injuries from falls will occur no matter what playground surfacing material is used.

Playground equipment should never be placed on hard surfaces such as concrete or asphalt. Grass may appear to be acceptable, but can turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around play equipment.

TABLE 1 -CRITICAL HEIGHTS (in feet) OF TESTED MATERIAL

MATERIAL	UNCOMPRESSED DEPTH			COMPRESSED DEPTH
	6 Inch	9 Inch	12 Inch	9 inch
Wood Chips	7	10	11	10
Double Shredded Bark Mulch	6	10	11	7
Engineered Wood Fibers	6	7	>12	6
Fine Sand	5	5	9	5
Coarse Sand	5	5	6	4
Fine Gravel	6	7	10	6
Medium Gravel	5	5	6	5
Shredded Tires**	10-12	N/A	N/A	N/A

** This is data from tests conducted by independent testing laboratories on a 6 inch depth of uncompressed shredded tire samples produced by four manufacturers. The test reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

Table 1 should be read as follows: If, for example, uncompressed wood chips are used at a minimum of 6 inches, the Critical Height is 7 feet. If 9 inches of uncompressed wood chips are used, the Critical Height is 10 feet. It should be noted that, for some materials, the Critical Height decreases when the material is compressed. It is recommended that a shock absorbing material should extend a minimum of 6 feet in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability in your area, and its cost.

This information has been extracted from the CPSC publications "Playground Surfacing-Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to:

Office of Public Affairs
U.S. Consumer Product Safety Commission
Washington, D.C. 20207
Toll-free Hotline: 1-800-638-2772 or at <http://www.cpsc.gov>

Lemur Fort Lumber

Item No.	Part No.	Part Description	QTY.
TWF-1	TWF-1	30" END DECK BOARD	2
TWF-2	TWF-2	36" DECK BOARD	3
TWF-3	TWF-3	30" PICKETS	8
TWF-4	TWF-4	36" 2 HOLE FACIA	4
TWF-5	TWF-5	36" CENTER TARP BOARD	1
TWF-6	TWF-6	36" DECK SUPPORT	1
TWF-7	TWF-7	37 3/4" END TARP BOARD	2
TWF-8	TWF-8	57" 4 HOLE CENTER POST	1
TWF-9	TWF-9	57" 6 HOLE CENTER POST	1
TWF-10	TWF-10	60" TOP JOIST	2
TWF-11	TWF-11	36" BIG DECK BOARD	4
TWF-12	TWF-12	36" 4 HOLE FACIA	5
TWF-13	TWF-13	36" MAINBEAM	2
TWF-14	TWF-14	36" ROCKWALL BOARD	6
TWF-15	TWF-15	84 5/8" GROUND RUNNER	1
TWF-16	TWF-16	51" WALL SUPPORT	3
TWF-17	TWF-17	7 13/16" SMALL A-FRAME BLOCK	1
TWF-18	TWF-18	13" SUNK A-FRAME BLOCK	1
TWF-19	TWF-19	13" A-FRAME BLOCK	1
TWF-20	TWF-20	36" SWING BEAM TOP JOIST	1
TWF-21	TWF-21	60" SWING BEAM CROSSMEMBER	1
TWF-22	TWF-22	77 5/8" 1 HOLE CORNER POST	2
TWF-23	TWF-23	84" 2 HOLE CORNER POST	2
TWF-24	TWF-24	101 3/4" A-FRAME LEG	2
TWF-25	TWF-25	108" SWING BEAM	1

Tower Fort Accessories

TFA-1	56-1-00013	BOLT SWING HANGER	6
TFA-2	58-1-00006	90 DEGREE ROCKWALL BRACKET	3
TFA-3	58-1-00010	SWING BEAM PLATE	1
TFA-4	58-1-00014	45 DEGREE SWINGBEAM BRACKET	1
TFA-5	59-1-00012	SPIRAL GROUND ANCHOR	6
TFA-6	36-1-00022	ROCKWALL ROCKS-(GREEN)	6
TFA-7	37-1-00017	12" SHIP'S WHEEL	1
TFA-8	60-1-00004	66" BELT SWING- (GREEN)	2
TFA-9	60-1-00005	16" TRAPEZE BAR	1
TFA-10	70-2-00065	TOWER FORT TARP	1

Lemur Fort Hardware

Item No.	Part No.	Part Description	QTY.
TFH-1	40-1-00001	3/8" ACORN NUT	14
TFH-2	40-1-00002	1/2" ACORN NUT	8
TFH-3	40-1-00020	1 5/8" COATED DECK SCREWS	59
TFH-4	40-1-00022	2 1/2" COATED DECK SCREWS	36
TFH-5	40-1-00026	3/8" HEX NUT	8
TFH-6	40-1-00028	1/2" HEX NUT	8
TFH-7	40-1-00041	3/8" X 1 1/2" HEX BOLT	3
TFH-8	40-1-00055	1/4" X 3" HEX LAG SCREW	46
TFH-9	40-1-000	3/8" X 4 1/2" HEX BOLT	4
TFH-10	40-1-00061	3/8" X 5" HEX LAG SCREW	2
TFH-11	40-1-00064	3/8" NYLON INSERT LOCKNUT	6
TFH-12	40-1-00066	1/4" X 1 1/4" PAN PHILLIPS	14
TFH-13	40-1-00073	3/8" SPLIT LOCKWASHER	14
TFH-14	40-1-00074	1/2" SPLIT LOCKWASHER	8
TFH-15	40-1-00077	1/4" 4 PRONG T-NUT	14
TFH-16	40-1-00080	3/8" 4 PRONG T-NUT	5
TFH-17	40-1-00081	1/4" USS FLATWASHER	67
TFH-18	40-1-00082	3/8" USS FLATWASHER	21
TFH-19	40-1-00083	1/2" USS FLATWAHSER	9
TFH-20	40-1-00084	3/4" USS FLATWASHER	7
TFH-21	40-1-00087	5/8" PHILLIPS SCREW SNAP	8
TFH-22	40-1-00088	3/8" X 9" HEX BOLT	2
TFH-23	40-1-00101	1/2" X 8 1/2" CARRIAGE BOLT	1
TFH-24	40-1-00117	3/8" X 6" HEX BOLT	2
TFH-25	40-1-00122	#14 X 1" PAN PHILLIPS T/S	11
TFH-26	40-1-00127	3/8" X 2" HEX BOLT	2
TFH-27	40-1-00128	1/2" X 10" HEX BOLT	1
TFH-28	40-1-00129	1/2" X 3" CARRIAGE BOLT	2
TFH-29	40-1-00130	1/2" X 6" CARRIAGE BOLT	3
TFH-30	41-1-00025	3/8" BOLT CUP	14
TFH-31	40-1-00090	1/2" X 6 1/2" CARRIAGE BOLT	1

Tower Fort Lumber

TWF-1
30" End Deck Board
QTY. 2



TWF-2
36" Deck Board
QTY. 3



TWF-3
30" Pickets
QTY. 8



TWF-4
36" 2 Hole Facia
QTY. 4



TWF-5
36" Center Tarp Board
QTY. 1



TWF-6
36" Deck Support
QTY. 1



TWF-7
37 3/4" End Tarp Board
QTY. 2



TWF-8
57" 4 Hole Center Post
QTY. 1



TWF-9
57" 6 Hole Center Post
QTY. 1



Tower Fort Lumber

TWF-10
60" Top Joist
QTY. 2



TWF-11
36" Big Deck Board
QTY. 4



TWF-12
36" 4 Hole Facia
QTY. 5



TWF-13
36" Mainbeam
QTY. 2



TWF-14
36" Rockwall Board
QTY. 6



TWF-15
84 5/8" Ground Runner
QTY. 1



TWF-16
51" Wall Support
QTY. 3



TWF-17
7 13/16 A-Frame Block
QTY. 1




TWF-18
13" Sunk A-Frame Block
QTY. 1



Tower Fort Lumber

TWF-19
13" A-Frame Block
QTY. 1

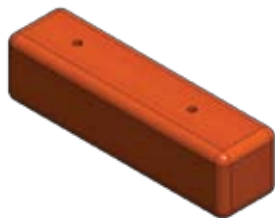

TWF-20
36" SB Top Joist
QTY. 1



TWF-21
60" SB Crossmember
QTY. 1



TWF-22
77 5/8" 1 Hole Corner Post
QTY. 2



TWF-23
84" 2 Hole Corner Post
QTY. 2



TWF-24
10 3/4" A-Frame Leg
QTY. 2



TWF-25
108" Swing beam
QTY. 1



TOWER FORT HARDWARE BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

TFH-1

40-1-00001

3/8" Acorn Nut Plated
QTY. 14



TFH-2

40-1-00002

1/2" Acorn Nut Plated
QTY. 8



TFH-3

40-1-00020

1 5/8" Coated Deck Screw
QTY. 59



TFH-4

40-1-00022

2 1/2" Coated Deck Screw
QTY. 36



TFH-5

40-1-00026

3/8" Hex Nut
QTY. 8



TFH-6

40-1-00028


1/2" Hex Nut
QTY. 8



TFH-7

40-1-00041

3/8" x 1 1/2" Hex Bolt
QTY. 3

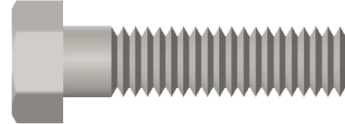

TFH-8

40-1-00055


1/4" x 3" Hex Lag Screw
QTY. 46



TFH-9

40-1-000

3/8" x 4 1/2" Hex Bolt
QTY. 4

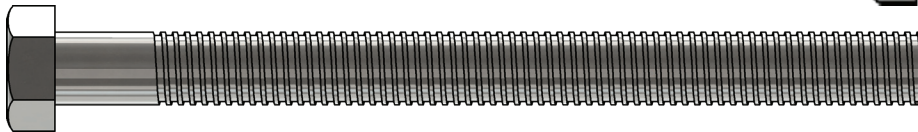

TFH-10

40-1-00061

3/8" x 5" Hex Lag Screw
QTY. 2



MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT



USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

TOWER FORT HARDWARE BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

TFH-11

40-1-00064

3/8" Nylon Insert Locknut

QTY. 6



TFH-12

40-1-00066

1/4" x 1 1/4" Pan Phillips M/S

QTY. 14



TFH-13

40-1-00073

3/8" Split Lockwasher

QTY. 14



TFH-14

40-1-00074

1/2" Split Lockwasher

QTY. 8




TFH-15

40-1-00077

1/4" 4 Prong T-Nut

QTY. 14

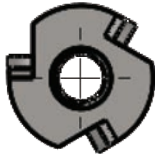


TFH-16

40-1-00080

3/8" 4 Prong T-Nut

QTY. 5

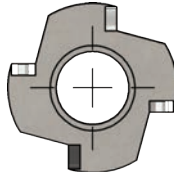


TFH-17

40-1-00081

1/4" USS Flatwasher

QTY. 67

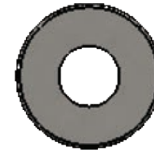

TFH-18

40-1-00082

3/8" USS Flatwasher

QTY. 21




TFH-19

40-1-00083

1/2" USS Flatwasher

QTY. 9

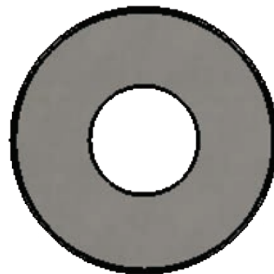


TFH-20

40-1-00084

3/4" USS Flatwasher

QTY. 7

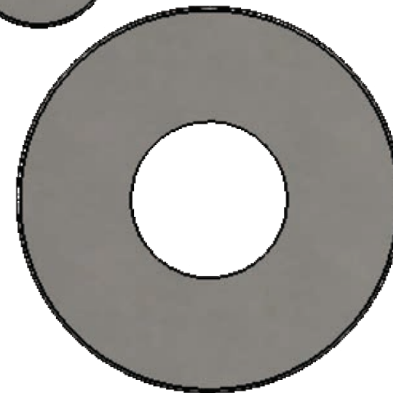

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT



USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

TOWER FORT HARDWARE BAG


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

TFH-21

40-1-00087

5/8" Phillips Screw Snap

QTY. 8

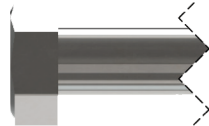


TFH-22

40-1-00088

3/8" x 9" Hex Bolt

QTY. 2


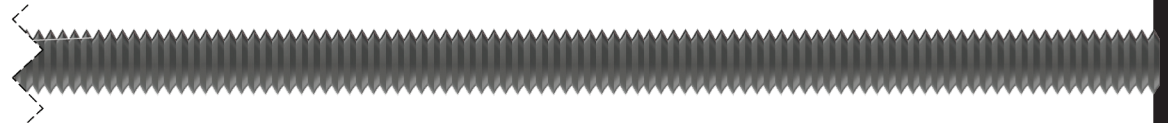


TFH-23

40-1-00101

1/2" x 8 1/2" Carriage Bolt

QTY. 1

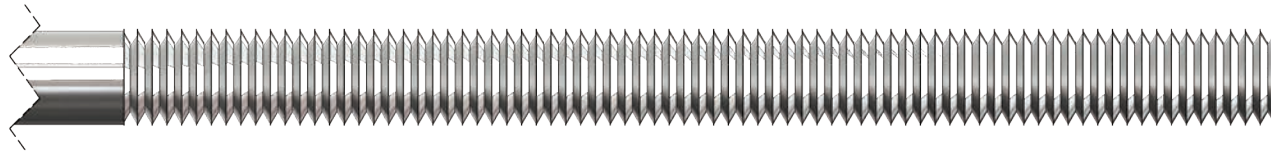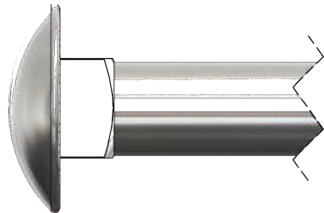


TFH-24

40-1-00117

3/8" x 6" Hex Bolt

QTY. 2




TFH-25

40-1-00122

#14 x 1" Pan Phillips T/S

QTY. 11




TFH-26

40-1-00127

3/8" x 2" Hex Bolt

QTY. 2

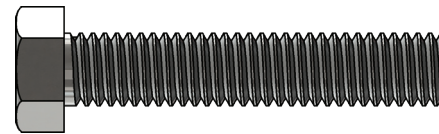

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT




USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.


TOWER FORT HARDWARE BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)


TFH-27
40-1-00128
1/2" x 10" Hex Bolt
QTY. 1

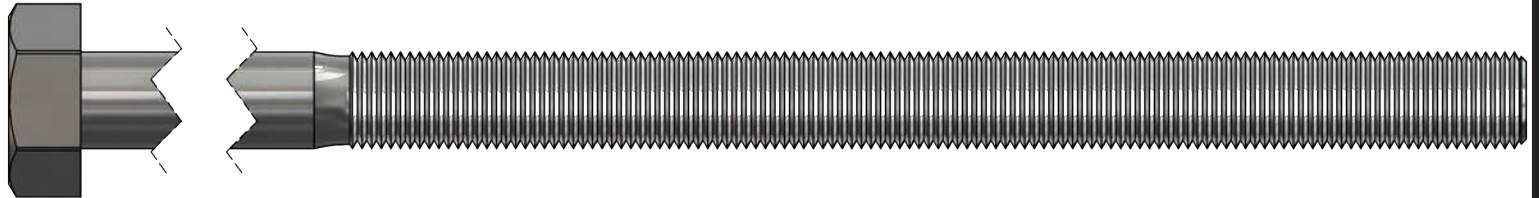


TFH-28
40-1-00129
1/2" x 3" Carriage Bolt
QTY. 2

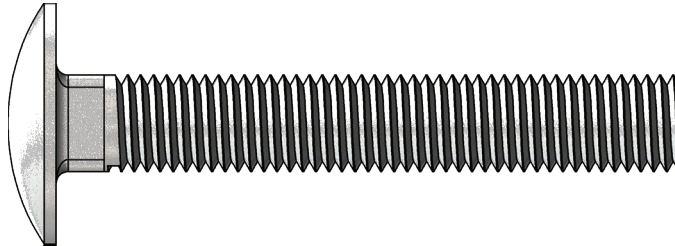

TFH-29
40-1-00130
1/2" x 6" Carriage Bolt
QTY. 3

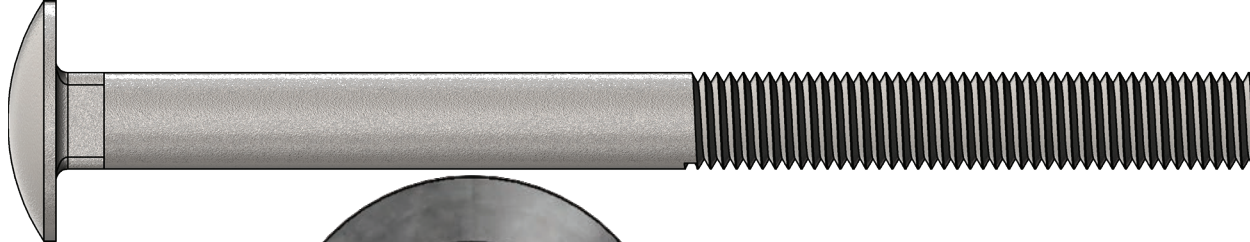

TFH-30
41-1-00025
3/8" Bolt Cup
QTY. 14

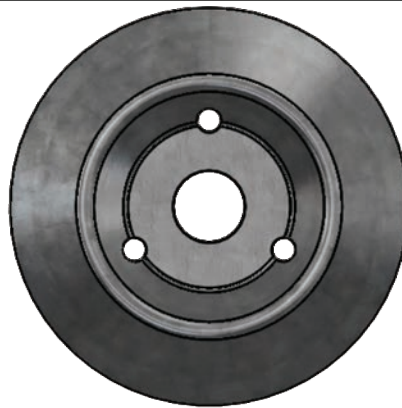

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT



USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

HARDWARE BAG


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

TFH-31

40-1-00090

1/2" x 6 1/2" Carriage Bolt

QTY. 1

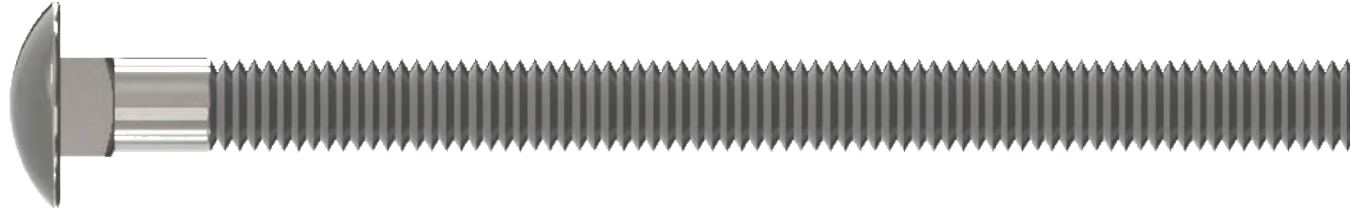

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT



USE THE RULER TO MEASURE YOUR BOLTS AND SCREWS. HARDWARE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH HARDWARE SIZES.

Tower Fort Accessories

TFA-1
56-1-00013
Bolt Swing Hanger
QTY. 6




TFA-5
59-1-00012
Spiral Ground Anchor
QTY. 6




TFA-9
60-1-00005
16" Trapeze Bar w/ Rings
QTY. 1



TFA-2
58-1-00006
90 RW Bracket
QTY. 3

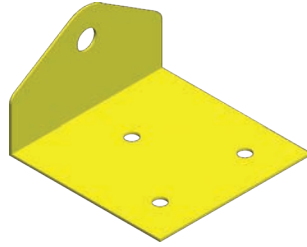


TFA-6
36-1-00022
Rockwall Rocks-Green
QTY. 6

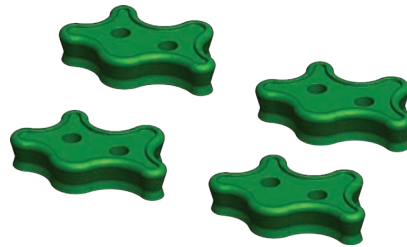


TFA-10
70-2-00065
Tower Fort Tarp
QTY. 1



TFA-3
58-1-00010
Swingbeam Plate
QTY. 1

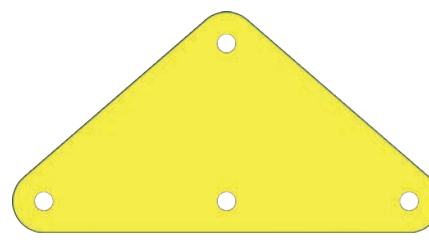

TFA-7
37-1-00017
12" Ship's Wheel
QTY. 1

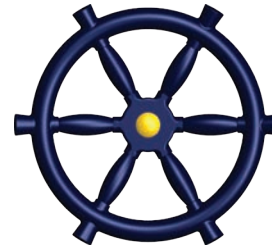

TFA-4
58-1-00014
SB 45 Degree Bracket
QTY.



TFA-8
60-1-00004
66" Chained Belt Swing- Green
QTY. 2



Blank Side Wall Wall Assembly

PARTS NEEDED


TWF-4- 2 Hole Facia- (1)
 TWF-12- 4 Hole Facia- (1)
 TWF-22- 1 Hole Corner Post- (2)

TWF-10- Top Joist- (1)
 TWF-13- Mainbeam- (2)

HARDWARE NEEDED

(1) TFH-8- 1/4" x 3" Hex Lag Screw-
 (1) TFH-9- 3/8" x 4 1/2" Hex Bolt-
 TFH-18- 3/8" Flatwasher-
 TFH-5- 3/8" Hex Nut-

(10) TFH- 17- 1/4" USS Flatwasher- (10)
 (2) TFH-30- 3/8" Bolt Cup- (2)
 (2) TFH-13- 3/8" Split Lockwasher- (2)
 (2) TFH-1- 3/8" Acorn Nut- (2)

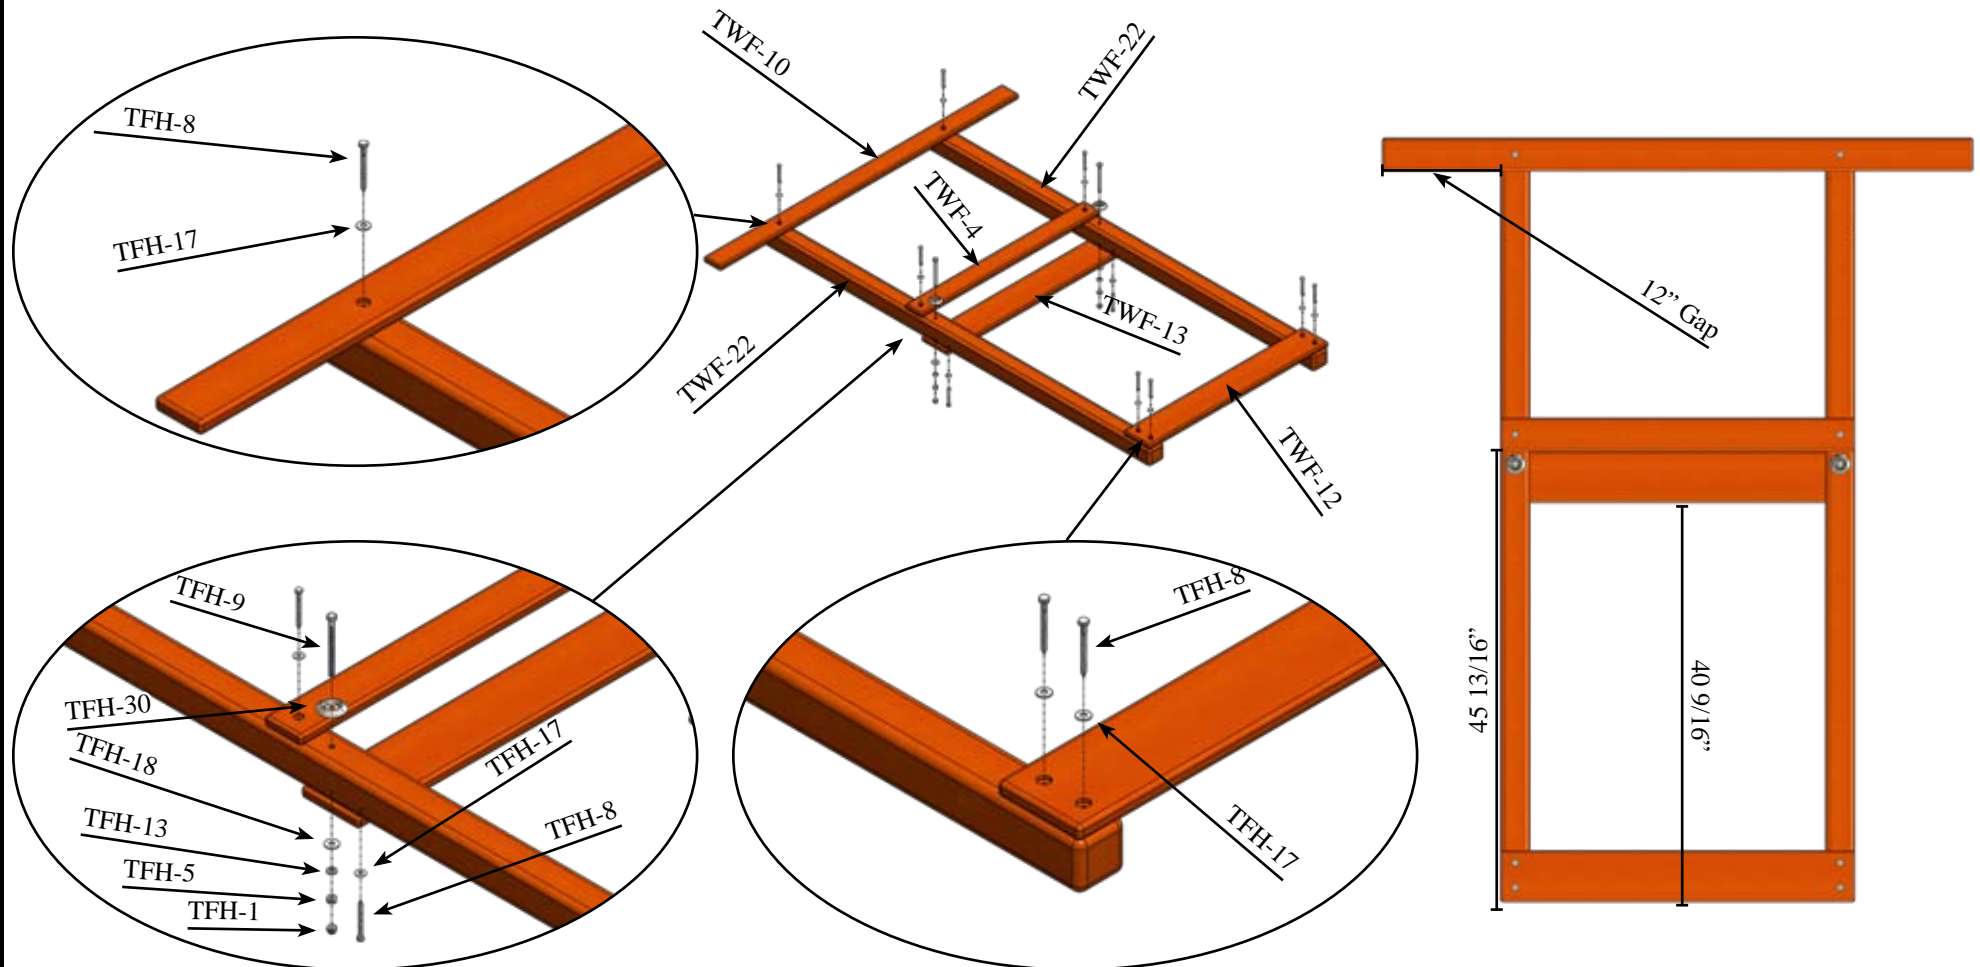

Swing Beam Side Wall


PARTS NEEDED

TWF-4- 2 Hole Facia-(1) TWF-10- Top Joist-
 TWF-13- Mainbeam- (1) TWF-15- Ground Runner-
 TWF-20- SB Top Joist- (1)
 TWF-23- 2 Hole Corner Post- (2)

(1) TFH-8- 1/4" x 3" Hex Lag Bolt-
 (1) TFH-30- 3/8" Bolt Cup-
 TFH-18-3/8" USS Flatwasher-
 TFH-13- 3/8" Split Lockwasher-
 TFH-1- 3/8" Acorn Nut-

HARDWARE NEEDED


(10) TFH-17- 1/4" USS Flatwasher- (10)
 (4) TFH-9- 3/8" x 4 1/2" Hex Bolt- (2)
 (4) TFH-24- 3/8" x 6" Hex Bolt- (2)
 (4) TFH-5- 3/8" Hex Nut- (4)

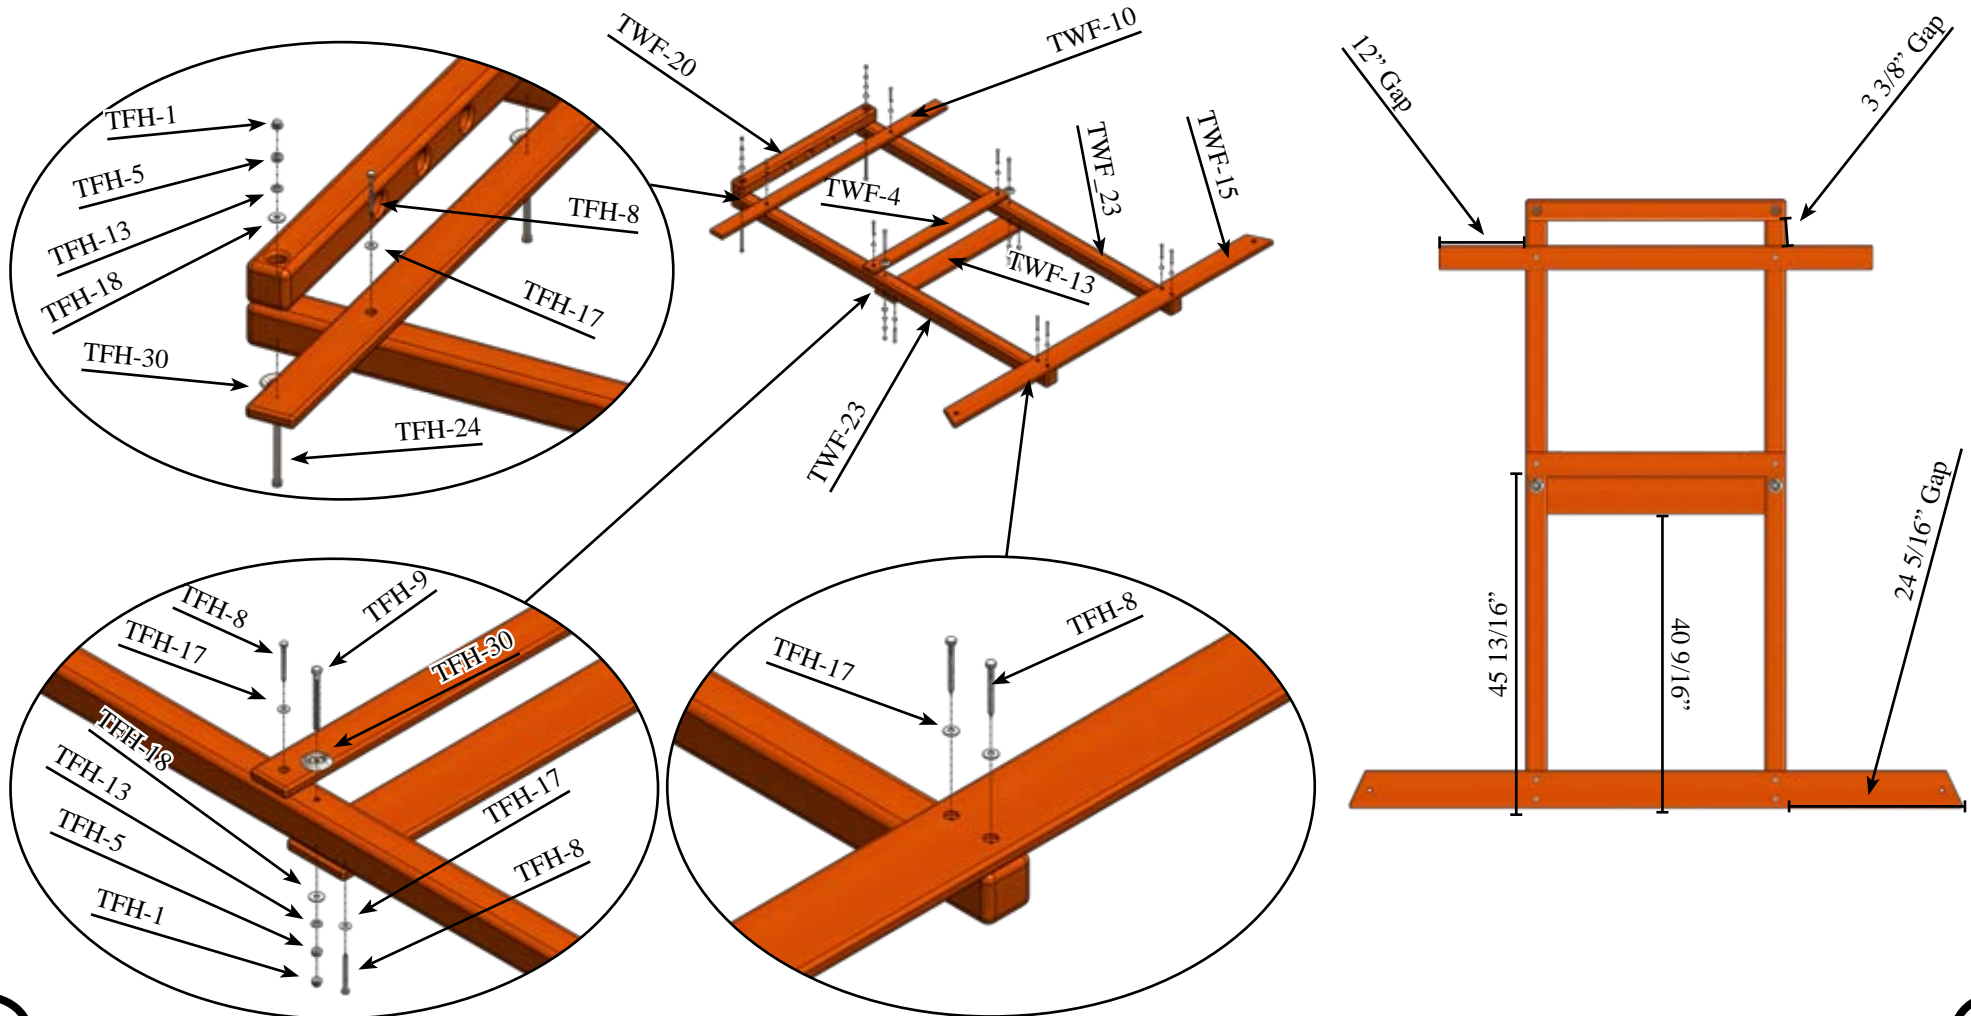

Rockwall Supports

PARTS NEEDED


TWF-16- Wall Support-	(2)	TFH-15- 1/4" 4 Prong T-Nut-
TWF-14- Rockwall Board-	(6)	TFH-17- 1/4" USS Flatwasher-
TFA-6- Rockwall Rocks-	(6)	TFH-7- 3/8" x 1 1/2" Hex Bolt-
		TFH-18- 3/8" USS Flatwasher-

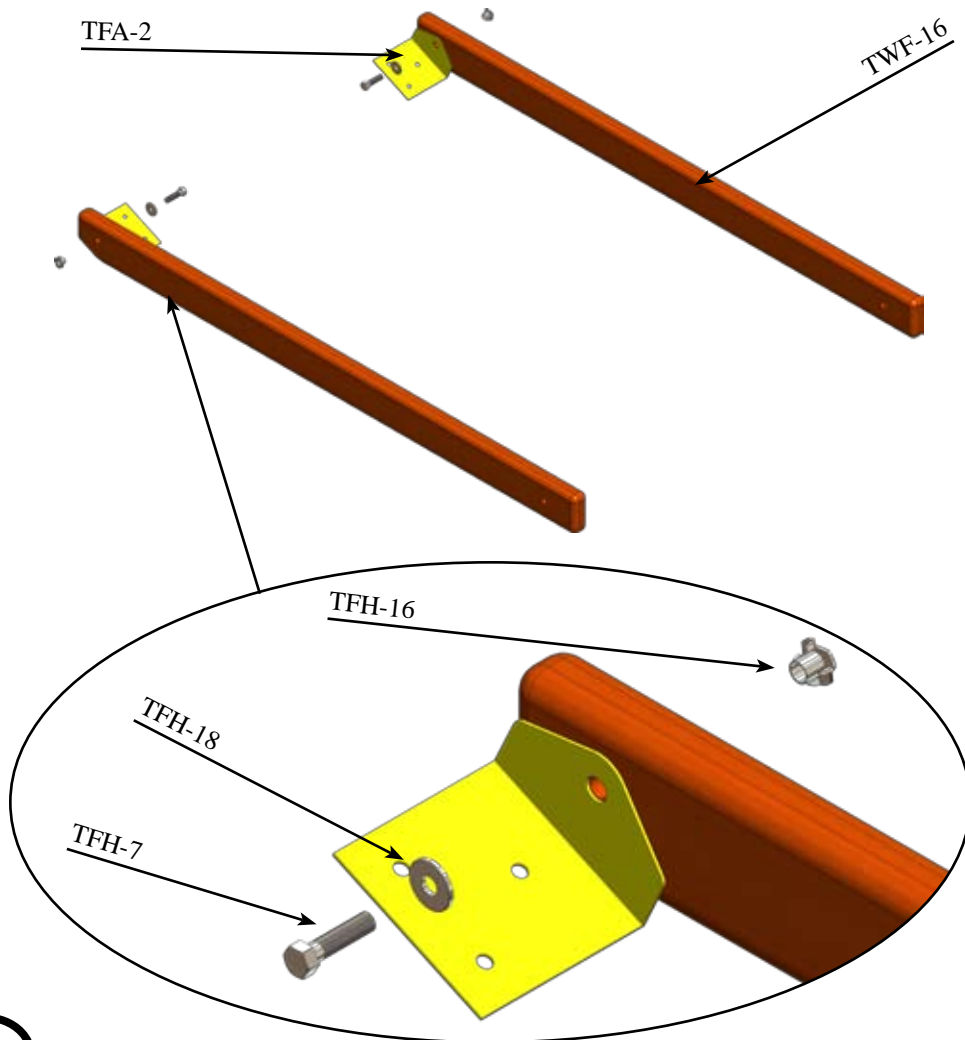

Rockwall Boards

HARDWARE NEEDED


(12)	TFH-12- 1/4" x 1 1/2" Pan Phillips M/S-	(12)
(12)	TFA-2- 90 Degree RW Bracket-	(2)
(2)	TFH-16- 3/8" 4 Prong T-Nut-	(2)
(2)		

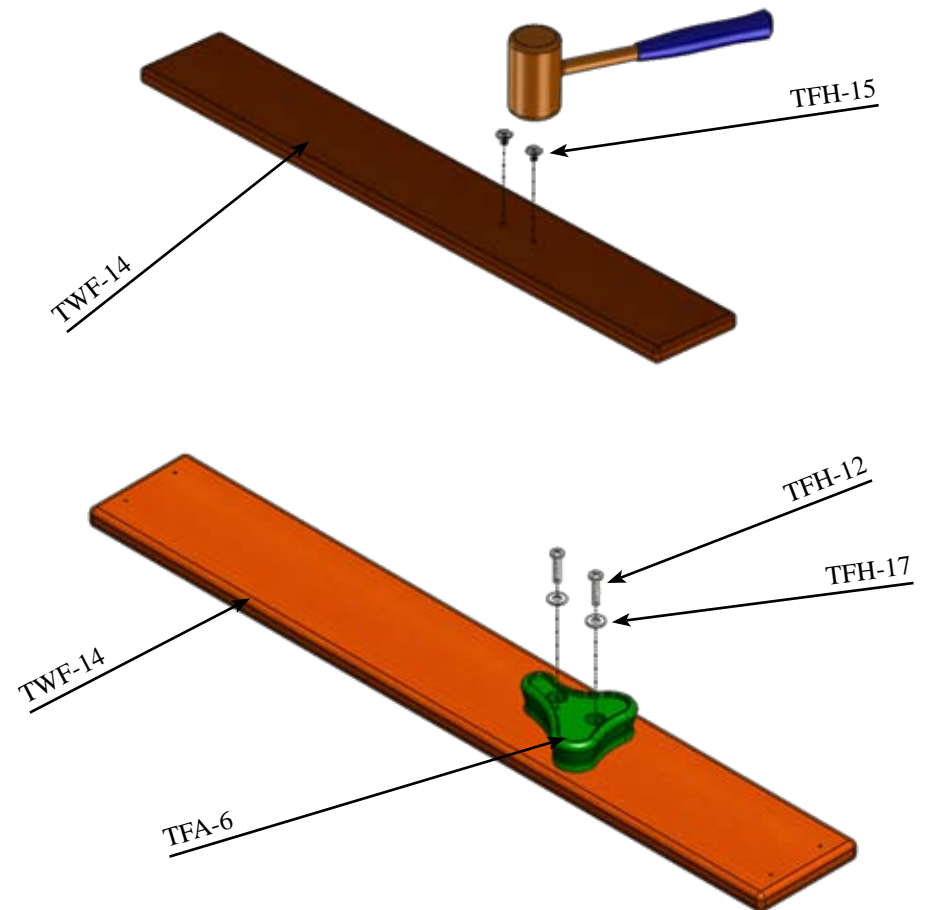

Rockwall Assembly

PARTS NEEDED

TWF-14- Rockwall Boards- (5)
TWF-16- Wall Supports- (1)

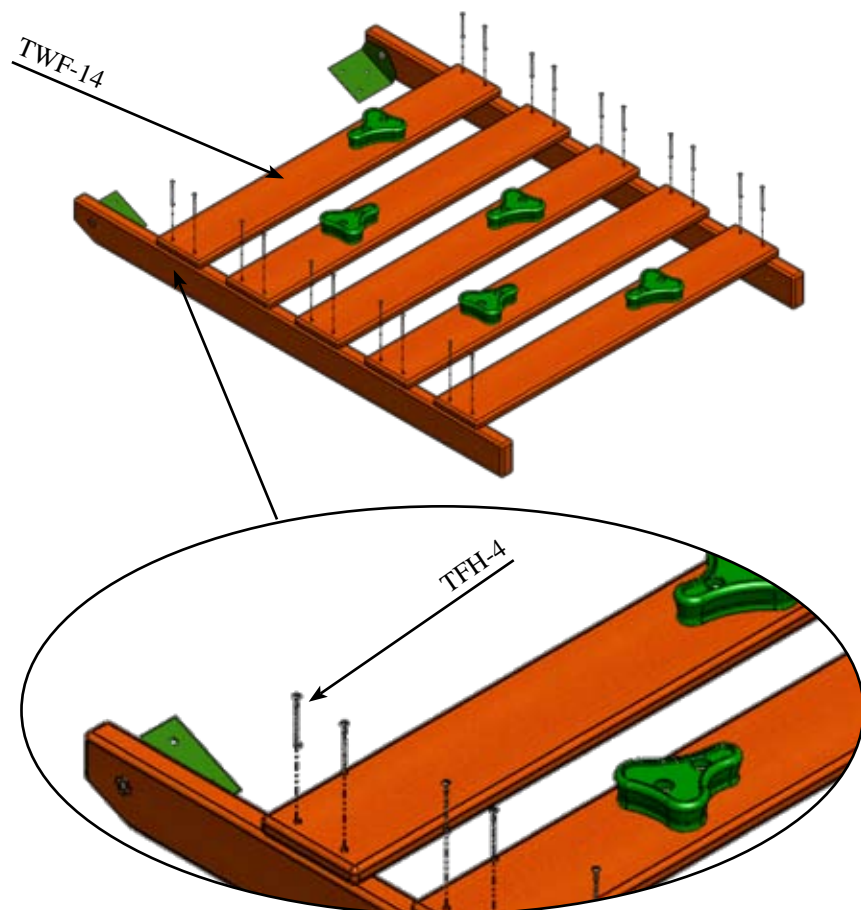


THERE IS A 3" GAP FROM THE BOTTOM OF THE SUPPORT TO THE FIRST ROCK-
WALL BOARD AND 3" GAP IN BETWEEN EACH RW BOARD

Support Assembly

HARDWARE NEEDED

TFH-4- 2 1/2" Coated Deck Screw- (20)
TFH-16- 3/8" 4 Prong T-Nut- (1)
TFH-7- 3/8" x 1 1/2" Hex Bolt- (1)
TFA-2- 90 Degree RW Bracket- (1)

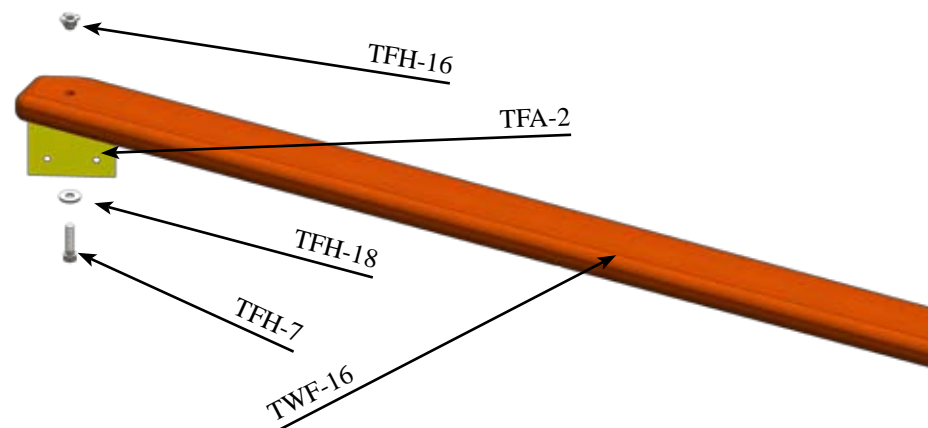





Main Assembly

PARTS NEEDED

TWF-12- 4 Hole Facia-	(2)
TWF-1- End Deck Board-	(2)
TWF-6- Deck Support-	(1)
TWF-2- Small Deck Board-	(3)
TWF-11- Deck Board-	(4)

HARDWARE NEEDED

TFH-8- 1/4" x 3" Hex Lag Screw-	(8)
TFH-17- 1/4" USS Flatwasher-	(8)
TFH-3- 1 5/8" Coated Deck Screws-	(9)

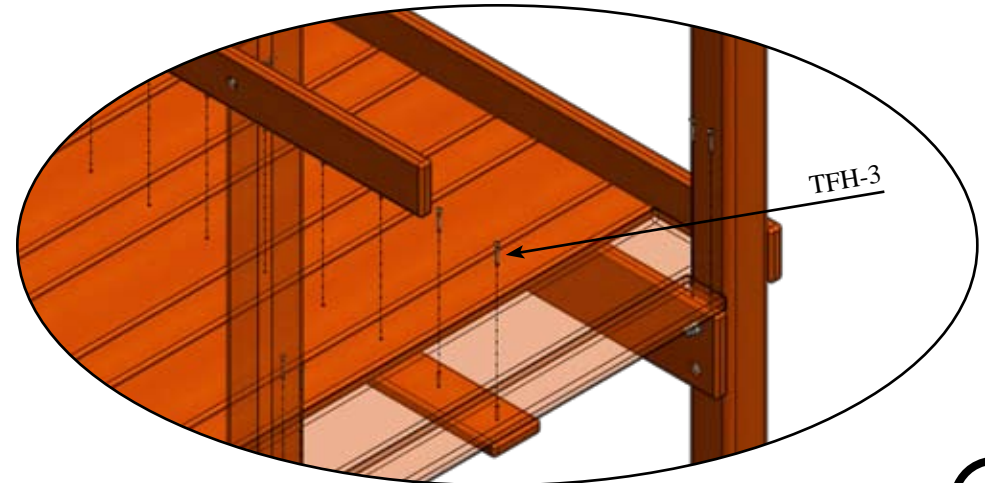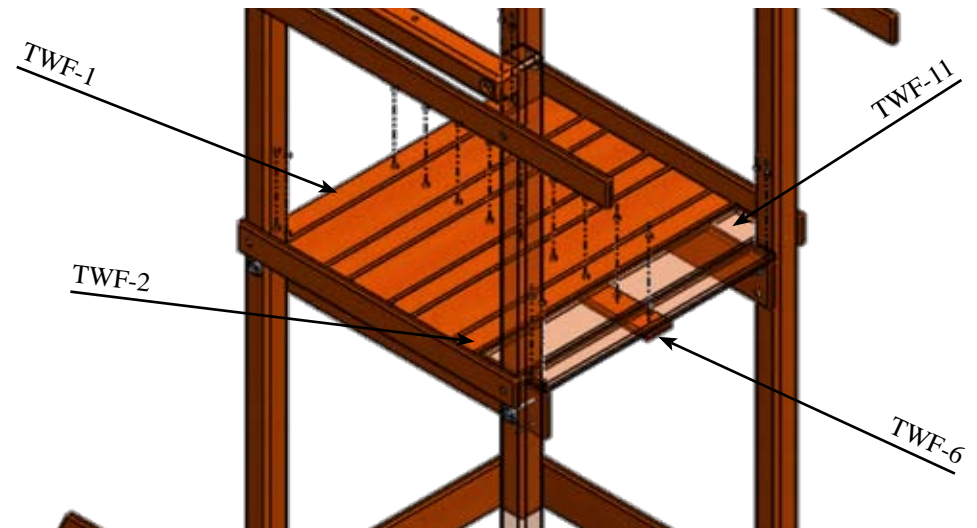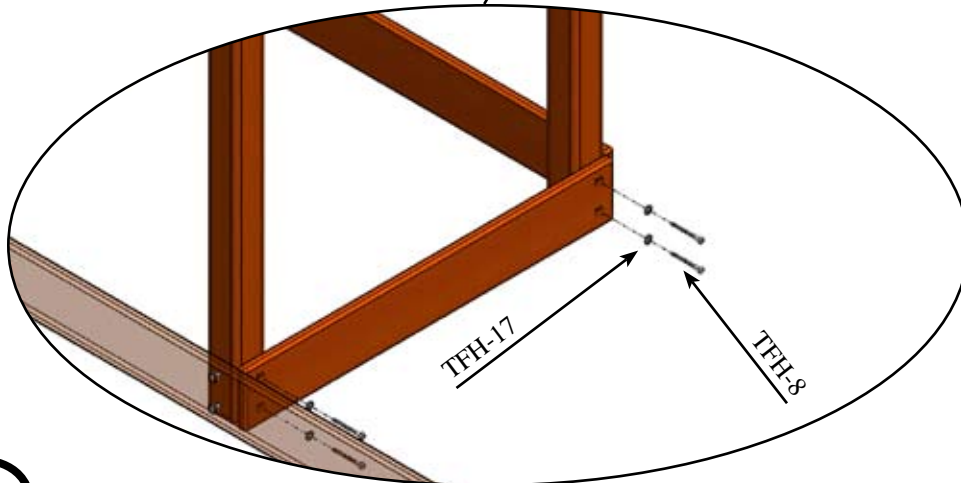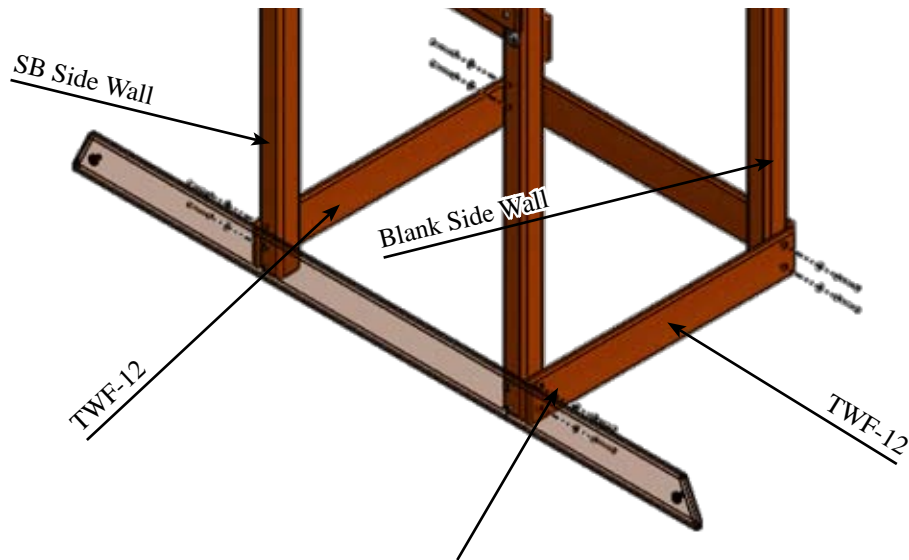






Main Assembly

PARTS NEEDED

TWF-12- 4 Hole Facia- (2)
Rockwall Assembly- (1)
Wall Support Assembly- (1)

HARDWARE NEEDED

TFH-8- 1/4" x 3" Hex Lag Screw- (8)
TFH-17- 1/4" USS Flatwasher- (17)
TFH-16- 3/8" 4 Prong T-Nut- (2)
TFH-18- 3/8" USS Flatwasher- (2)
TFH-26- 3/8" x 2" Hex Bolt- (2)
TFH-25- #14 x 1" Pan Phillips T/S- (9)

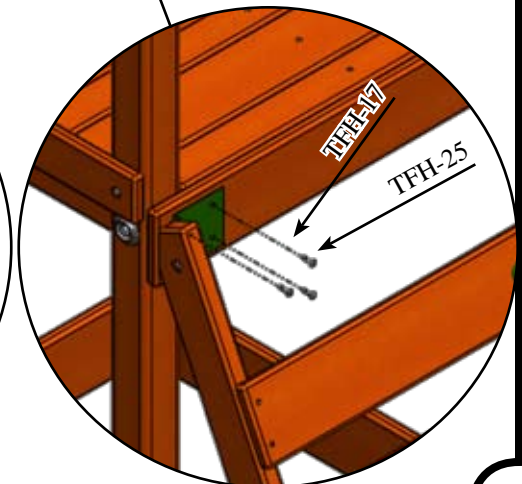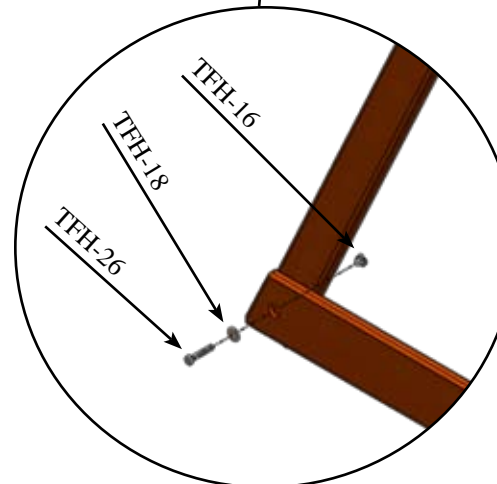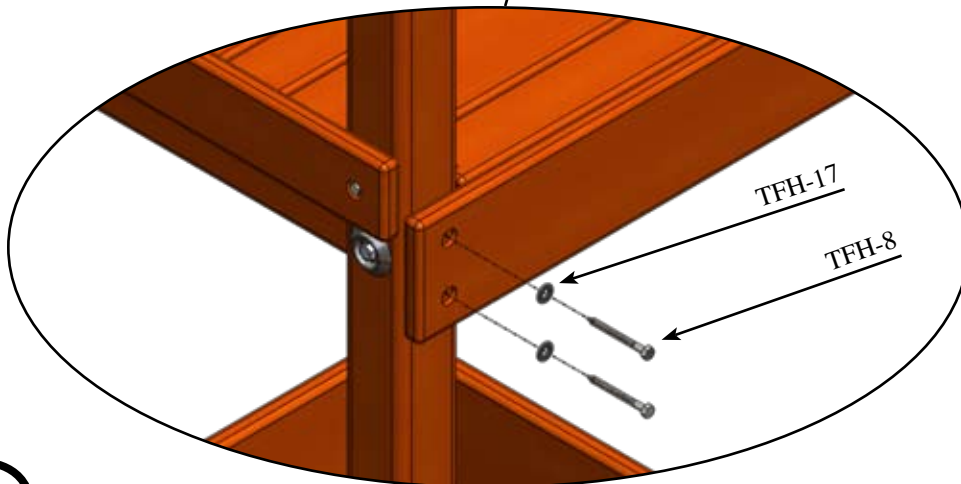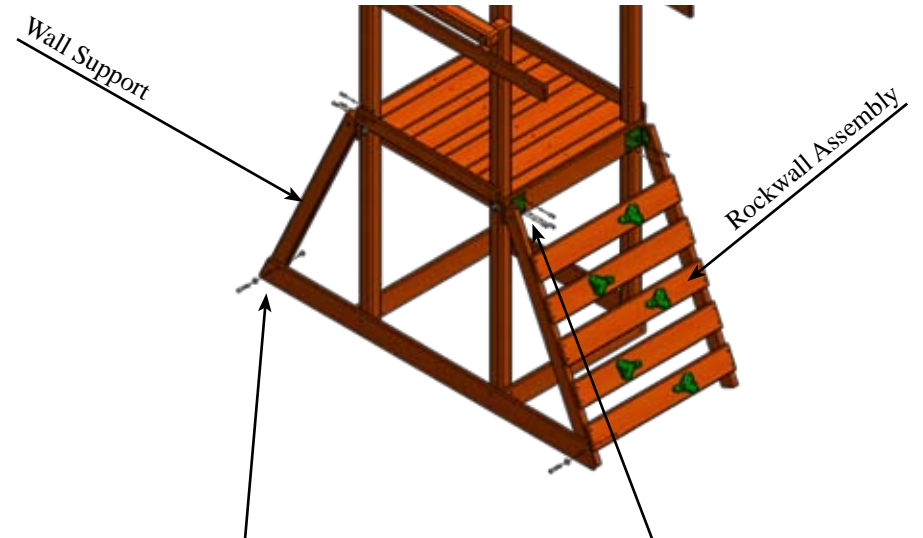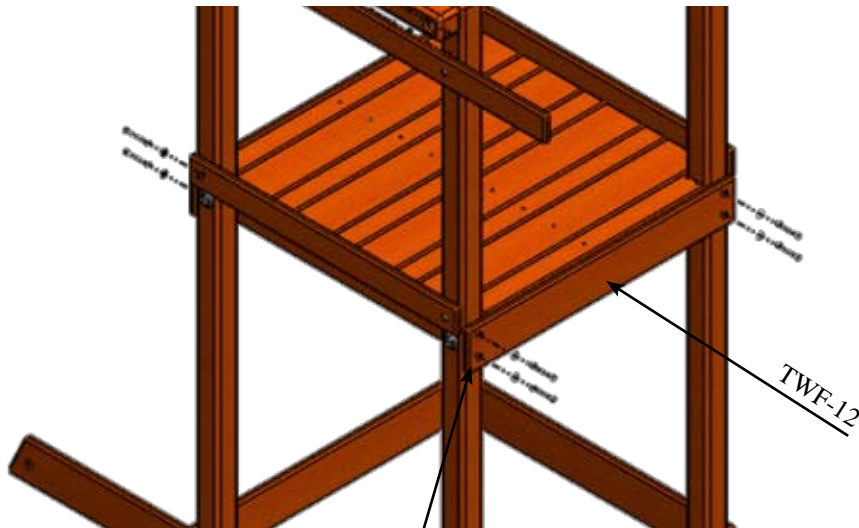





Main Assembly

PARTS NEEDED

TWF-14- Rockwall Board- (1)
TWF-8- 4 Hole Center Post- (1)
TWF-9- 6 Hole Center Post- (1)

HARDWARE NEEDED

TFH-4- 2 1/2" Coated Deck Screw- (4)
TFH-3- 1 5/8" Coated Deck Screw- (10)

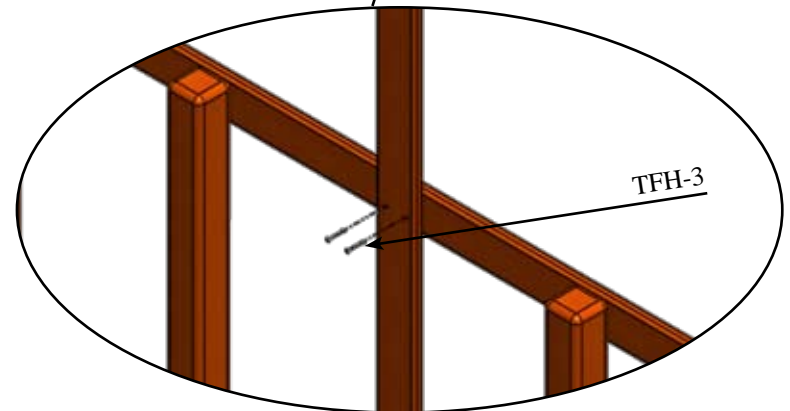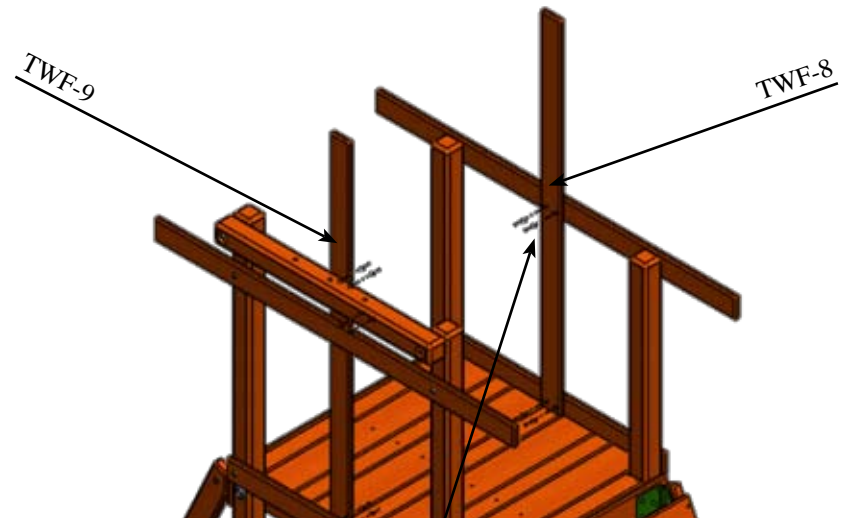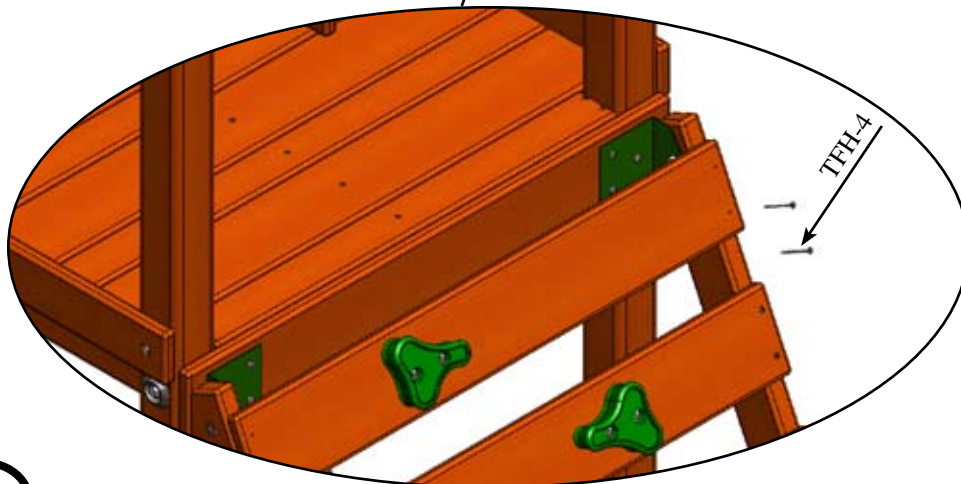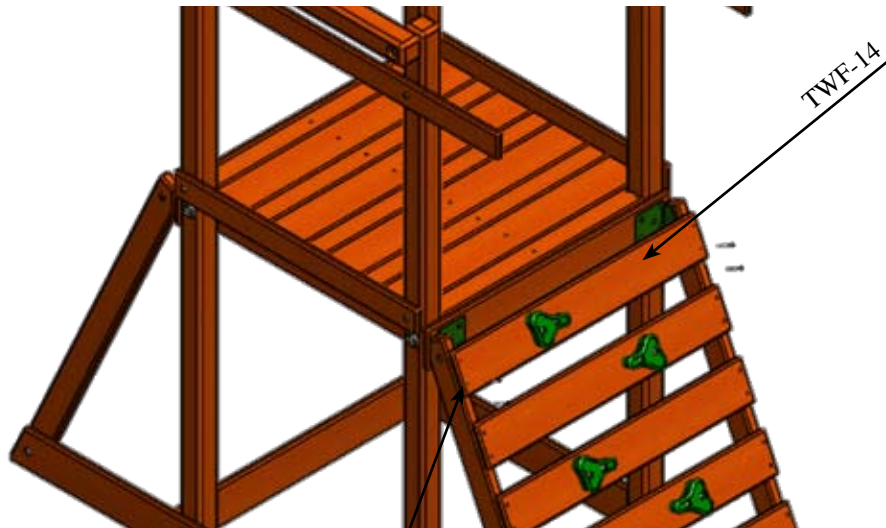

THERE IS A 13 5/16" GAP ON EACH SIDE OF THE CENTER POST'S TO THE INSIDE OF THE CORNER POSTS



Main Assembly

PARTS NEEDED



TWF-3- Pickets- (8)
TWF-4- 2 Hole Facia- (2)

HARDWARE NEEDED

TFH-3- 1 5/8" Coated Deck Screws- (32)
TFH-8- 1/4" x 3" Hex Lag Screw- (4)
TFH-17- 1/4" USS Flatwasher- (4)

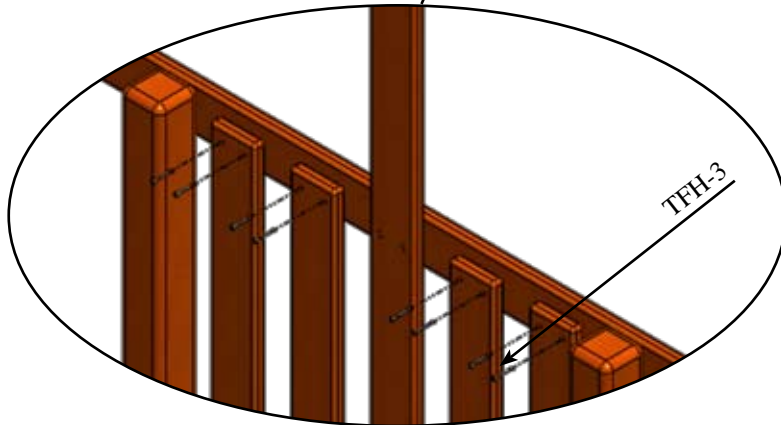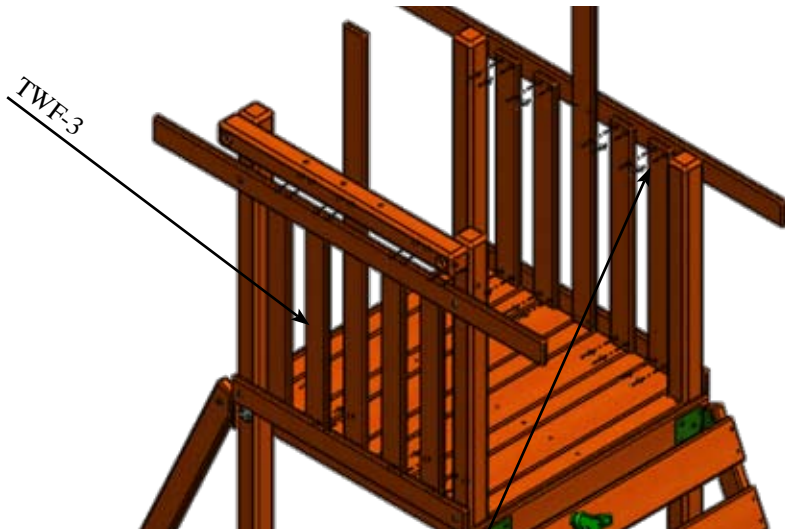

FROM CORNER POST TO FIRST PICKET IS A GAP OF 1 5/8" AND THERE IS A 2 1/2" GAP BETWEEN PICKETS

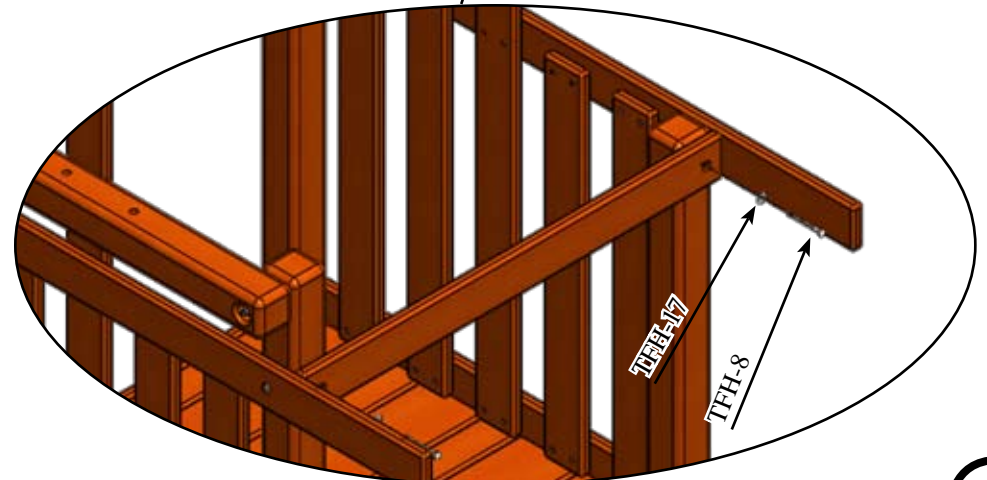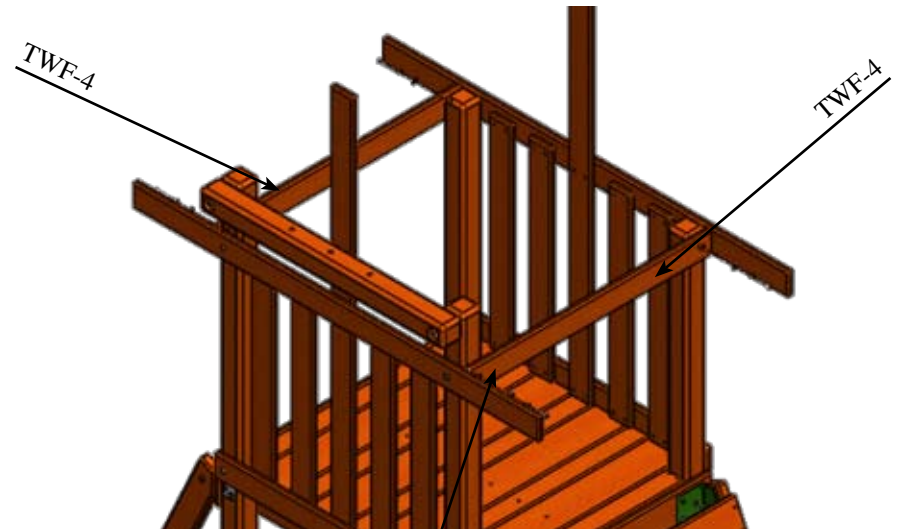

Main Assembly




PARTS NEEDED

TWF-5- Center Tarp Board- (1)
 TWF-4- End Tarp Board- (2)
 TFA-3- Swing Beam Plate0 (1)

TFH-4- 2 1/2" Coated Deck Screw-
 TFH- 20- 3/4" USS Flatwasher-
 TFH-14- 1/2" Split Lockwasher-
 TFH-2- 1/2" Acorn Nut-

HARDWARE NEEDED

(12) TFH-28- 1/2" x 3" Carriage Bolt- (2)
 (2) TFH-19 1/2" USS Flatwasher- (2)
 (2) TFH-6- 1/2" Hex Nut- (2)

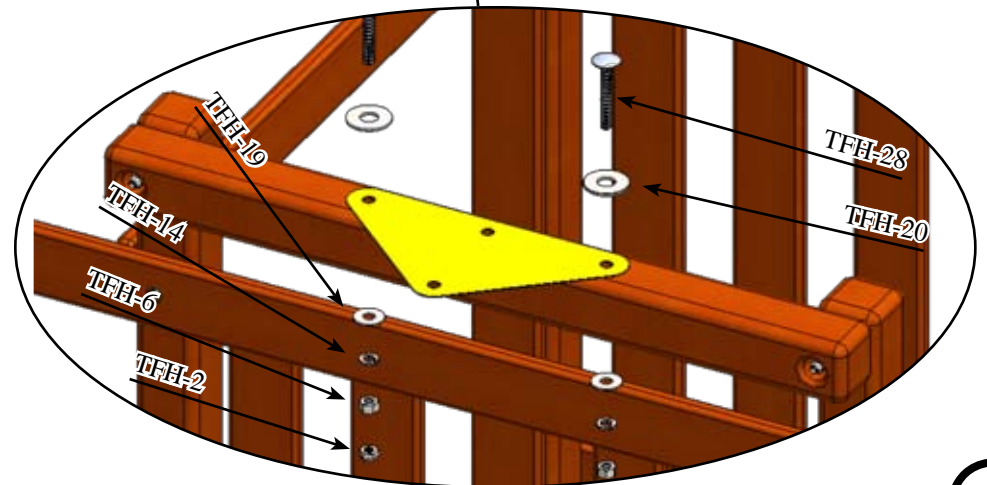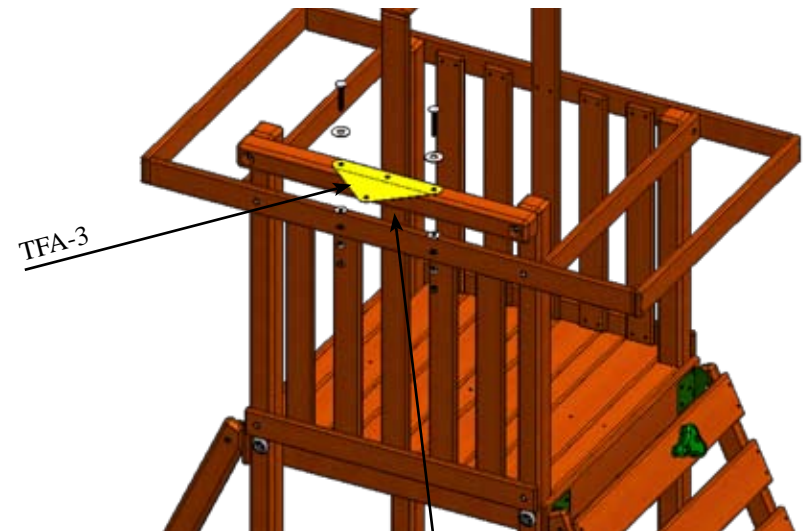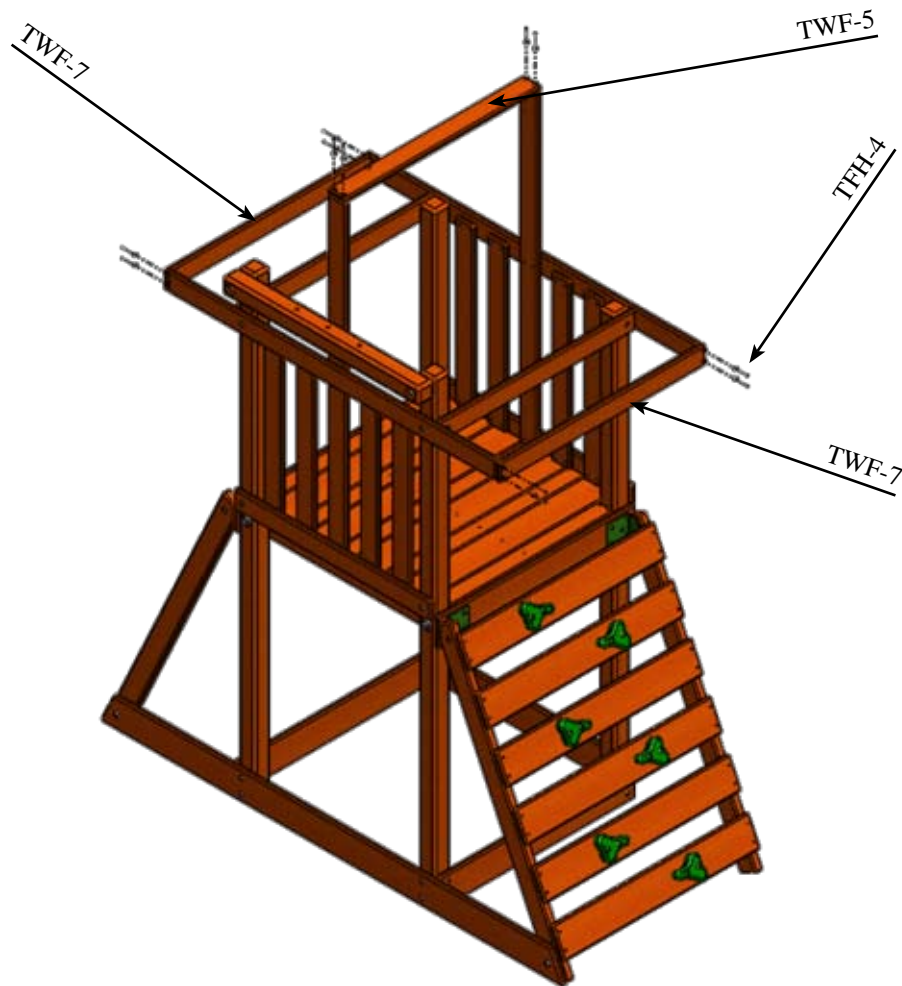

Tarp Install

Figure A.

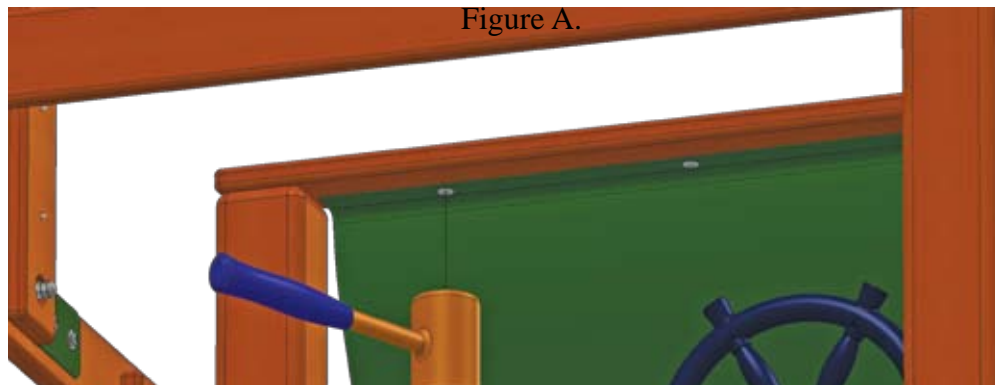


Figure A.- Take one corner of the VINYL TARP and place it flush in the corner. Tap the snap with a blunt object, leaving an indentation of the snap in the wood. Repeat this process until all the snaps have been indented in the wood on both sides of the loft. Figure B. - Using the indentions you just made with the snaps, take the 5/8" PHILLIPS SCREW SNAPS and drill one into each indentation.

Figure B.

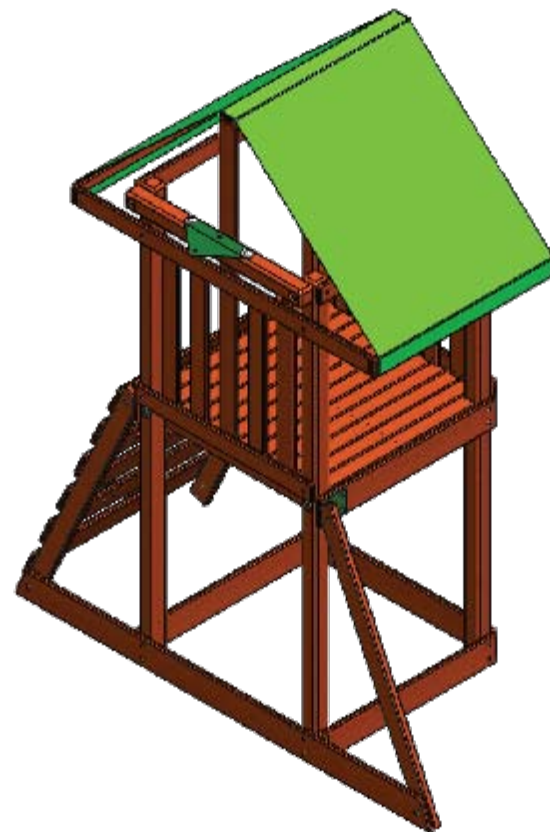
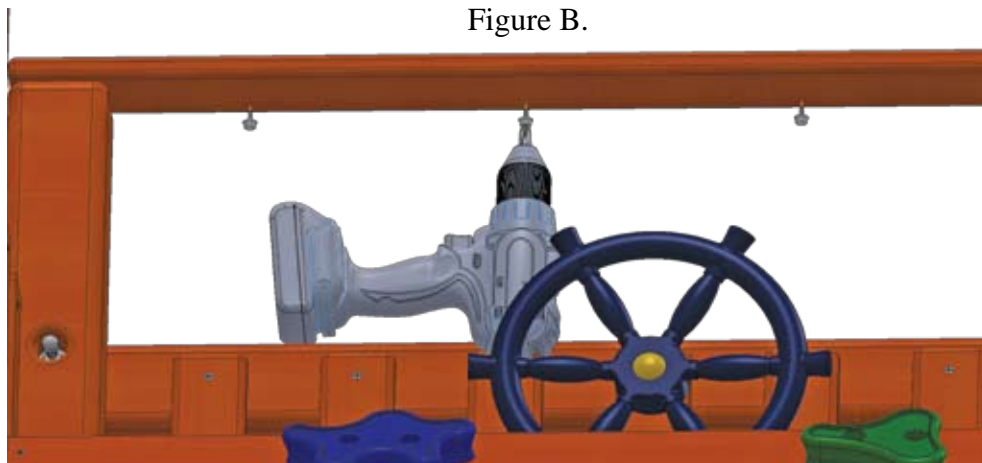


Figure C. - Take the corner of the VINYL TARP and start placing the snaps on the PHILLIPS SCREW SNAPS. Fold the VINYL TARP over the top of the CENTER TARP BOARD. Pull tight and place the snaps on the PHILLIPS SCREW SNAPS.

Swing Beam Assembly



PARTS NEEDED

TWF-25- Swing Beam- (1)
 TWF-17- Small A-Frame Block- (1)
 TWF-18- Sunk A-Frame Block- (1)
 TWF-19- A- Frame Block- (1)
 TFA-1- Bolt Swing Hanger- (6)

TFH-1- 3/8" Acorn Nut-
 TFH-11- 3/8" Nylon Locknut-
 TFH-18- 3/8" USS Flatwasher-
 TFH-22- 3/8" x 9" Hex Bolt-

HARDWARE NEEDED

(7) TFH-5- 3/8" Hex Nut- (1)
 (6) TFH-13- 3/8" Split Lockwasher- (7)
 (7) TFH-30- 3/8" Bolt Cup- (7)
 (1)

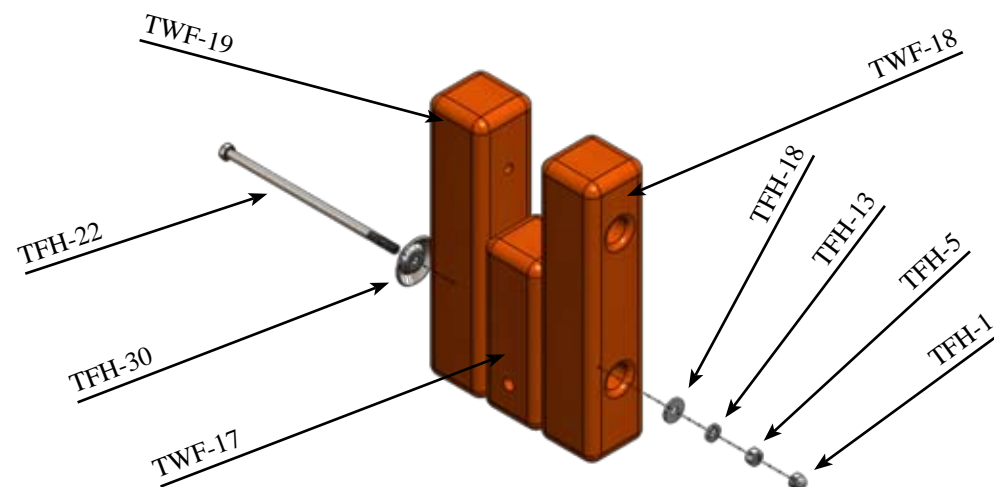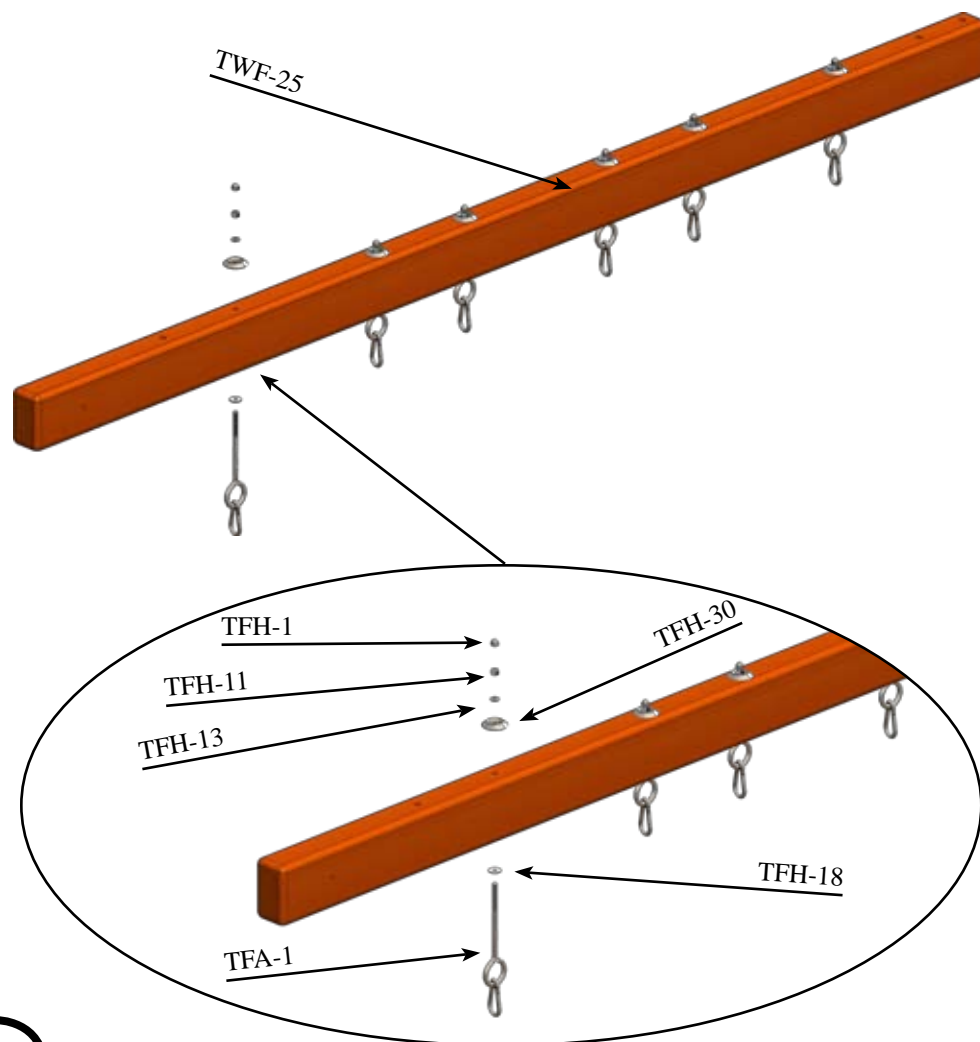

Swing Beam Assembly



PARTS NEEDED

TWF-24- A-Frame Ladder Leg-
Swing Beam Assembly-
TFA-2- 45 Degree SB Bracket-

(2) TFH-2- 1/2" Acorn Nut-
(1) TFH-5- 3/8" Hex Nut-
(1) TFH-14- 1/2" Split Lockwasher-
TFH-19- 1/2" USS Flatwasher-
TFH-30- 3/8" Bolt Cup-
TFH-22- 3/8" x 9" Hex Bolt-

HARDWARE NEEDED

(1) TFH-1- 3/8" Acorn Nut- (1)
(1) TFH-6- 1/2" Hex Nut- (1)
(1) TFH-13- 3/8" Split Lockwasher- (1)
(2) TFH-18- 3/8" USS Flatwasher- (1)
(1) TFH-27- 1/2" x 10" Hex Bolt- (1)

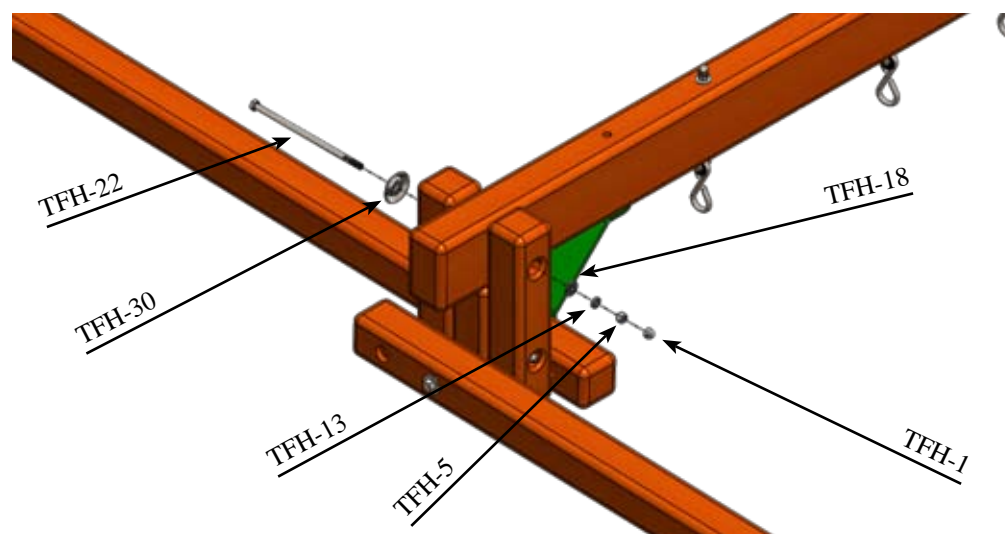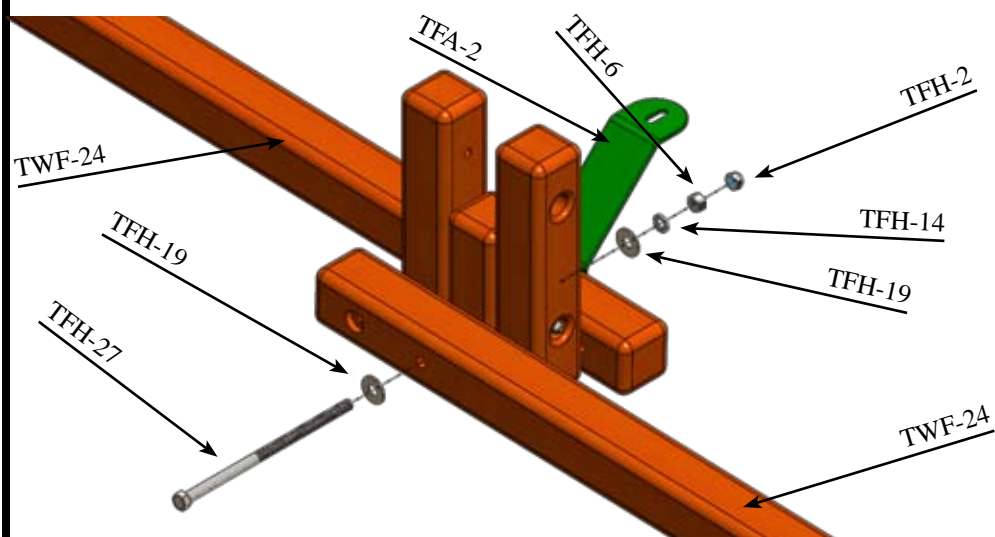



Swing Beam Assembly

PARTS NEEDED

TFH-29- 1/2" x 6" Carriage Bolt-
 TFH-20- 3/4" USS Flatwasher-
 TFH-14- 1/2" Split Lockwasher--
 TFH-2- 1/2" Acorn Nut-

HARDWARE NEEDED

(1)	TFH-23- 1/2" x 8 1/2" Carriage Bolt-	(1)
(3)	TFH-19- 1/2" USS Flatwasher-	(3)
(3)	TFH-6- 1/2" Hex Nut-	(3)
(3)	TFH-31- 1/2" x 6 1/2" Carriage Bolt-	(1)

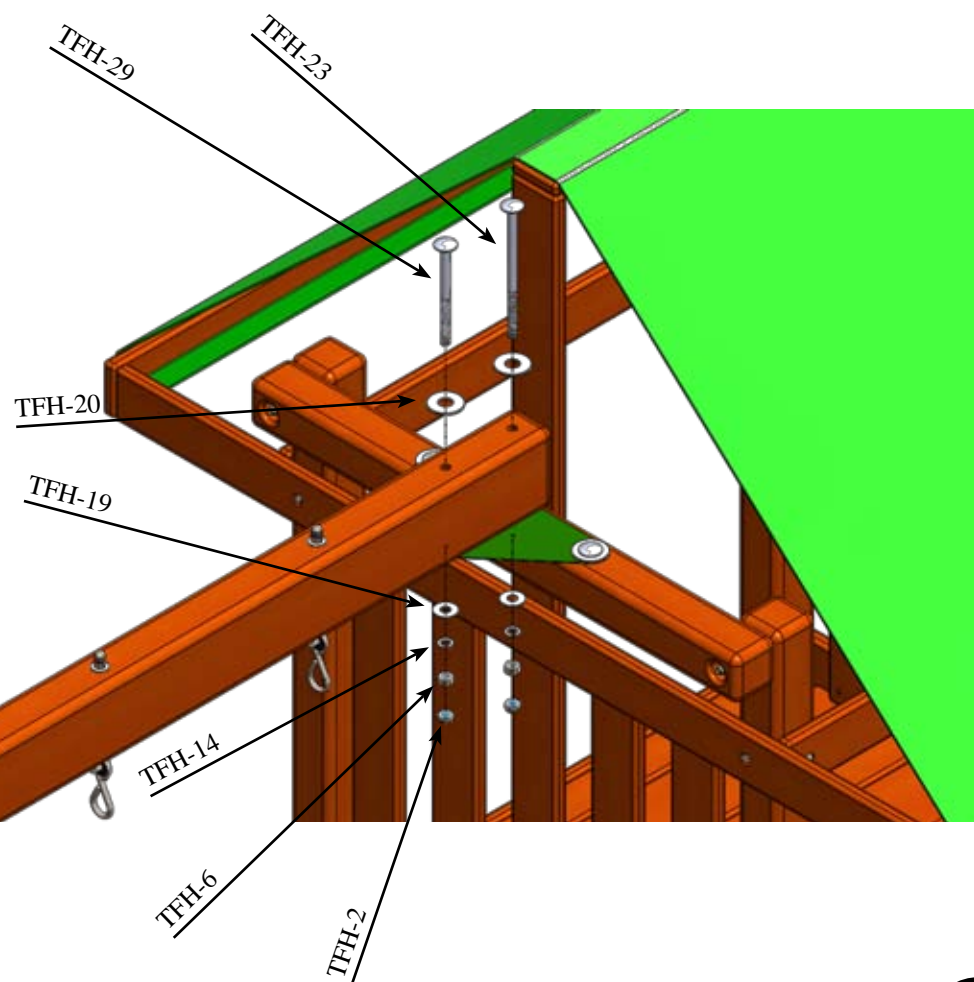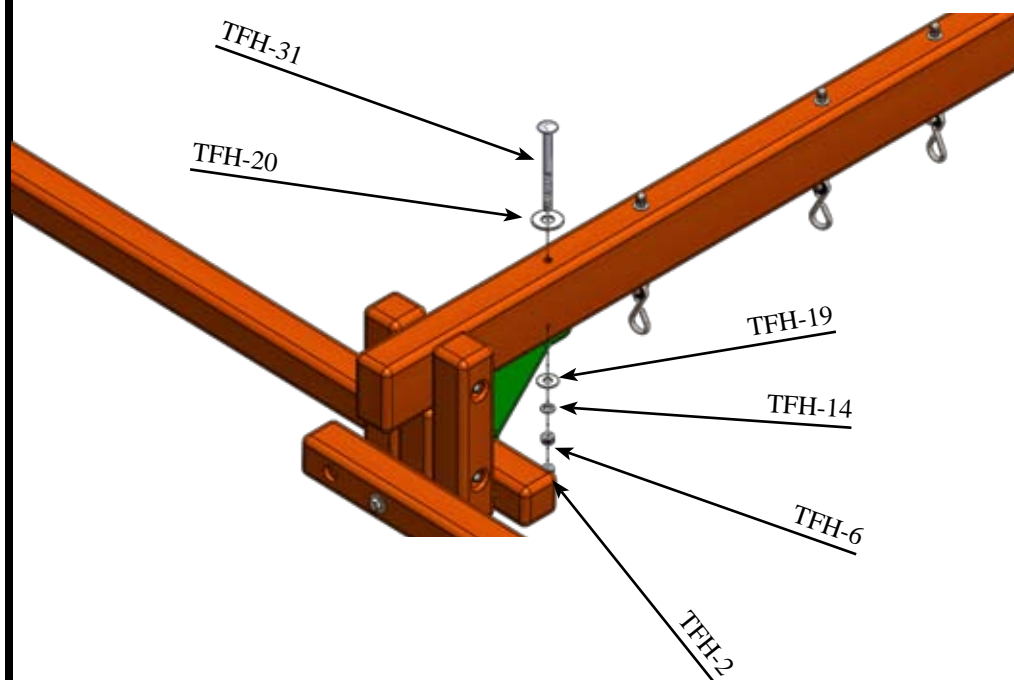

Swing Beam Assembly

PARTS NEEDED

TWF-21- Swing Beam Crossmember-

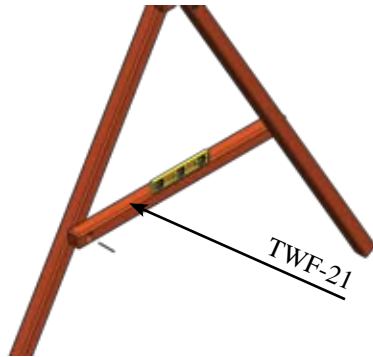


Figure A - Place the top corner of the A-FRAME CROSSMEMBER to the outside of the A-FRAME LEG. Use a clamp or another person to hold one side while leveling. Once level and held down, use a pen/pencil to mark a hole on the A-FRAME LEGS.


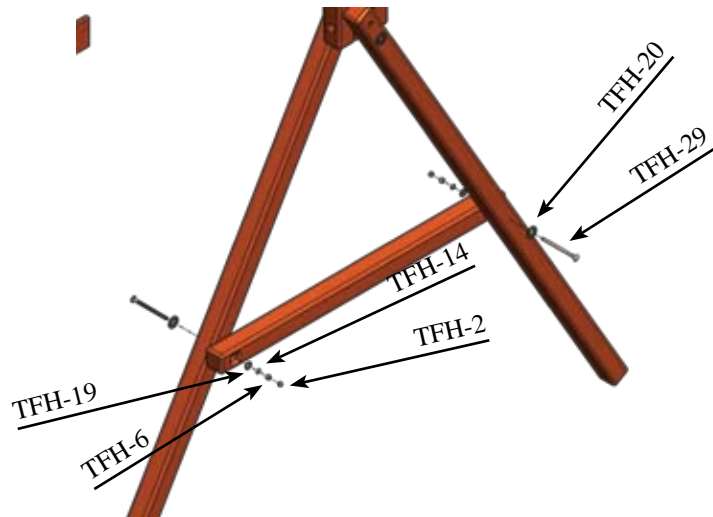



Figure B.. - Drill a 9/16" hole through the A-FRAME LEGS where your marks are. The holes should be slightly bigger than the bolt to allow for easy insert of the Carriage Bolt used in the step.

HARDWARE NEEDED


- | | | | | |
|-----|----------------------------------|-----|--------------------------------|-----|
| (1) | TFH-29- 1/2" x 6" Carriage Bolt- | (2) | TFH-20- 3/4" USS Flatwasher- | (2) |
| | TFH-19- 1/2" USS Flatwasher- | (2) | TFH-14- 1/2" Split Lockwasher- | (2) |
| | TFH-6- 1/2" Hex Nut- | (2) | TFH-2- 1/2" Acorn Nut- | (2) |
| | TFH-10- 3/8" x 5" Hex Lag Screw- | (2) | TFH-18- 3/8" USS Flatwasher- | (2) |

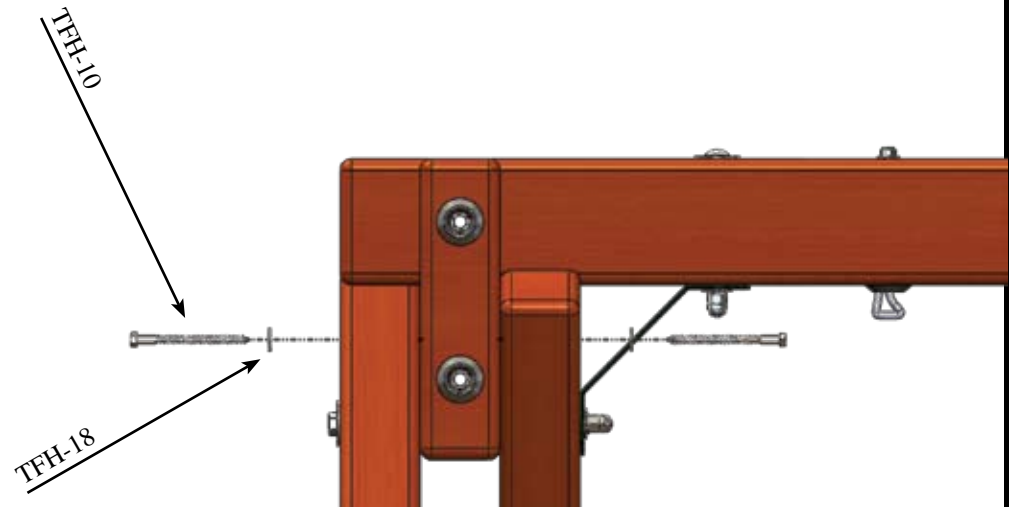

Ship's Wheel Install

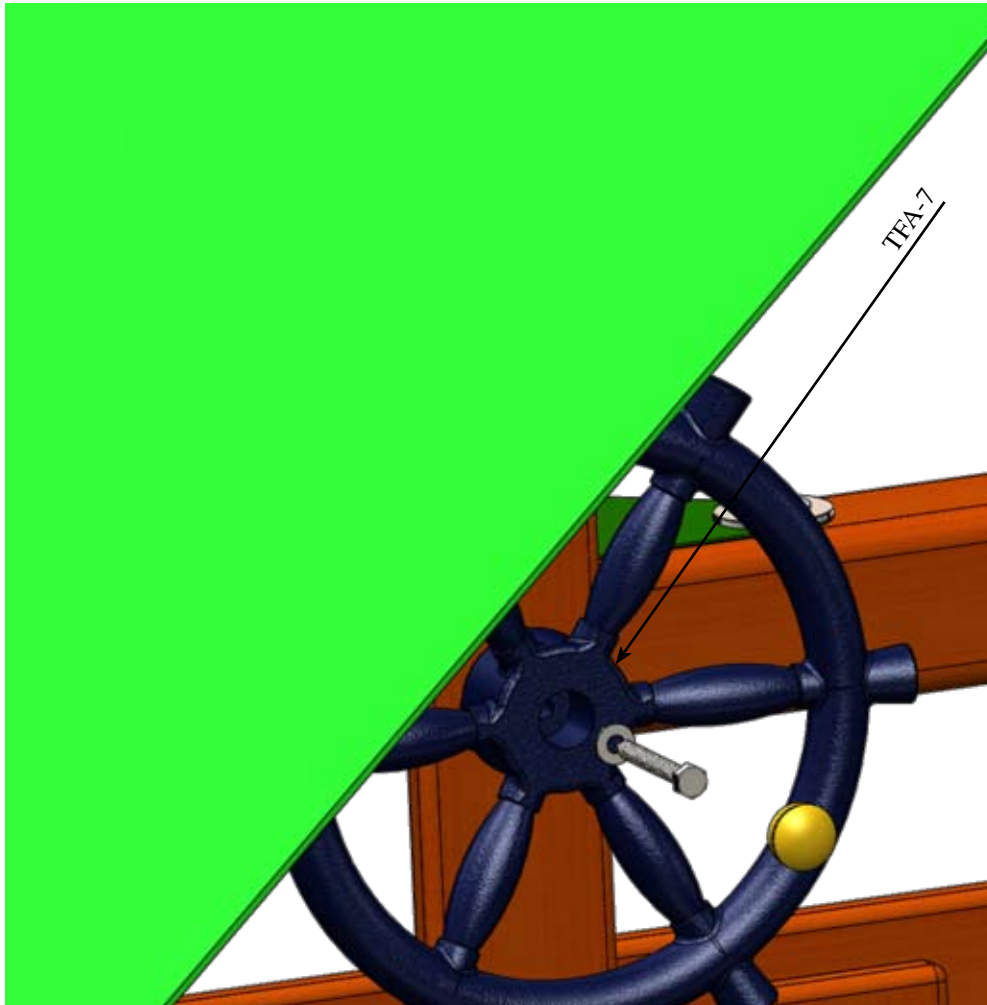

Slide Prep & Install

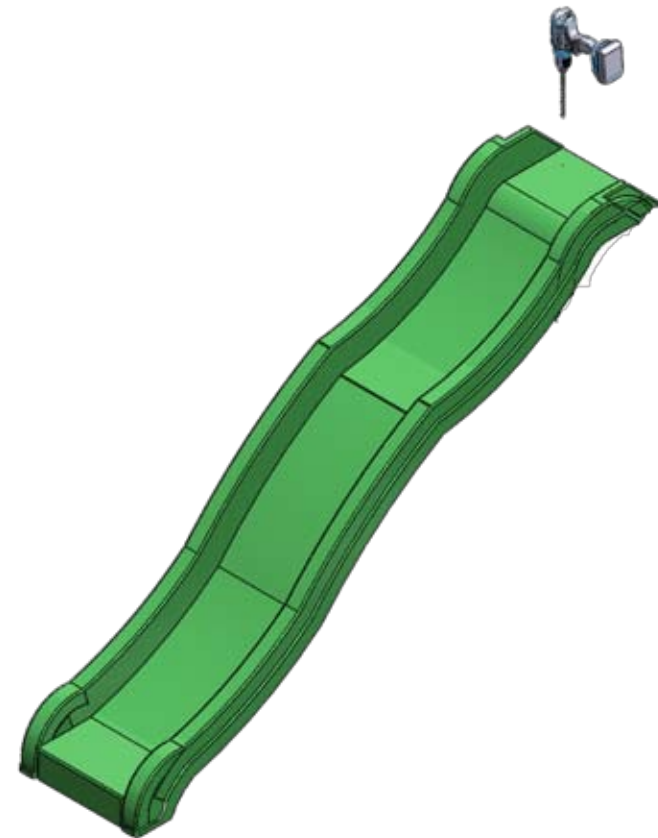

Locate the holes in the slide and use a 1/4" drill bit to make the holes a 1/4".

Slide Prep & Install

PARTS NEEDED

(Shift+Cntrl+Click) to edit



HARDWARE NEEDED

TFH-15- 1/4" 4 Prong T- Nut- (2)

TFH-12 1/4" x 1 1/4" Pan Phillips M/S- (2)



Set the slide into the opening opposite the Rockwall and center. Using a pen or pencil mark the holes on the deck.

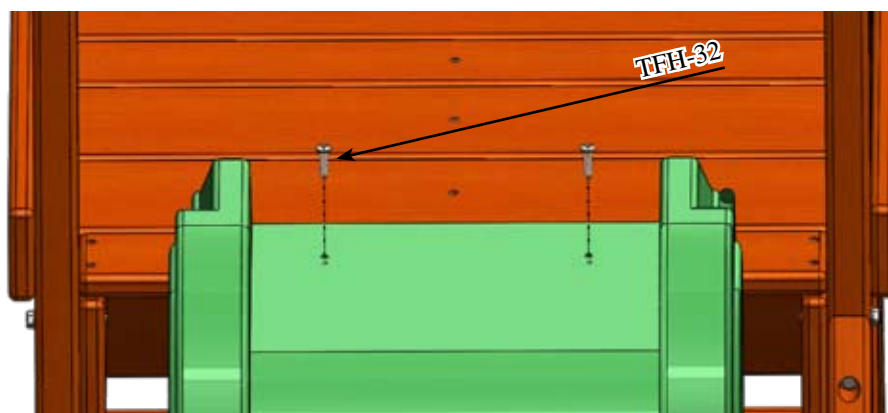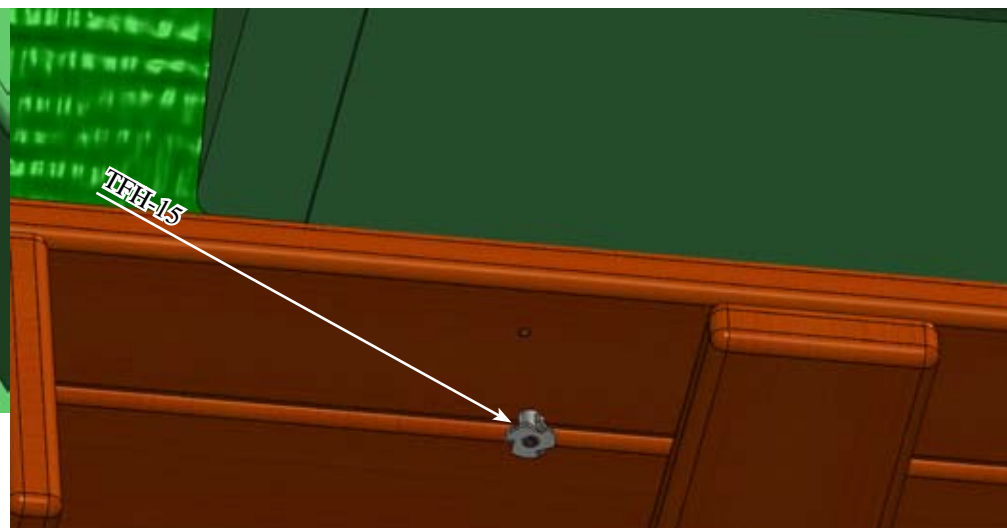

Drill 2, 1/4" holes in the locations you just marked.

Ground Anchor Install

PARTS NEEDED



TFA-5- Spiral Ground Anchor- (6)

HARDWARE NEEDED

TFH-8- 1/4" x 3" Hex Lag Screw- (6)

TFH-17- 1/4" USS Flatwasher- (6)

TFH-18 3/8" USS Flatwasher- (4)

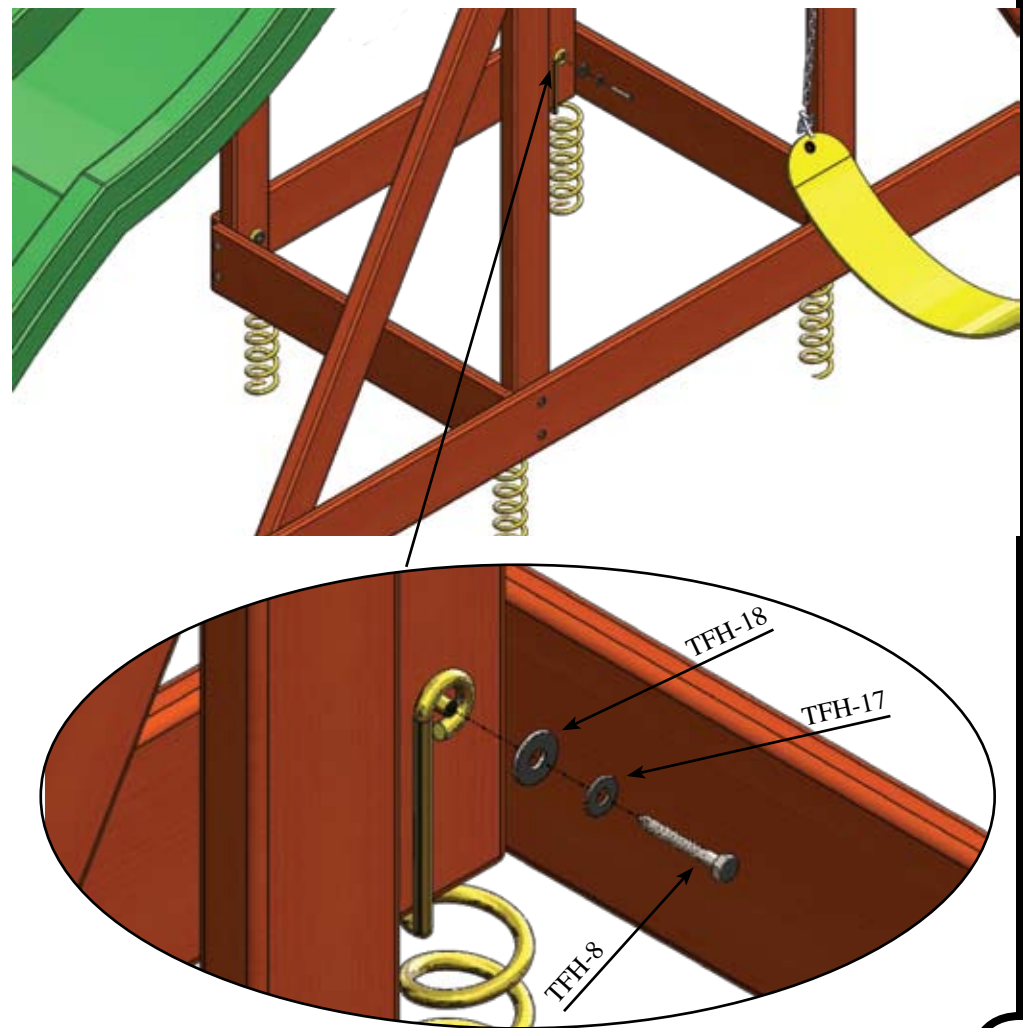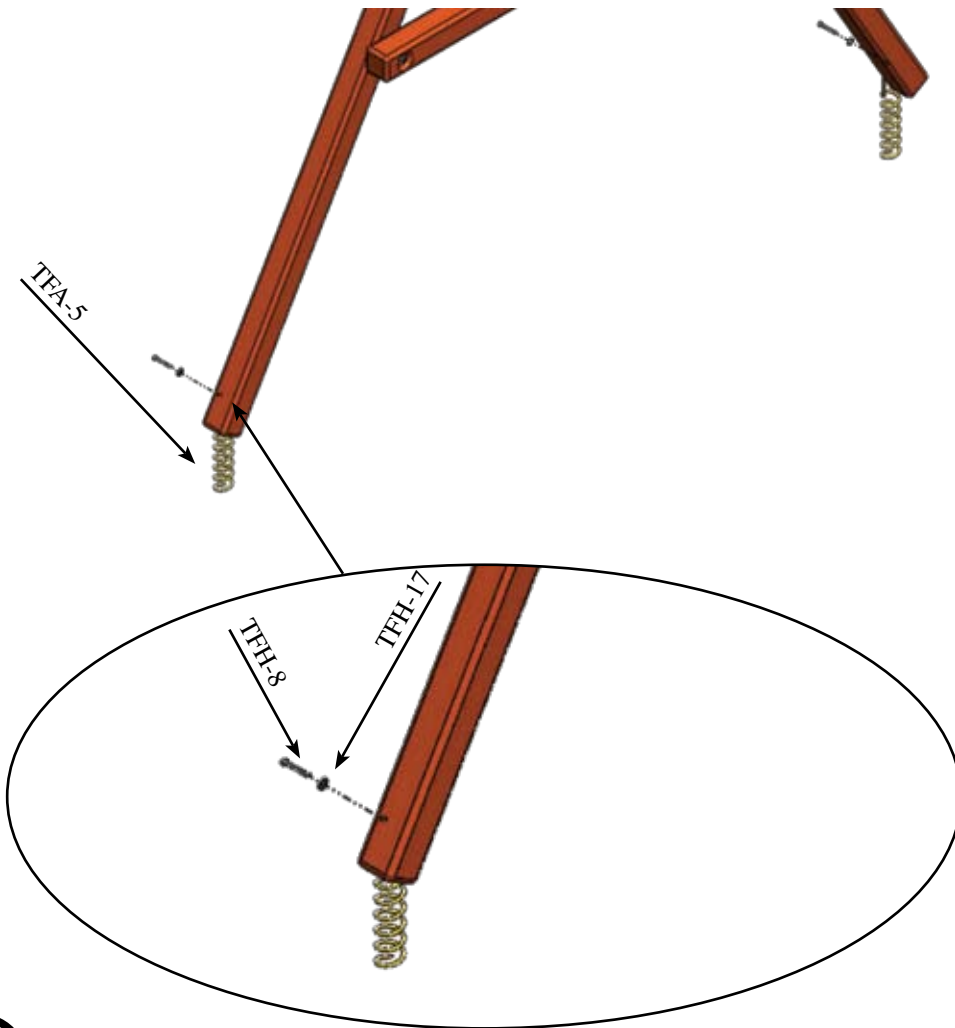

2013 TREE FROGS WARRANTY

Tree Frogs is proud to offer you our Limited 10 Year, 5 Year and 1 Year Warranty. (10/5/1)

Tree Frogs Warranties all Redwood and Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 10 Years from the date of original purchase. A 10-Year limited Warranty also applies to all roto-molded slides, ductile iron swing hangers, all tire swivels, metal climbing rungs and swing beam brackets against failure due to rust or failure in defect in material. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that does not affect structural integrity is not covered by this warranty.

Furthermore, for a period of 5-Years, Tree Frogs limited warranties applies to all components & accessories (except ropes) that are not covered under the 10-Year Warranty to be free from defects in material and workmanship. This includes all blow molded slides. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that does not affect structural integrity is not covered by this warranty.

And for a period of 1-Year Tree Frogs warranties all ropes to be free of defects in material and workmanship. This includes all structural foam molded slides. Fading is not considered a defect and may occur with seasonal and geographical conditions. This warranty is limited to a repair or replacement of the defective part. Product covered under this warranty will be shipped at the customer's expense. Tree Frogs is not responsible for any expense associated with freight, or delivery and installation of the warranted part(s). Tree Frogs reserves the right to inspect all warranty claim parts for which a claim has been made.

This limited warranty applies only to the original retail purchaser and for residential use only. These warranties void when product is transferred or sold by original owner. A copy of the original invoice must be presented to initiate warranty claim. This limited warranty does not cover damage from abuse, acts of God, vandalism, negligence, alterations, normal wear & tear, use other than residential, unauthorized modification, damage due to moving of product or improper installation and or use. Any modification could damage the structural integrity of the play system and voids all warranties.

This warranty is exclusive and expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Tree Frogs does not assume, or authorize any person to assume for us, any other liability in connection with the sale of our products.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

****WARRANTY EXCLUSIONS:** Tower Kit (1 YR WARRANTY)

*****WARRANTY EXCLUSIONS:** Toucan Fort, Toucan Playcenter (Limited 5Yr/5Yr/1Yr WARRANTY)

Register your play system's warranty at WWW.TREEFROGSSWINGSETS.COM.

Tree Frogs reserves the right at any time to change product specifications or substitute similar components.

See your owner's manual for the regular maintenance requirements & maintenance guidelines. Your child's play system & perimeter play zone should be inspected regularly for any wear & safety hazards.